

***SURGICAL TABLE  
OPERATORS MANUAL***




***3501B EZ SLIDE***



# TABLE OF CONTENTS

Title	Page
EQUIPMENT LABELS AND SPECIFICATIONS .....	2
3501B E-Z Slide General Purpose Surgical Table Specifications .....	3
SPECIAL USER ATTENTION .....	4
SECTION I INTRODUCTION .....	10
1-1. General .....	10
1-2. Power Requirements .....	10
1-3. Pendant Control Unit .....	11
1-4. Floor Lock/Brake System .....	11
SECTION II OPERATION .....	12
2-1. Electrical Power .....	12
2-2. AC 120V Operation .....	12
2-3. Battery Operation .....	13
2-4. Automatic Shut-Off .....	13
2-5. Charging the Battery .....	14
2-6. Positioning Functions .....	15
a. Floor Lock/Brake system .....	15
b. Trendelenburg .....	16
c. Lateral Tilt .....	16
d. Back Section .....	17
e. Elevation .....	17
f. Top Slide .....	18
g. Leg Section .....	18
h. Flex Positioning .....	19
i. Kidney Lift .....	19
j. Return To Level .....	20
2-7. Emergency Back-up controls .....	21
2-8. Emergency Brake Release .....	22
2-9. Head Section .....	22
2-10. Leg and Back Section Removal .....	23
SECTION III MAINTENANCE .....	26
3-1. Preventive Maintenance .....	26
3-2. Cleaning Recommendations .....	26
3-3. Service .....	27

## 3501B EZ SLIDE EQUIPMENT LABELS

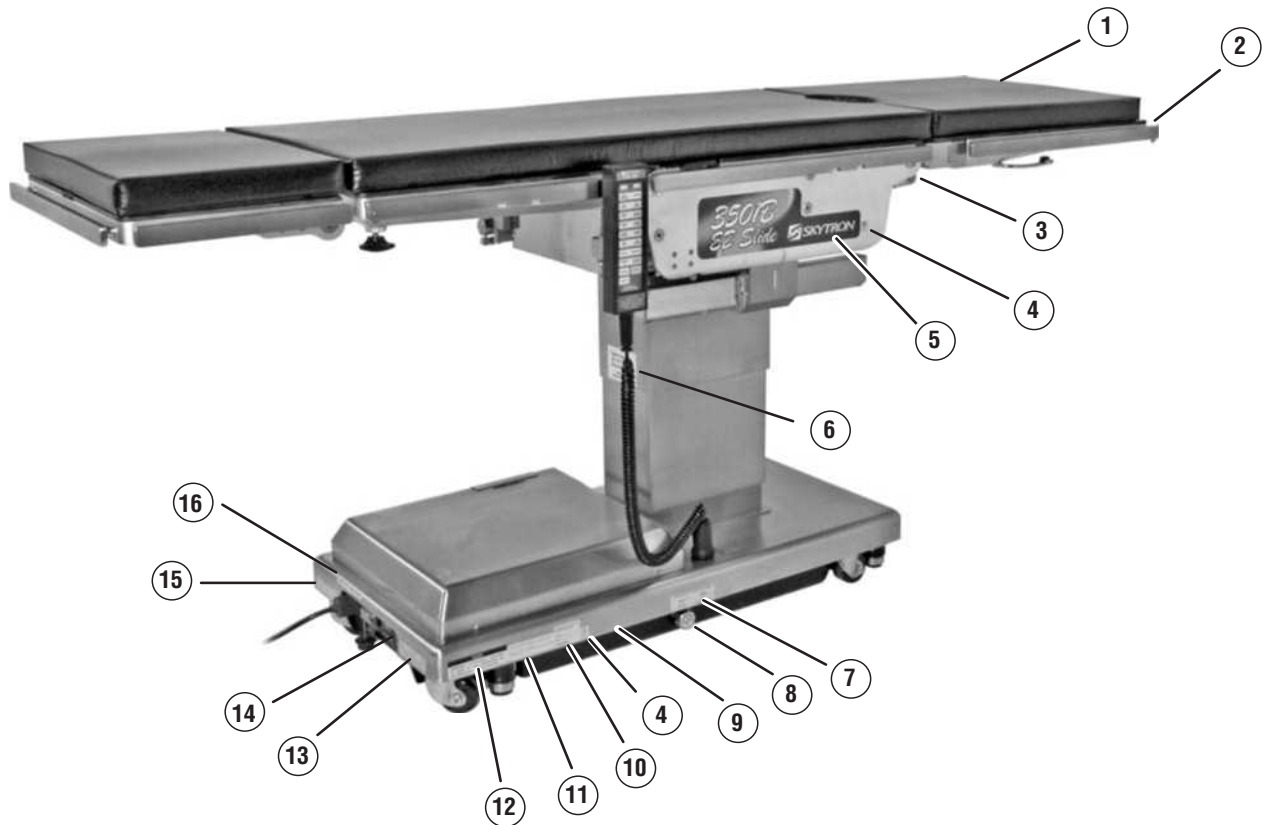

### D6-032-47

**WARNING**  
USE HEAD SECTION AS FOOT EXTENSION ONLY - WHEN REVERSING PATIENT ON TABLE REFER TO OPERATOR MANUAL.

### D6-032-46

**WARNING**  
DO NOT SIT ON END OF LEG SECTION(S) AS LOADS IN EXCESS OF 140 LBS. MAY CAUSE INSTABILITY THAT COULD CAUSE THE TABLE TO BE TIPPED OVER.

**SKYTRON**  
GRAND RAPIDS, MI  
1-800-SKYTRON  
(616) 957-0500  
MODEL NO. \_\_\_\_\_  
SERIAL NO. \_\_\_\_\_  
FUSE \_\_\_\_\_ AMP FAST ACTING  
MANUFACTURED BY MIZUHO IKA CO., LTD., TOKYO, JAPAN

**IPX4**

REFER TO ACCOMPANYING DOCUMENTS

120V ~ 60 Hz 5 AMP

### D6-017-05



### D3-035-60 right D3-035-61 left



### D6-035-38

**Table Capacity:**  
**Lift 700 lbs.**  
**Articulate 600 lbs.**  
See Operators Manual for Limitations.

### D6-065-26



### D6-067-33



### L1-010-00



### D6-011-34

THIS PRODUCT COMPLIES WITH RADIATION PERFORMANCE STANDARD 21 CFR AT THE TIME OF MANUFACTURE  
Manufacturer: \_\_\_\_\_  
Model No. \_\_\_\_\_  
SKYTRON

### D6-011-32

**DANGER - EXPLOSION HAZARD. DO NOT USE IN THE PRESENCE OF FLAMMABLE ANAESTHETICS**  
DANGER - RISQUE D'EXPLOSION. NE PAS EMPLOYER EN PRESENCE D'ANESTHESIQUES INFLAMMABLES

### D6-031-43

**DANGER**  
**POSSIBLE EXPLOSION HAZARD IF USED IN THE PRESENCE OF FLAMMABLE ANESTHETICS.**

### D6-065-22

**CAUTION**  
To reduce the risk of electric shock, do not move cover or back. Refer servicing to qualified service personnel. Refer to accompanying documents.

### D6-034-21



### D6-065-21


Grounding reliability can only be achieved when the equipment is connected to an equivalent receptacle marked "Hospital Only" or "Hospital Grade"

### D6-067-27

TWIST TO LOCK OR RELEASE PLUG



## ***3501B EZ Slide General Purpose Surgical Table Specifications***

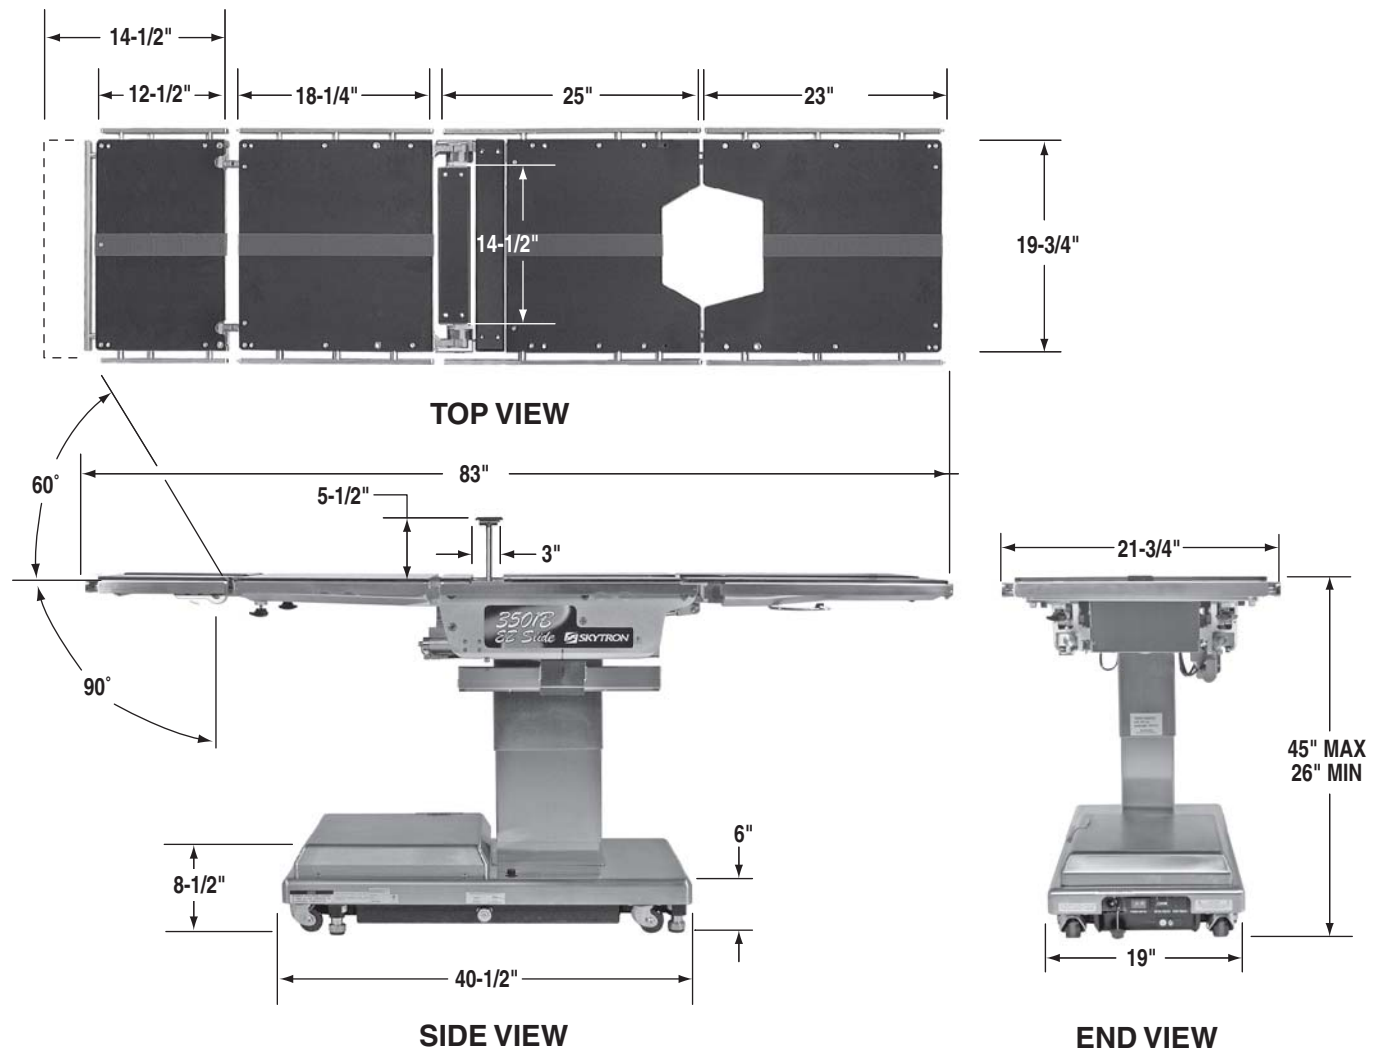

### **ENTECLA CERTIFIED**

TO UL2601-1

CAN/CSA601.1, IEC 60601-2-46

### **Electrical Specifications**

Power requirements	120 VAC, 60Hz, 450 Watts
Current Leakage	Less than 100 micro amps
Power Cord	15 feet w/hospital grade connector (removable)

**Prior to use, all personnel that may operate this table must be instructed in the correct operational procedures. This table is designed for use by trained and qualified personnel for human medical purposes only.**

**Initial use should not begin until after the users have been instructed by the manufacturer's representative.**

**A routine instructional program must be implemented by the facility for proper usage instructions for all personnel that may operate this table.**

**The maximum lifting capacity of the 3501B EZ Slide table is 700 pounds and the maximum articulation weight capacity is 600 pounds. When lifting or articulating large patients, pay close attention to the patient position as well as the positioning guidelines and limitations listed in the operation instructions.**

The extreme positioning capabilities of the 3501B E-Z Slide Table requires special attention for possible interference points when using multiple function positioning. As with the operation of any surgical table, a certain amount of care should be exercised to position the patient safely. Although the thick pads and sheets substantially protect the patient, pinch points, located at the joints of the top section should always be considered. **BE SURE THAT THE ARMS, HANDS AND FINGERS OF THE PATIENT AND THOSE OF THE OPERATING ROOM PERSONNEL ARE CLEAR OF ALL MOVING PARTS BEFORE MOVING THE TABLE.** Proper restraints should always be used for patient safety.

Certain accessories such as the Uro-Drain Tray, Armboards and X-Ray top can be damaged when changing the position of the table top sections. Always look first to see if a desired movement is going to interfere with any accessories in use.

The operator has the ultimate responsibility of preventing damage to the table and surrounding equipment or possible injury to the patient or staff.

The operator must ensure proper positioning is maintained to prevent compromising respiration, nerve pathways or circulation.

In general, common sense will dictate when there is a potential hazard.

***The following precautions should be reviewed by all personnel prior to operating the table.***



### WARNING



Indicates a possibility of personal injury.



### CAUTION



Indicates a possibility of damage to equipment.

### NOTE

Indicates important facts or helpful hints.

Do not use worn or damaged accessories, they represent an injury hazard.

Remove possible obstacles before lowering or tilting the operating table



Do not place objects on the base of the table, a danger of damage exists during positioning.

Use caution when articulating the table top, pinch hazards exist.

**NOTE**

Activating any function button will activate the brake system. Using the TABLE UP function to set the brakes provides a visual assurance that the brakes are locked without altering the table position, except when emergency brake is released.

**WARNING**

Prior to operating the table, observe all table caution labels and review the SPECIAL USER ATTENTION section in the front of this manual.

**WARNING**

Possible explosion hazard exists if table is used in the presence of FLAMMABLE ANESTHETICS.

**NOTE**

An equalization terminal is located under the main power panel. This is provided as an alternate pathway to reduce the risk of static shock hazards. Always follow recommended grounding procedures to ensure patient and staff safety.

**NOTE**

The table will operate correctly on battery power with the power cord connected to a wall outlet or disconnected.

**NOTE**

Battery Operation must be turned OFF at the pendant control. It cannot be turned OFF using the main power switch.

**NOTE**

Turning the Main Power Switch ON will change the table operation to 120 VAC power.

**NOTE**

When the red light starts to blink (indicating low power in battery) the table will operate for approximately 5 continuous minutes, typically long enough to use the table for the rest of the day.

**NOTE**

The charging system operates ONLY when the table is in AC120V operation mode.

**NOTE**

The table can be operated on 120VAC power while the battery is being recharged.

**NOTE**

If the table is stored for a period greater than 6 months, the batteries should be removed and stored in a dry, clean condition at a storage temperature of 68° F (20° C). Batteries should be recharged every 6 months of product storage.

**WARNING**

- DO NOT unlock brakes when a patient is on the table. An uneven patient weight load may cause instability.

- If circumstances demand table brakes to be unlocked, the patient must be centered and evenly distributed on the table top (i.e. supine or prone position) with the table lowered to its lowest height position. The maximum patient weight should not exceed 500 pounds. Table top slide must be centered (indicated by a red LED light on the pendant control) prior to unlocking brakes. Patient's head must be on the head section. Head section must be attached in its normal orientation to the table's back section.

- Prior to unlocking brakes, check for obstructions on the floor that might prevent the table from moving smoothly to new location. Relock the brakes immediately once the final position is reached and before commencing surgery. Table brakes should remain locked at all times if patient weight exceeds 500 pounds.

**NOTE**

With an evenly distributed patient weight load, all table positioning functions will operate smoothly and quietly with a patient weight of up to 600 pounds (700 pounds lift).

**WARNING**

To maximize patient safety, utilize proper restraint methods during extreme Trendelenburg positioning.

**WARNING**

To maximize patient safety, utilize proper restraint methods during extreme lateral tilt positioning.

**NOTE**

If the table top is slid toward the foot end, the back section will not go below horizontal. An audible alarm will sound.

**NOTE**

To prevent damage to the kidney lift, a safety interlock prevents the back section from going more than 45° above horizontal if the kidney lift is not all the way down. An audible alarm will sound.

**NOTE**

If the leg section is positioned more than 45° below horizontal, the top will not slide toward the head end. An audible alarm will sound.

**NOTE**

If the back section is positioned below horizontal, the top will not slide toward the foot end. An audible alarm will sound.

**CAUTION**

The Leg section may hit the table base or the floor if both the leg and elevation systems are placed in their full down position.

**NOTE**

If the top is slid toward the head end the leg section will only go down 45°. An audible alarm will sound.

**NOTE**

When FLEX button is activated and if the top is slid toward the foot end, the back section will not go below horizontal. An audible alarm will sound.

**NOTE**

Return to Level will lower the kidney lift.

**NOTE**

To prevent damage to the kidney lift, a safety interlock prevents the kidney lift from going up if the back section is 45° above horizontal. An audible alarm will sound .

**NOTE**

Elevation and brake system functions are not affected by the return to level function.

**CAUTION**

The safety interlock system is not operational when the emergency back-up control switches are used.

**CAUTION**

The EMERGENCY BRAKE LOCK switch does not activate the brake system timer. The switch must be held until the brakes are completely locked, approximately 10 seconds.

**NOTE**

The emergency back-up control switches will function when the table is operating on 120VAC power, battery power, or turned off.

**WARNING**

- DO NOT unlock brakes when a patient is on the table. An uneven patient weight load may cause instability.

- If circumstances demand table brakes to be unlocked, the patient must be centered and evenly distributed on the table top (i.e. supine or prone position) with the table lowered to its lowest height position. The maximum patient weight should not exceed 500 pounds. Table top slide must be centered (indicated by a green LED light on the pendant control) prior to unlocking brakes. Patient's head must be on the head section. Head section must be attached in its normal orientation to the table's back section.

- Prior to unlocking brakes, check for obstructions on the floor that might prevent the table from moving smoothly to new location. Relock the brakes immediately once the final position is reached and before commencing surgery. Table brakes should remain locked at all times if patient weight exceeds 500 pounds.

**NOTE**

The Emergency Brake Release Valve must be closed and tightened (clock-wise) before activating any function.

•If the Emergency Brake Release Valve has been operated, the UNLOCK button on the pendant control will have to be pressed before brakes will lock again.

**WARNING**

Consult manufacturer's instructions when using high frequency surgical equipment, cardiac defibrillator and cardiac defibrillator monitors.

**WARNING**

When an antistatic pathway is required, the table has to be used on an antistatic floor.

**WARNING**

The antistatic properties of the table are dependent on the use of the original pad set which was furnished with the table or an alternate approved replacement.

**WARNING**

Certain accessories may limit weight capacities. Check with your SKYTRON representative.

**CAUTION**

Consult SKYTRON prior to using accessories produced by other manufacturers.

**NOTE**

Always follow current AORN Journal Guidelines to ensure proper cleaning and disinfection procedure.

**WARNING**

Always follow OSHA blood-borne pathogens standards for protective clothing, including gloves, masks and eye protection when cleaning the surgical table.

**CAUTION**

Thoroughly read and follow the manufacturer's directions for all cleaning fluids. DO NOT use cleaners containing phenolics.

**CAUTION**

When using spray cleaners DO NOT spray fluids directly into electrical receptacles or micro switches.

**CAUTION**

Before replacing pads on the table, make sure the pads and all mating surfaces are completely dry. Moisture trapped between the pads and mating surfaces may cause distortion of table tops.

**WARNING**

SKYTRON assumes no liability for table performance, table damage or injury to patient or staff when accessories not sold or serviced by SKYTRON are used on SKYTRON surgical tables.

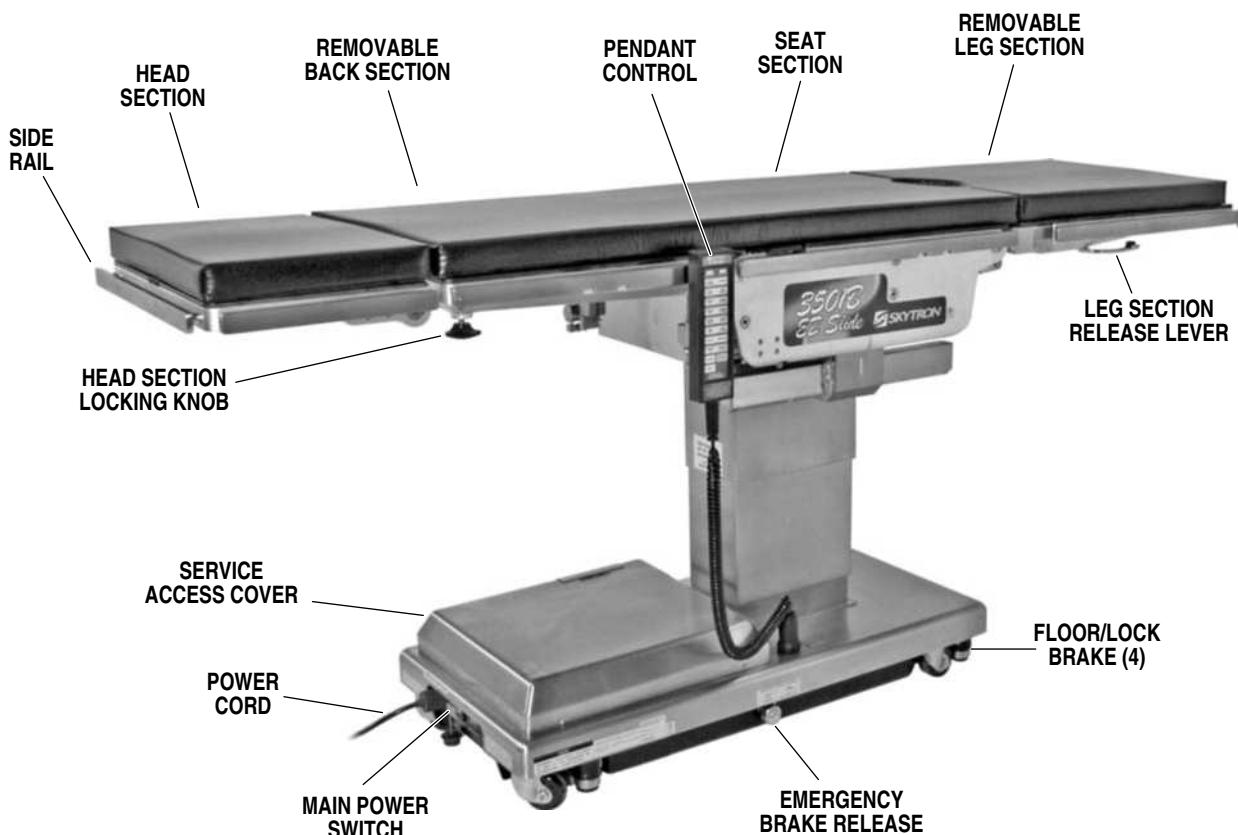


Figure 1-1. 3501B EZ Slide

### 1-1. General

SKYTRON's 3501B EZ Slide Surgical Table is an electro-hydraulically operated, general purpose surgical table. See figure 1-1.

The electro-hydraulic positioning functions operated by the hand-held, push button, pendant control unit are: Trendelenburg, lateral tilt, back section, elevation, leg section, top slide, flex/reflex, kidney lift, return to level and the floor lock/brake system.

Manual controls are provided for head section positioning, emergency brake release and leg section removal.

### 1-2. Power Requirements

The 3501B EZ Slide Surgical Table requires a 120VAC, 60 Hz electrical power supply. The table is equipped with a removable 15 foot long power cord with a three prong, hospital grade plug. The

main power ON/OFF switch is located on the electrical panel on the front edge of the table base. See figure 1-2.

The battery charging indicator and an optional foot control connector are also located on the electrical panel.

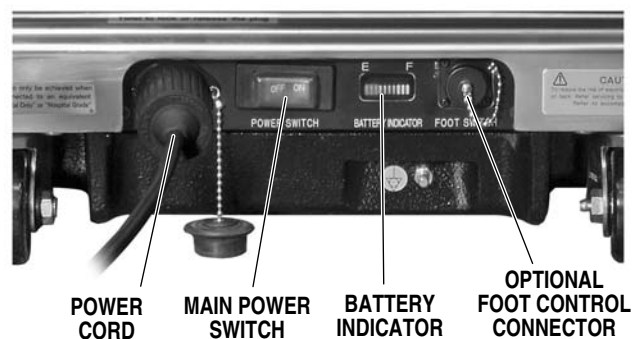


Figure 1-2. Electrical Panel



### 1-3. Pendant Control Unit

The hand-held pendant control unit (figure 1-3) has a non-slip rubber cover which assures a positive grip during use. A spring clip hanger is located on the back of the control for storage. When the Pendant Control is not in use, it should be stored on a convenient side or end rail.

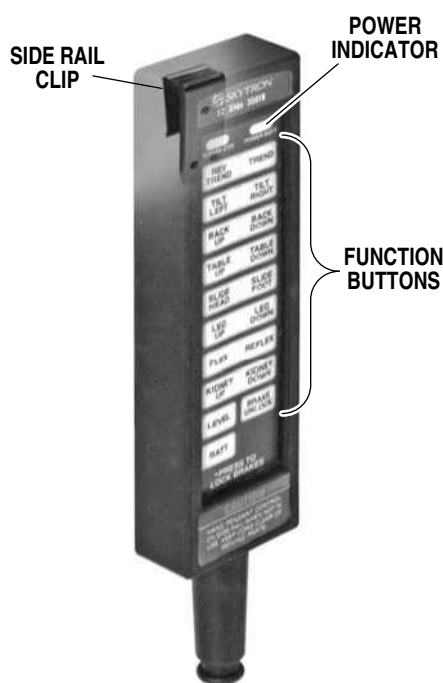


Figure 1-3. Pendant Control Unit

The function push buttons are identified with abbreviated descriptions for all functions. See figure 1-4. When illuminated the Trendelenburg and table up buttons are red, the remaining buttons are all green.

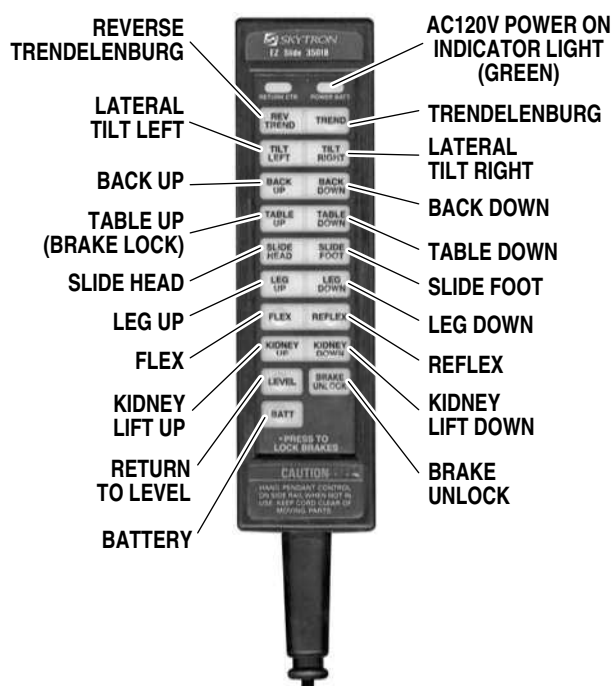


Figure 1-4. Function Buttons

### 1-4. Floor Lock/Brake System

The floor lock/brake system consists of four self-leveling, hydraulic brake cylinders which raise and support the table base off from the casters. Press the TABLE UP button on the pendant control to set the table's brakes. An electronic timer will activate the brake system until the brakes are completely set, approximately 8-10 seconds.

#### NOTE

Activating any function button will activate the brake system. Using the TABLE UP function to set the brakes provides a visual assurance that the brakes are locked without altering the table position, except when emergency brake is released.

## 2-1. Electrical Power

The 3501B table will operate on either 120 VAC or battery power.



### WARNING



Prior to operating the table, observe all table caution labels and review the SPECIAL USER ATTENTION section in the front of this manual.



### WARNING



Possible explosion hazard exists if table is used in the presence of FLAMMABLE ANESTHETICS.

### NOTE

An equalization terminal is located under the main power panel. This is provided as an alternate pathway to reduce the risk of static shock hazards. Always follow recommended grounding procedures to ensure patient and staff safety.

## 2-2. AC 120V Operation

Use the following procedures to operate the table on 120 VAC power.

**a.** Make sure the Power cord is securely attached to the table. To install the power cord, align the cord connector with the base connector, insert the cord and twist clockwise to lock the cord into the connector. See figure 2-1. Plug the cord into a properly grounded, Hospital Grade, 120 VAC outlet. Make sure the power cord is routed to the outlet to prevent it from being in the way of operating personnel.

**b.** Activate the POWER SWITCH located on the electrical panel. The switch will illuminate.

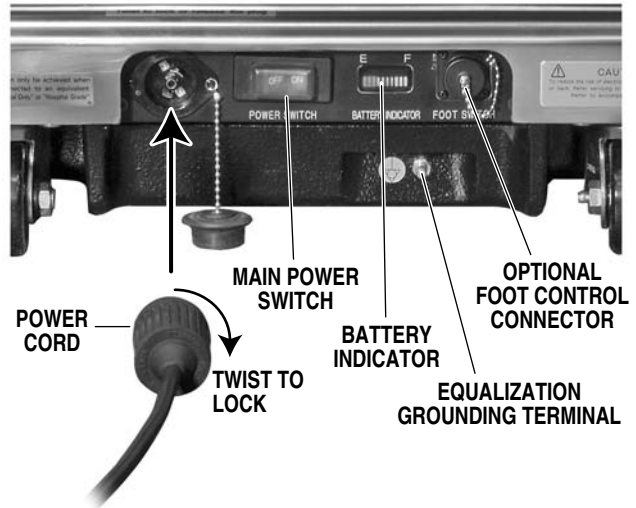


Figure 2-1. Electrical Panel

The pendant control buttons and the green AC 120V, POWER indicator light located in the upper right corner of the pendant control will illuminate. See figure 2-2.



Figure 2-2. Pendant Control

**c.** The table is now ready for 120VAC operation.

### 2-3. Battery Operation

**a.** Make sure the Main Power Switch indicator light, on the electrical panel, is OFF. See figure 2-2. If the indicator light is ON, turn AC120V operation OFF with the main power switch.

#### NOTE

The table will operate correctly on battery power with the power cord connected to a wall outlet or disconnected.

**b.** Press the BATT button on the hand-held pendant control. The pendant control buttons, the red BATTERY indicator light, located in the upper right corner of the pendant control and the Battery Indicator on the electrical panel will illuminate.

**c.** The table is now ready for BATTERY operation.

**d.** To extend the battery charge life, turn the BATTERY power OFF with the pendant control when the table is not going to be used.

#### NOTE

Battery Operation must be turned OFF at the pendant control. It cannot be turned OFF using the main power switch.

### 2-4. Automatic Shut-Off

**a.** To prevent unnecessary discharge of the battery, a timer is built into the battery circuit. This timer will automatically shut the battery power OFF after 1½ hours of table inactivity.

**b.** To turn the table ON again, press the BATT button on the pendant control, the pendant control buttons and the red indicator light will illuminate.

#### NOTE

Turning the Main Power Switch ON will change the table operation to 120 VAC power.

## 2-5. Charging the Battery

Batteries should be charged:

- When the table is placed into initial service
- As indicated by Battery Indicator
- Every week under normal service conditions

**a. Battery Indicator** The Battery Indicator consists of ten lighted bars, 3 red, 4 yellow and 3 green. See figure 2-3. Each bar represents a percentage of the battery charge condition. When all ten bars are illuminated, the batteries are fully charged. The following list shows the battery charge level as indicated by the lighted bars;

3 green	100% -Fully charged
2 green	89%
1 green	78%
4 yellow	67%
3 yellow	56%
2 yellow	45% -Needs Charging (BATT indicator on pendant will flash)
1 yellow	34% -Needs Charging
3 red	23% -Needs Charging (poor performance)
2 red	12% -Needs Charging (intermittent performance)
1 red	1% -Needs Charging (inoperable)

During charging, the bars will light in sequence to the respective charge level, turn off and light in sequence again.

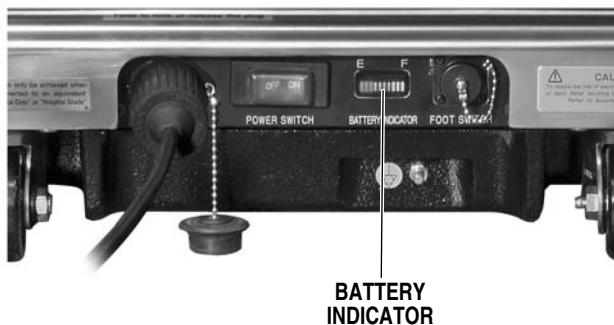


Figure 2-3. Battery Indicator

**b.** If the battery needs to be charged when operating the table on battery power, the red indicator light on the pendant control will begin to blink.

### NOTE

When the red light starts to blink (indicating low power in battery) the table will operate for approximately 5 continuous minutes, typically long enough to use the table for the rest of the day.

### NOTE

The charging system operates **ONLY** when the table is in AC120V operation mode.

**c.** To recharge the battery, make sure the power cord is connected, plugged into a 120VAC wall outlet and the main POWER SWITCH - ON.

### NOTE

The table can be operated on 120VAC power while the battery is being recharged.


**d.** A full battery charge will last approximately 2 weeks under normal operating conditions. However, it is recommended to charge the batteries at the end of each week to establish a normal routine protocol. Lead acid batteries last longer if they are not permitted to fully discharge. The table features (2) 12 volt, sealed, lead acid batteries which require no manual maintenance. Lead acid gel batteries, under a proper charging program, feature an approximate normal life of 4 years.

### NOTE

If the table is stored for a period greater than 6 months, the batteries should be removed and stored in a dry, clean condition at a storage temperature of 68° F (20° C). Batteries should be recharged every 6 months of product storage.


## 2-6. Positioning Functions

The hand-held pendant control (figure 2-4) activates the following table functions:

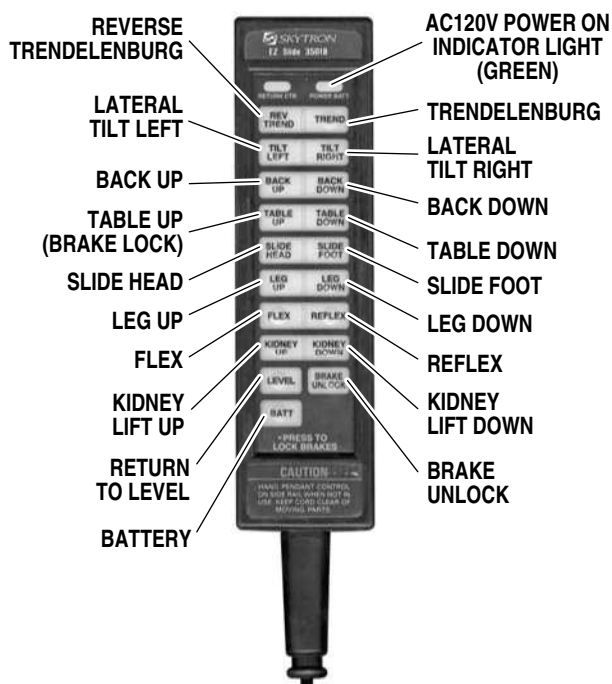

**Figure 2-4. Pendant Control Function Buttons**

**a. Floor Lock/Brake System.** To activate the brakes without affecting table positioning, press the TABLE UP button. See figure 2-5. The elevation cylinder will not function until the brakes are completely extended.

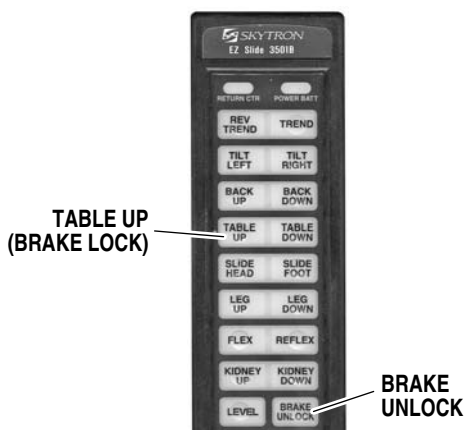

**Figure 2-5. Brake System Activation**

Press the BRAKE UNLOCK button on the pendant control to release the four self-leveling brake feet in order to move the table. See figure 2-5. The brake delay circuit automatically retracts the brake system. It takes approximately 7-8 seconds to totally release the system.



### WARNING



- DO NOT unlock brakes when a patient is on the table. An uneven patient weight load may cause instability.

- If circumstances demand table brakes to be unlocked, the patient must be centered and evenly distributed on the table top (i.e. supine or prone position) with the table lowered to its lowest height position. The maximum patient weight should not exceed 500 pounds. Table top slide must be centered (indicated by a red LED light on the pendant control) prior to unlocking brakes. Patient's head must be on the head section. Head section must be attached in its normal orientation to the table's back section.

- Prior to unlocking brakes, check for obstructions on the floor that might prevent the table from moving smoothly to new location. Relock the brakes immediately once the final position is reached and before commencing surgery. Brake should remain locked at all times if patient weight exceeds 500 pounds.

### NOTE

With an evenly distributed patient weight load, all table positioning functions will operate smoothly and quietly with a patient weight of up to 600 pounds (700 pounds lift).

**b. Trendelenburg.** To place the table in a Trendelenburg (head down) position, press the TREND button (figure 2-6). Trendelenburg positioning of up to 25° may be obtained. To place the table in a reverse Trendelenburg (head up) position, press the REV TREND button. Reverse Trendelenburg positioning of up to 20° may be obtained.



### WARNING



To maximize patient safety, utilize proper restraint methods during extreme Trendelenburg positioning.

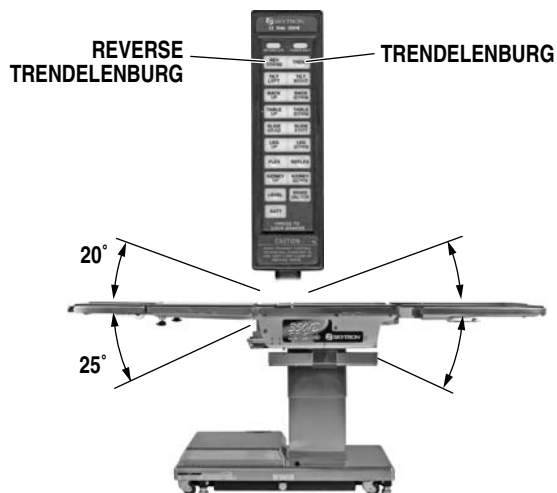


Figure 2-6. Trendelenburg Positioning

**c. Lateral Tilt.** To achieve lateral tilt right (as viewed from the head end of the table), press the TILT RIGHT button (figure 2-7). Tilt of up to 20° may be obtained. To achieve lateral tilt left, press the TILT LEFT button. Tilt of up to 20° may be obtained.



### WARNING



To maximize patient safety, utilize proper restraint methods during extreme lateral tilt positioning.

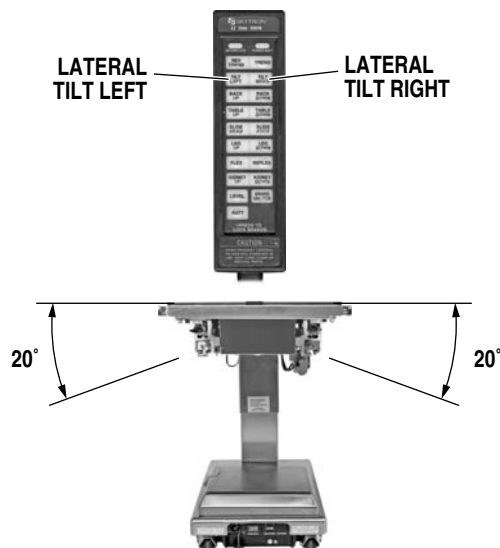


Figure 2-7. Lateral Tilt Positioning


**d. Back Section.** To raise the back section, press the BACK UP button (figure 2-8). The back section will raise up to 90° above horizontal. To lower the back section, press the BACK DOWN button. The back section will go down to 40° below horizontal.

#### NOTE

If the table top is slid toward the foot end, the back section will not go below horizontal. An audible alarm will sound.


#### NOTE

To prevent damage to the kidney lift, a safety interlock prevents the back section from going more than 45° above horizontal if the kidney lift is not all the way down. An audible alarm will sound.

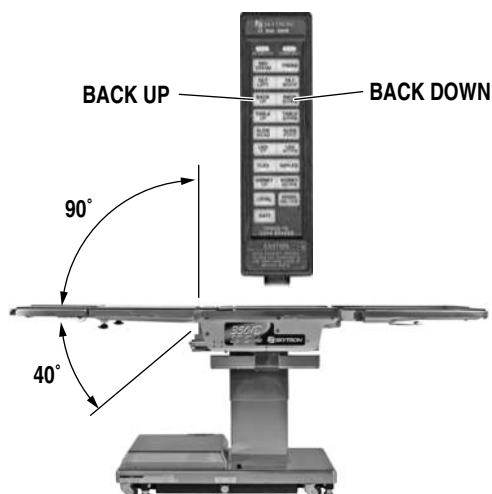

**Figure 2-8. Back Section Positioning**

**e. Elevation.** To raise table top, press the TABLE UP button (figure 2-9). The table will lift a patient weight of 700 pounds up to a maximum height of 45". To lower the table top, press the TABLE DOWN button. The table top will go down to a minimum height of 26" (minus pad).

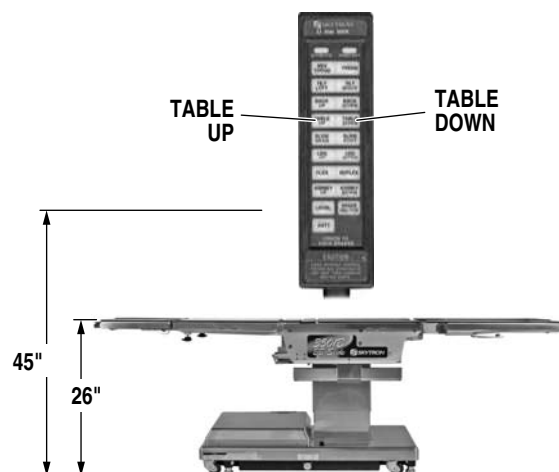

**Figure 2-9. Elevation Function**



**f. Top Slide.** To move the table top toward the head end, press the SLIDE HEAD button. From center position, the top will slide up to 7-1/2". See figure 2-10.

**NOTE**

If the leg section is positioned more than 45° below horizontal, the top will not slide toward the head end. An audible alarm will sound.

To move the table top toward the foot end, press the SLIDE FOOT button. From center position, the top will slide up to 13-1/2". Slide function will stop and SLIDE/CTR Indicator will illuminate when table is centered.

**NOTE**

If the back section is positioned below horizontal, the top will not slide toward the foot end. An audible alarm will sound.

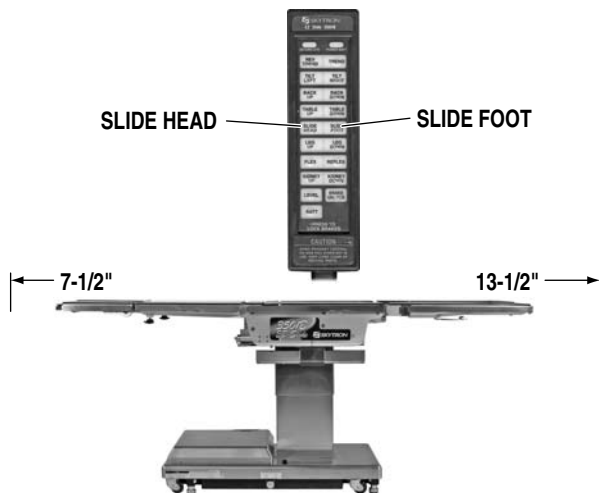


Figure 2-10. Top Slide

**g. Leg Section.** To lower the leg section, press the LEG DOWN button (figure 2-11). The leg section will go down to 98° below horizontal. To raise the leg section, press the LEG UP button. The leg section will go up to level.



**CAUTION**



The Leg section may hit the table base or the floor if both the leg and elevation systems are placed in their full down position.

**NOTE**

If the top is slid toward the head end, the leg section will only go down 45°. An audible alarm will sound.

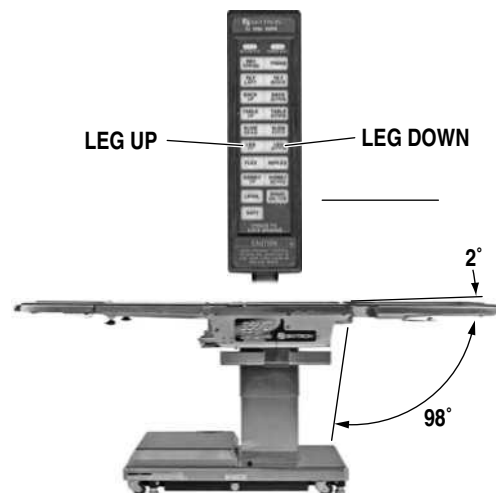



Figure 2-11. Leg Section Positioning



**h. Flex Positioning.** To place the table top in a flex position from horizontal, press the FLEX button (figure 2-12). To return the table top to a horizontal position or into a reflex position, press the REFLEX button.

#### NOTE

When FLEX button is activated and if the top is slid toward the foot end, the back section will not go below horizontal. An audible alarm will sound.

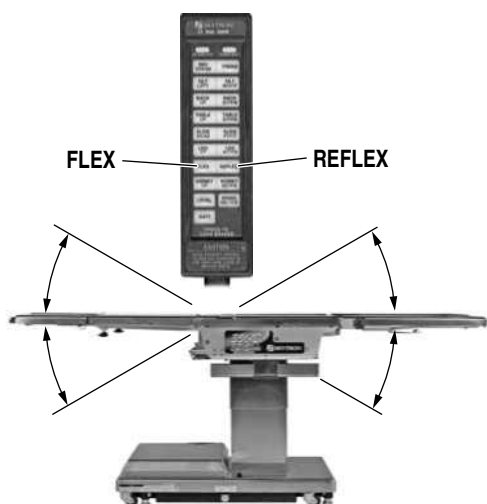

**Figure 2-12. Flex/Reflex Positioning**


**i. Kidney Lift.** To raise the built-in kidney lift, press the KIDNEY UP button (figure 2-13). Up to 5-1/2" of lift can be achieved. Press the KIDNEY DOWN button to lower the kidney lift.

#### NOTE

Return to Level will lower the kidney lift.

#### NOTE

To prevent damage to the kidney lift, a safety interlock prevents the kidney lift from going up if the back section is 45° above horizontal. An audible alarm will sound.

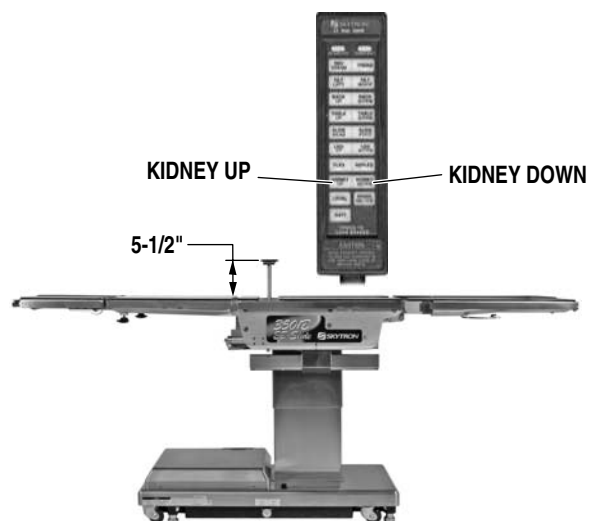


**Figure 2-13. Kidney Lift Positioning**

**j. Return To Level.** To return the table top to a level position, press the LEVEL button (figure 2-14).

#### NOTE


Elevation and brake system functions are not affected by the return to level function.

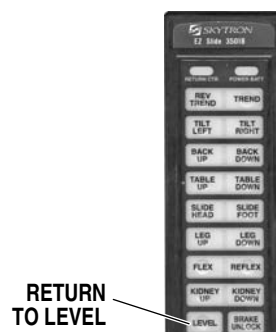

**Figure 2-14. Return To Level**

## 2-7. Emergency Back-up Controls

a. The emergency back-up control switches are located under the access door on the service access cover in the table base. See figure 2-15.

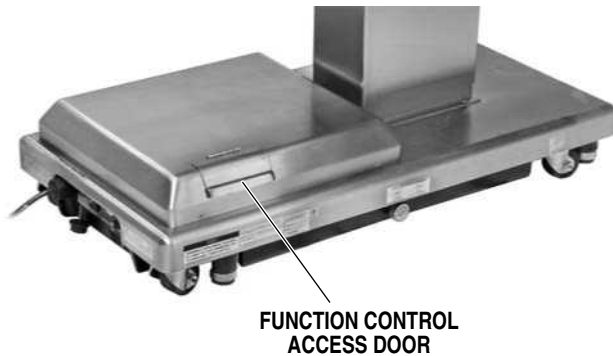

**Figure 2-15. Emergency Controls Location**


b. In the event of either a power failure or a problem with the hand-held pendant control, the table can be operated using the emergency back-up switches. Simply push the desired emergency switch in the appropriate direction to operate the table functions. See figure 2-16.



**CAUTION**



The safety interlock system is not operational when the emergency back-up control switches are used.

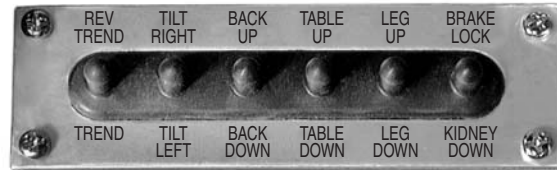

**Figure 2-16. Emergency Back-Up Controls**



**CAUTION**



The EMERGENCY BRAKE LOCK switch does not activate the brake system timer. The switch must be held until the brakes are completely locked, approximately 10 seconds.

### NOTE

The emergency back-up control switches will function when the table is operating on 120VAC power, battery power, or turned off.

c. Switches are provided for Trendelenburg, lateral tilt, back section, elevation, leg section, kidney down and brake lock. These switches are spring-loaded so they return to the neutral or center position when released.

## 2-8. Emergency Brake Release.

In case of a power failure or an electrical problem within the table, the emergency brake release system can be used to move the table. The control knob for this function is located on the side of the table base and is identified by an **EMERGENCY BRAKE RELEASE** label. Turn the knob counter-clockwise to release the brakes. See figure 2-17.



### WARNING



- DO NOT unlock brakes when a patient is on the table. An uneven patient weight load may cause instability.

- If circumstances demand table brakes to be unlocked, the patient must be centered and evenly distributed on the table top (i.e. supine or prone position) with the table lowered to its lowest height position. The maximum patient weight should not exceed 500 pounds. Table top slide must be centered (indicated by a green LED light on the pendant control) prior to unlocking brakes. Patient's head must be on the head section. Head section must be attached in its normal orientation to the table's back section.

- Prior to unlocking brakes, check for obstructions on the floor that might prevent the table from moving smoothly to new location. Relock the brakes immediately once the final position is reached and before commencing surgery. Table brakes should remain locked at all times if patient weight exceeds 500 pounds.



**Figure 2-17. Emergency Brake Release**

### NOTE

The Emergency Brake Release Valve must be closed and tightened (clock-wise) before activating any function.

- If the Emergency Brake Release Valve has been operated, the UNLOCK button on the pendant control will have to be pressed before brakes will lock again.

## 2-9. Head Section

a. A quick release positioning bar located under and to the front of the head section (figure 2-18) is used to raise or lower the head section. Pull the release bar toward the head end to allow the section to pivot up or down. Positioning from 60° above horizontal to 90° below horizontal in 15° increments is available. Release the bar to lock the head section in position.




**Figure 2-18. Head Section Adjustment**

b. By loosening two locking knobs beneath the back section, an additional 2" of longitudinal adjustment can be achieved. If desired, the head section may be removed by loosening the locking knobs and pulling it straight out of the back section.

3501B EZ Slide Table has the capability of attaching the head section to the leg section for use as a foot extension ONLY. Do Not reverse the patient on the table without first consulting with SKYTRON.

Two locking knobs are located on the inside of the leg section for securing the head section. See figure 2-19.

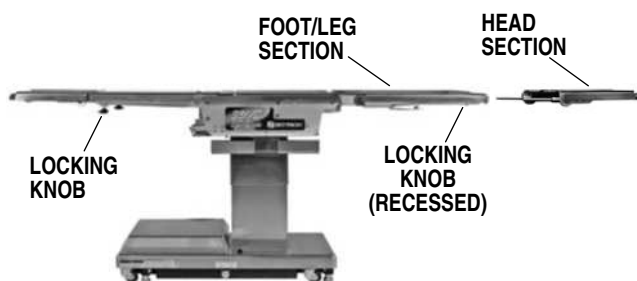


**Figure 2-19. Repositioning Head Section  
(for use as a Foot Extension)**

## 2-10. Leg Section Removal.

### NOTE

The leg section with the x-ray top + pad attached weighs 31 lbs. It is recommended that the x-ray top and pad be removed before detaching the leg section.

a. To remove the leg section, position the table top height to elbow height, and simultaneously depress both release levers and pull the leg section out. See figure 2-20. Press the LEG-DOWN button on the pendant control to position the leg section attachment pins down and out of the way.

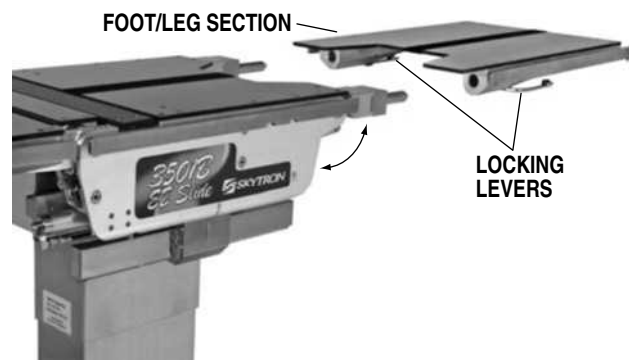

**Figure 2-20. Leg Section Release Levers**

b. To Install Leg Section, press and hold the LEG-UP button until the leg section attachment pins completely stop before reinstalling the leg section to the table. Pull out on the leg section after installation to make sure the release levers are completely locked.

**WARNING**

Consult manufacturer's instructions when using high frequency surgical equipment, cardiac defibrillator and cardiac defibrillator monitors.

**WARNING**

When an antistatic pathway is required, the table has to be used on an antistatic floor.

**WARNING**

The antistatic properties of the table are dependent on the use of the original pad set which was furnished with the table or an alternate approved replacement.

**2-11. Positioning**

The use of certain optional accessories available from SKYTRON further extend the positioning capabilities of the 3501B E-Z Slide Table. Refer to the following "Positioning Guidelines" or contact your SKYTRON representative for further details.

**WARNING**

Certain accessories may limit weight capacities. Check with your SKYTRON representative.

**CAUTION**

Consult SKYTRON prior to using accessories produced by other manufacturers.

### 3-1. Preventive Maintenance

The following preventive maintenance checks and services are recommended to ensure the serviceability and proper operation of your SKYTRON Surgical Table, and should only be performed by qualified SKYTRON trained personnel.

a. During normal cleaning, a general visual examination should be made checking for leaks, loose bolts or parts, and cracked, chipped, or missing paint. Any necessary repairs should be made.

b. Semi-annually the following checks and services should be performed:

1. Check all hydraulic fittings, mini-valves and slave cylinders for proper operation and any signs of leaks.
2. Check the hydraulic speed controls and adjust if necessary.
3. Pressure check (with a gauge) the pressure relief valve.
4. Check all mechanical adjustments and adjust as necessary.
5. Check hydraulic fluid level.
6. Lubricate the slider assembly.
7. Check function of foot leg release levers, lubricate as necessary.

### 3-2. Cleaning Recommendations

#### NOTE

Always follow current AORN Journal Guidelines to ensure proper cleaning and disinfection procedure.

The following procedures should be followed when cleaning the surgical table between cases.

Place table top in level position prior to starting cleaning procedure.



#### WARNING



Always follow OSHA blood-borne pathogens standards for protective clothing, including gloves, masks and eye protection when cleaning the surgical table.

Remove major contaminants from the table with disposable materials following appropriate biohazard waste disposal procedures.

Remove all table pads and place them on a flat surface for cleaning.



#### CAUTION



Thoroughly read and follow the manufacturer's directions for all cleaning fluids. DO NOT use cleaners containing phenolics.

Apply cleaning fluid liberally to top and sides of each pad and wipe with a clean lint-free cloth.

Using a clean, damp, lint-free cloth, wipe the pads to remove the cleaning fluid.

Using a clean, dry, lint-free cloth, wipe the pads to remove all moisture.

Repeat the steps to clean the bottom of the each pad.



### CAUTION



When using spray cleaners DO NOT spray fluids directly into electrical receptacles or micro switches.

Repeat cleaning procedure for all table surfaces including the top, sides, elevation column, base and all accessories.



### CAUTION



Before replacing pads on the table, make sure the pads and all mating surfaces are completely dry. Moisture trapped between the pads and mating surfaces may cause distortion of table tops.



### WARNING



SKYTRON assumes no liability for table performance, table damage or injury to patient or staff when accessories not sold or serviced by SKYTRON are used on SKYTRON surgical tables.

When the cleaning procedure is complete, replace all pads and accessories as applicable.

Remove pendant control from table side rail and apply cleaning solution to the pendant control and cord.

Use a clean cloth dampened with water to remove cleaning solution.

Use another clean damp cloth to remove any remaining residue.

Install pendant control on side rail for storage when cleaning procedure is complete.

## 3-3. Service

Table maintenance can be performed by trained maintenance personnel using SKYTRON authorized replacement parts and service techniques. Service instructions and parts are available from SKYTRON.

Preventive Maintenance contracts are available through your local SKYTRON representative.

To obtain service instructions, replacement parts, factory service or preventive maintenance contracts, contact the SKYTRON representative listed below.

Or contact:

**SKYTRON**

**5000 36th Street S.E.**

**Grand Rapids, MI 49512**

**1-800-SKYTRON (1-800-759-8766)**

**Fax. 1-616-957-5053**



5000 36th Street S.E., Grand Rapids, MI 49512  
1-800-SKYTRON or 1-616-957-0500 • FAX 1-616-957-5053





***SURGICAL TABLE  
PARTS CATALOG***



***3501B EZ SLIDE***



---

# INTRODUCTION

---

This manual contains the exploded views and replacement parts lists for the serviceable components of the SKYTRON Model 3501B EZ SLIDE Surgical Table.

Each serviceable part in these exploded views is identified by a reference number. Use this number to locate necessary part information in the parts list adjacent to the exploded view.

Always use the complete SKYTRON part number and description when ordering replacement parts.

**Always use the complete table serial number (S.N.) when ordering replacement parts.**

**Special Tools and Maintenance Items listed on page 40.**


Abbreviations	
As Required .....	A/R
Optional .....	opt
Serial Number .....	S.N.
Not Shown .....	NS

Although current at the time of publication, SKYTRON's policy of continuous development makes this manual subject to change without notice.







1. Head Section Assembly ..... Page 8.

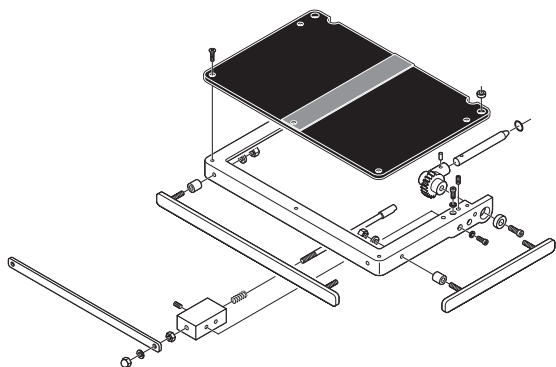


2. Back Section Assembly ..... Page 10.

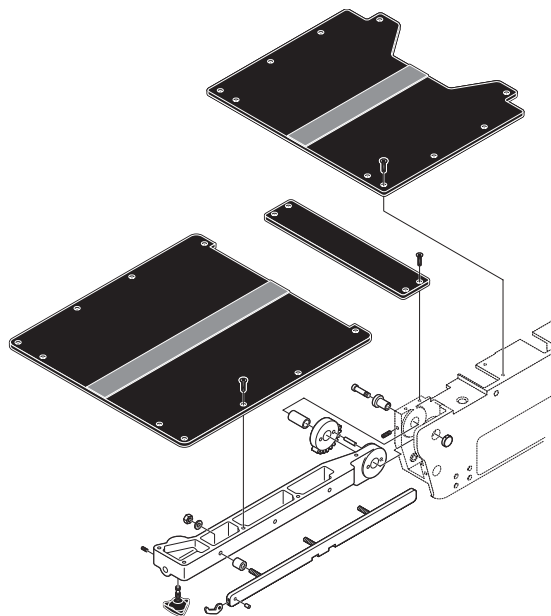


3. Leg Section Assembly ..... Page 12.

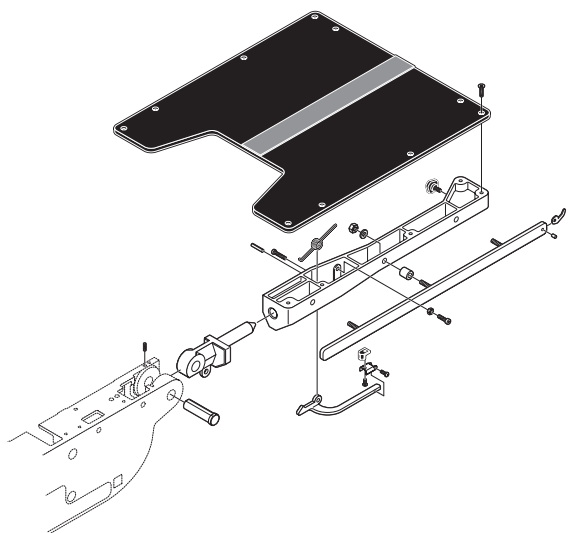


4. Side Frame Assemblies ..... Page 14.

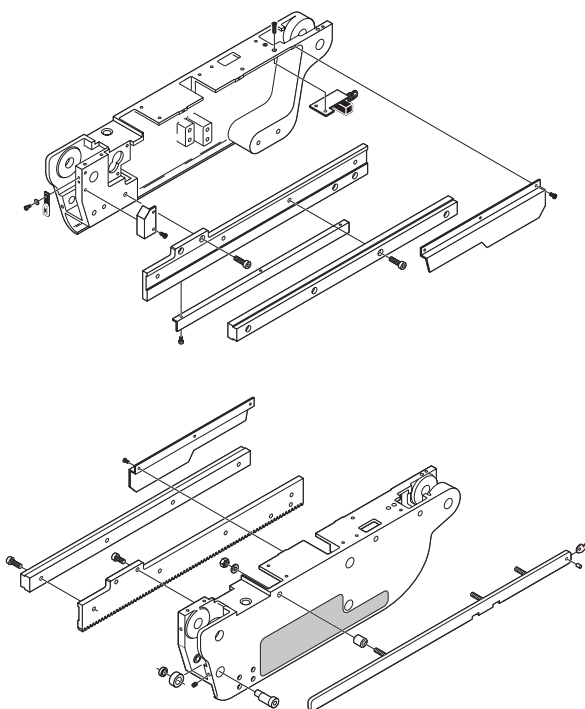


5. Back & Leg Section Cylinder Assemblies ..... Page 16.

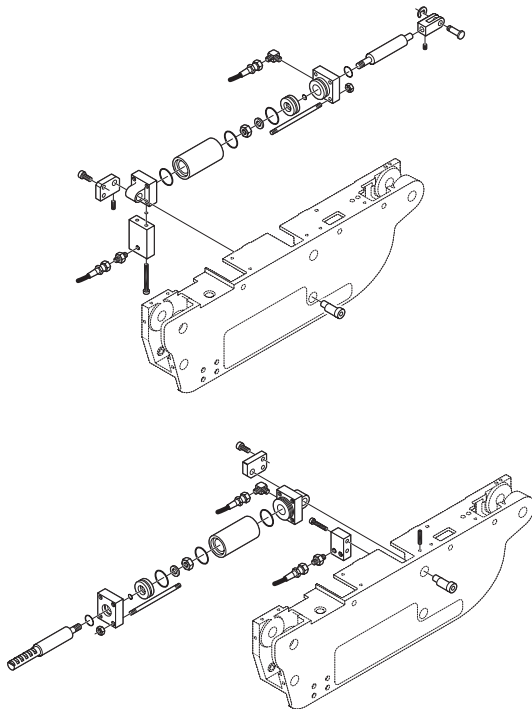


6. Kidney Lift Assembly ..... Page 18.

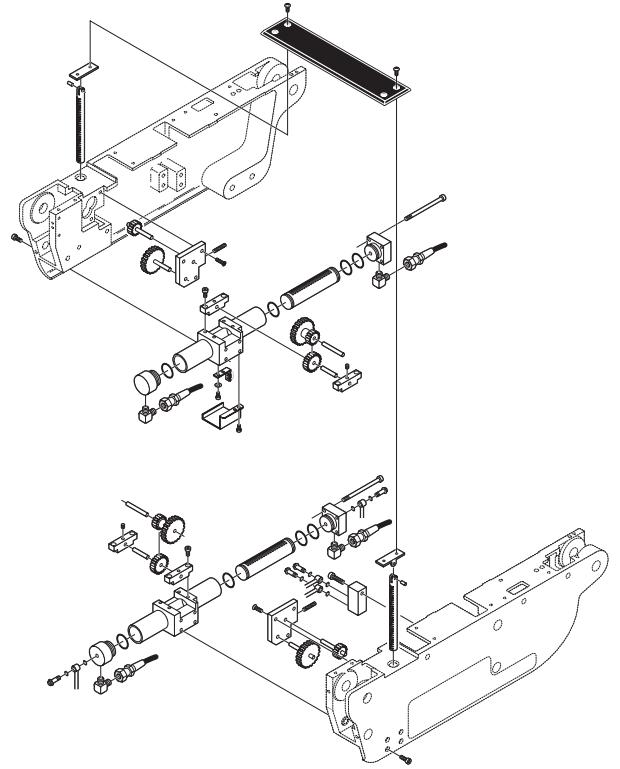


7. Slide Assembly ..... Page 20.

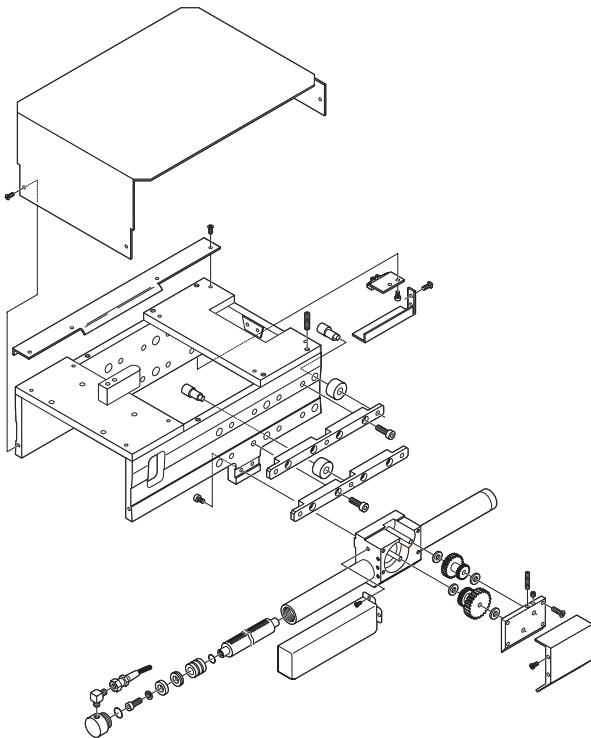


8. Lateral Tilt Assembly ..... Page 22.

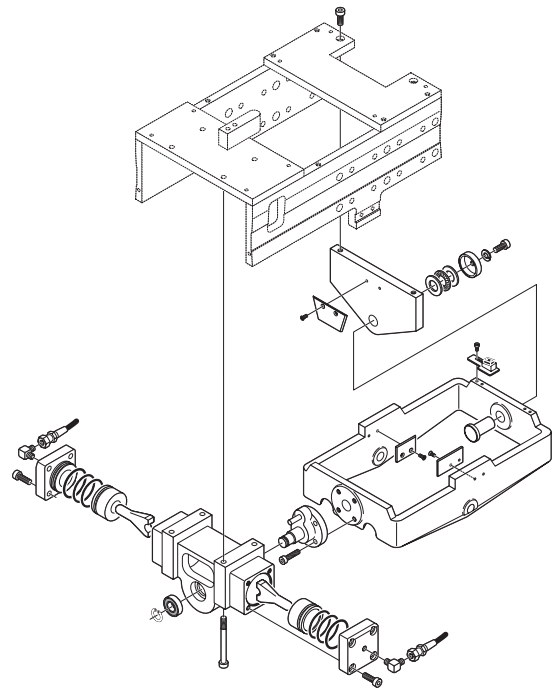


9. Trendelenburg Assembly ..... Page 24.

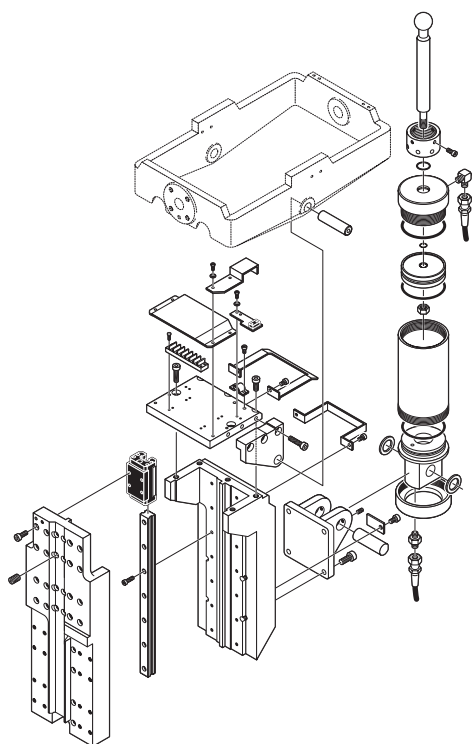


10. Elevation Assembly ..... Page 28.

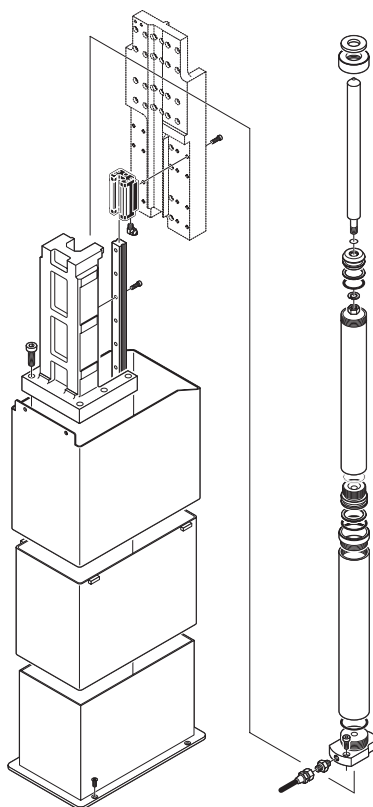

11. Hydraulic Components ..... Page 30.

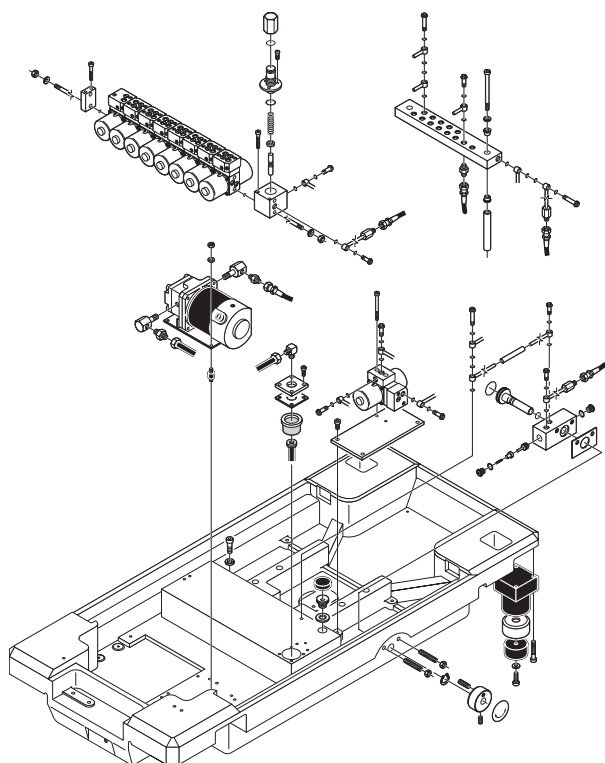


12. Electro Mini-Valve Assembly ..... Page 34.

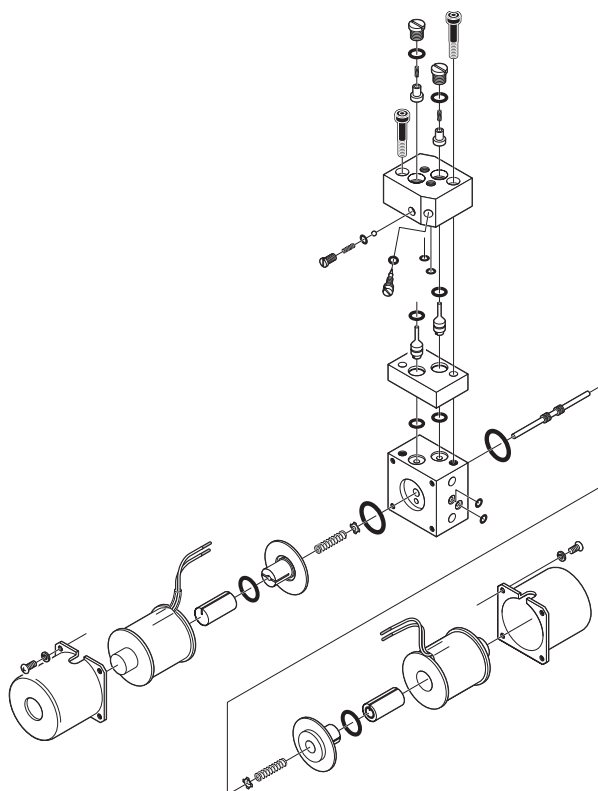





13. Pump & Electrical Components ..... Page 36.

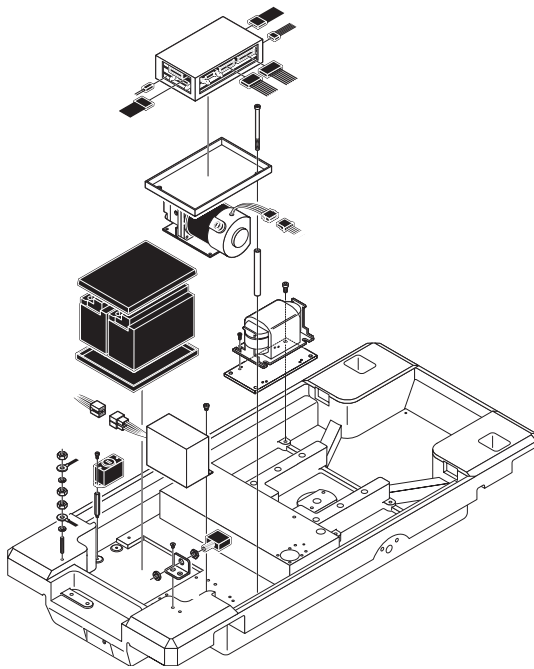

14. Base & Electrical Components ..... Page 38.

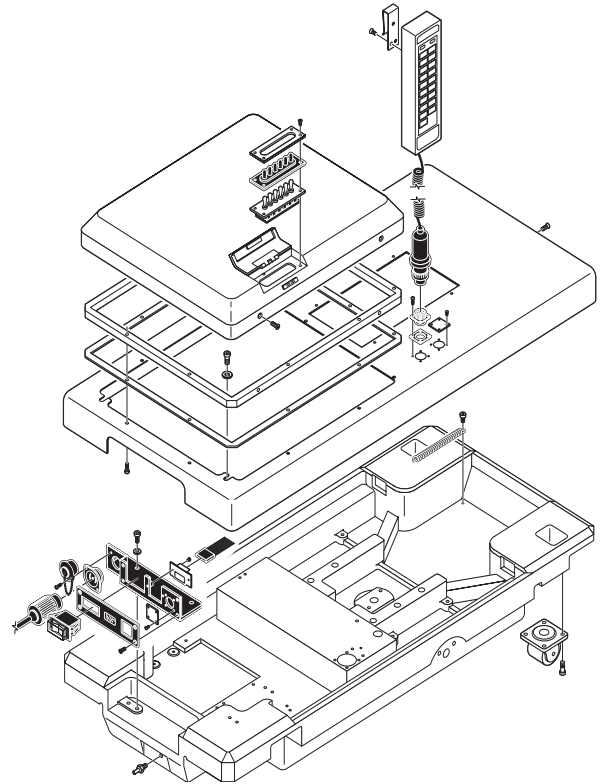

## 1. HEAD SECTION ASSEMBLY

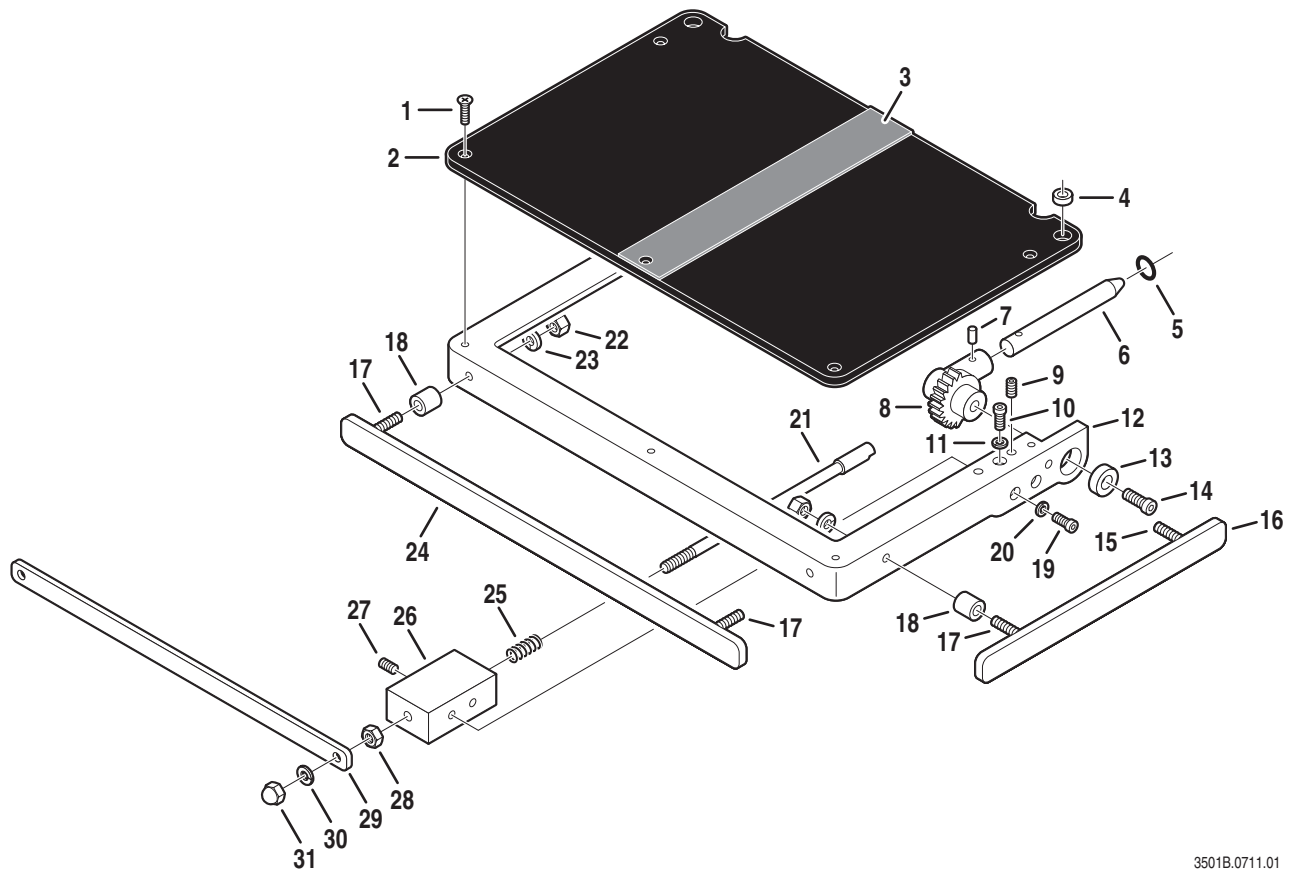


3501B.0711.01

**1. HEAD SECTION ASSEMBLY**

Item	Part No.	Description	Qty.
	1-010-55-P	PAD SET, regular .....	opt.
	1-010-55-S	PAD SET, soft .....	opt.
	D3-067-00	COMPLETE HEAD SECTION .....	1
1	D3-010-19	SCREW, phillips head .....	4
2	D3-067-01	TOP, head section .....	1
3	D3-010-18-H	VELCRO, hook .....	A/R
4	5-010-01-8	BUSHING, x-ray top .....	2
5	D4-010-14	O-RING, P-12 .....	2
6	D3-067-02	SHAFT, extension, head section (roll pin) .....	2
7	D6-050-33	PIN, roll, M5 x 20 .....	2
8	D3-032-80	GEAR, trunnion, right .....	1
	D3-032-81	GEAR, trunnion, left .....	1
9	D6-010-41-1	SCREW, set, M8 x 15 (plated) .....	2
10	D6-010-38-1	BOLT, allen, M6 x 15 (plated) .....	2
11	D6-010-40-1	WASHER, lock, M6 (plated) .....	2
12	D3-067-03	FRAME, head section .....	1
13	D3-034-22	BUSHING, head section .....	2
14	D6-010-53-1	BOLT, allen, M8 x 20 (plated) .....	2
15	D3-032-34	STUD, side rail mount, M8 x 45 .....	2
16	D3-067-04	RAIL, side, head section .....	2
17	D3-032-35	STUD, side rail mount, M8 x 40 .....	4
18	D3-010-01	COLLAR, side rail .....	6
19	D6-010-38	BOLT, allen, M6 x 15 .....	4
20	D6-010-40	WASHER, lock, M6 .....	4
21	D3-067-05	PLUNGER, release, right .....	1
	D3-067-06	PLUNGER, release, left .....	1
22	D6-010-13	NUT, hex, M8 .....	6
23	D6-010-09	WASHER, lock, M8 .....	6
24	D3-032-33	RAIL, accessory .....	1
25	D3-067-07	SPRING, release .....	2
26	D3-032-40	BLOCK, bearing .....	2
27	D6-010-11	SCREW, set, M5 x 8 (plated) .....	2
28	D6-010-13-1	NUT, hex, M8 (plated) .....	2
29	D3-010-24	RELEASE BAR, head section .....	1
30	D6-010-09	WASHER, lock, M8 .....	2
31	D6-010-08	NUT, acorn, M8 .....	2

## 2. BACK SECTION ASSEMBLY

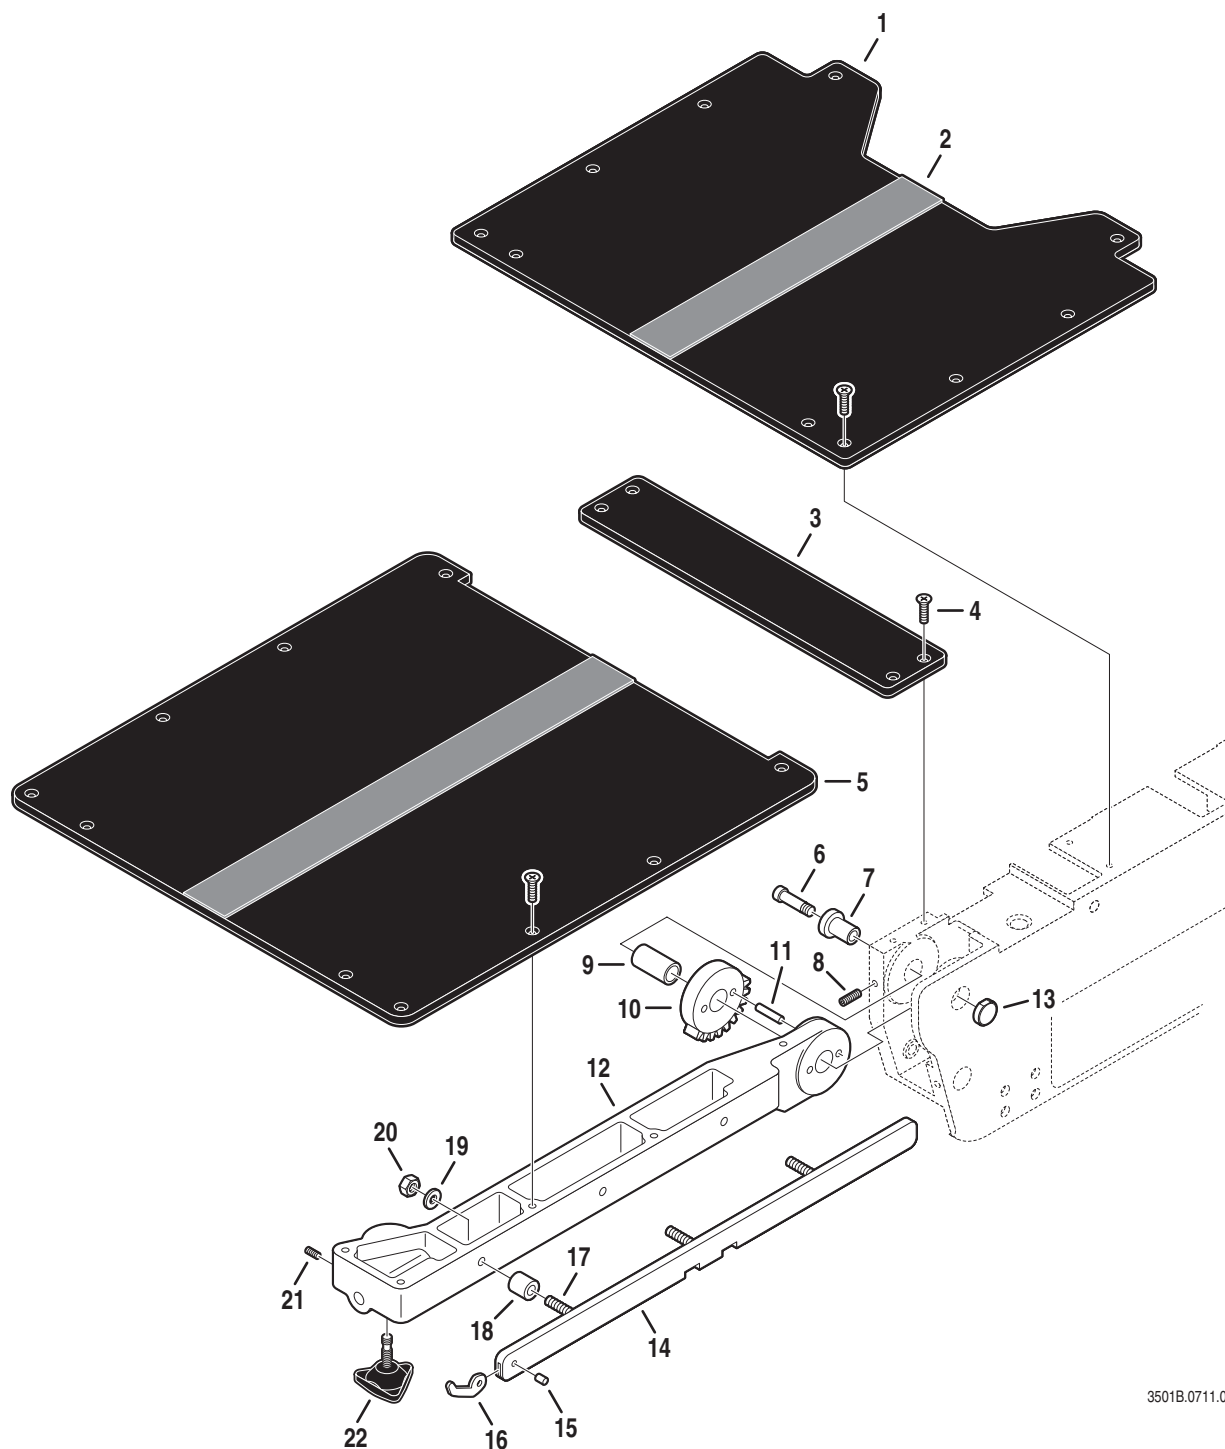


3501B.0711.02

**2. BACK SECTION ASSEMBLY**

Item	Part No.	Description	Qty.
	1-010-55-P	PAD SET, regular .....	opt.
	1-010-55-S	PAD SET, soft .....	opt.
1	D3-035-37	TOP, seat section .....	1
2	D3-010-18-H	VELCRO, hook .....	A/R
3	D3-035-01	TOP, seat section, small .....	1
4	D3-010-19	SCREW, phillips .....	A/R
5	D3-035-45	TOP, back section .....	1
6	D6-032-28	BOLT, allen .....	2
7	D3-035-34	CAP, back section .....	1
8	D6-010-50	SCREW, set M6 x 15 .....	4
9	D3-032-21	BUSHING, back section .....	2
10	D3-035-41	GEAR, spur, back section .....	2
11	D6-032-30	PIN, spur gear .....	4
12	D3-035-46	FRAME, back section, right .....	1
	D3-035-47	FRAME, back section, left .....	1
13	D3-032-36	CAP, back section, axis .....	2
14	D3-035-48	SIDE RAIL, back section, right .....	1
	D3-035-49	SIDE RAIL, back section, left .....	1
15	D3-010-41	PIN, rail stop .....	2
16	D3-010-43	RAIL STOP, large .....	2
17	D3-032-34	STUD, side rail mount, M8 x 45 .....	6
18	D3-010-01	COLLAR, side rail .....	6
19	D6-010-09-1	WASHER, lock, M8 (plated) .....	6
20	D6-010-13-1	NUT, M8 (plated) .....	6
21	D6-060-38	SCREW, set, M5 x 10 .....	2
22	D3-010-17	KNOB, retaining .....	2

### 3. LEG SECTION ASSEMBLY

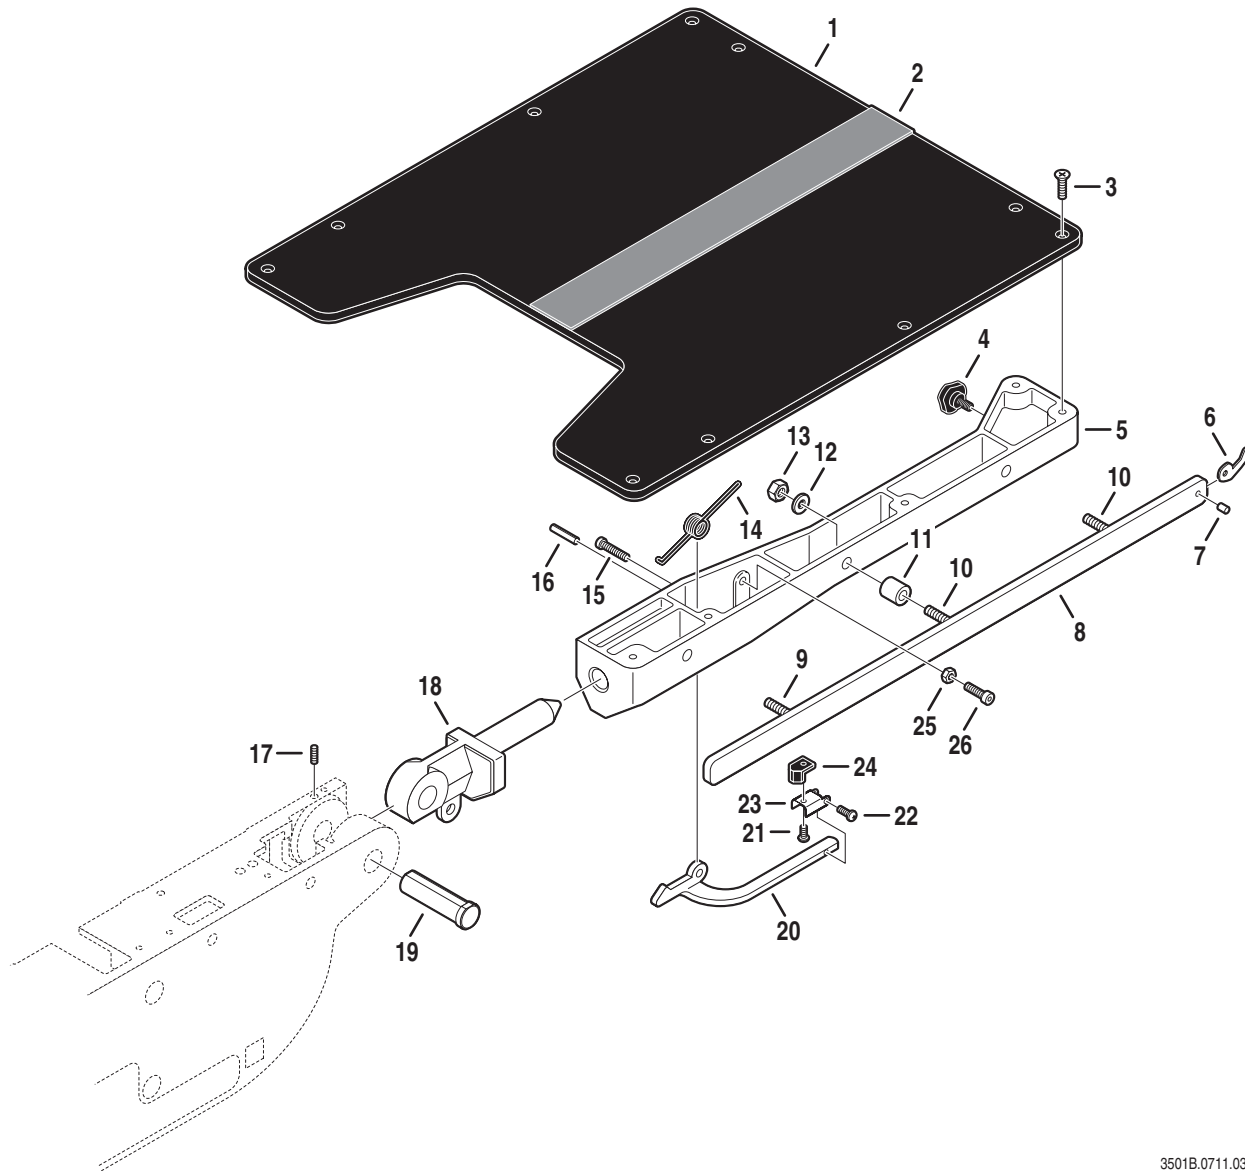


3501B.0711.03

**3. LEG SECTION ASSEMBLY**

Item	Part No.	Description	Qty.
	1-010-55-P	PAD SET, regular .....	opt.
	1-010-55-S	PAD SET, soft .....	opt.
1	D3-035-50	TOP, foot / leg section .....	1
2	D3-010-18-H	VELCRO, hook .....	A/R
3	D3-010-19	SCREW, phillips .....	10
4	D6-031-01	KNOB, locking .....	2
5	D3-035-51	FRAME, foot / leg section, right .....	1
	D3-035-52	FRAME, foot / leg section, left .....	1
6	D3-010-43	STOP, rail, large .....	2
7	D3-010-41	PIN, rail stop .....	2
8	D3-035-53	RAIL, side, foot / leg section, right .....	1
	D3-035-54	RAIL, side, foot / leg section, left .....	1
9	D3-032-35	STUD, side rail mount, M8 x 40 .....	2
10	D3-032-34	STUD, side rail mount, M8 x 45 .....	4
11	D3-010-01	COLLAR, side rail .....	6
12	D6-010-09-1	WASHER, lock, M8 (plated) .....	6
13	D6-010-13-1	NUT, M8 (plated) .....	6
14	D3-032-51	SPRING, back section, right .....	1
	D3-032-51-1	SPRING, back section, left .....	1
15	D6-010-65-1	BOLT, allen, M5 x 35 (plated) .....	2
16	D6-032-37	PIN, roll, M4 x 30 .....	2
17	D6-010-87	SCREW, set, M6 x 20 .....	2
18	D3-034-31	LEVER, axis, foot / leg section, right .....	1
	D3-034-32	LEVER, axis, foot / leg section, left .....	1
19	D3-030-05	AXIS, foot / leg section .....	2
20	D3-035-55	LEVER, release, right .....	1
	D3-035-56	LEVER, release, left .....	1
21	D6-067-01	SCREW, phillips, button head, M3 x 8 .....	2
22	D6-010-79	SCREW, phillips, button head, M3 x 5 .....	2
23	D3-035-57	HINGE .....	2
24	D3-034-46	STOP, rubber .....	2
25	D6-010-76	NUT, hex, M5 .....	2
26	D6-010-83	BOLT, allen, M5 x 30 .....	2

## 4. SIDE FRAME ASSEMBLIES

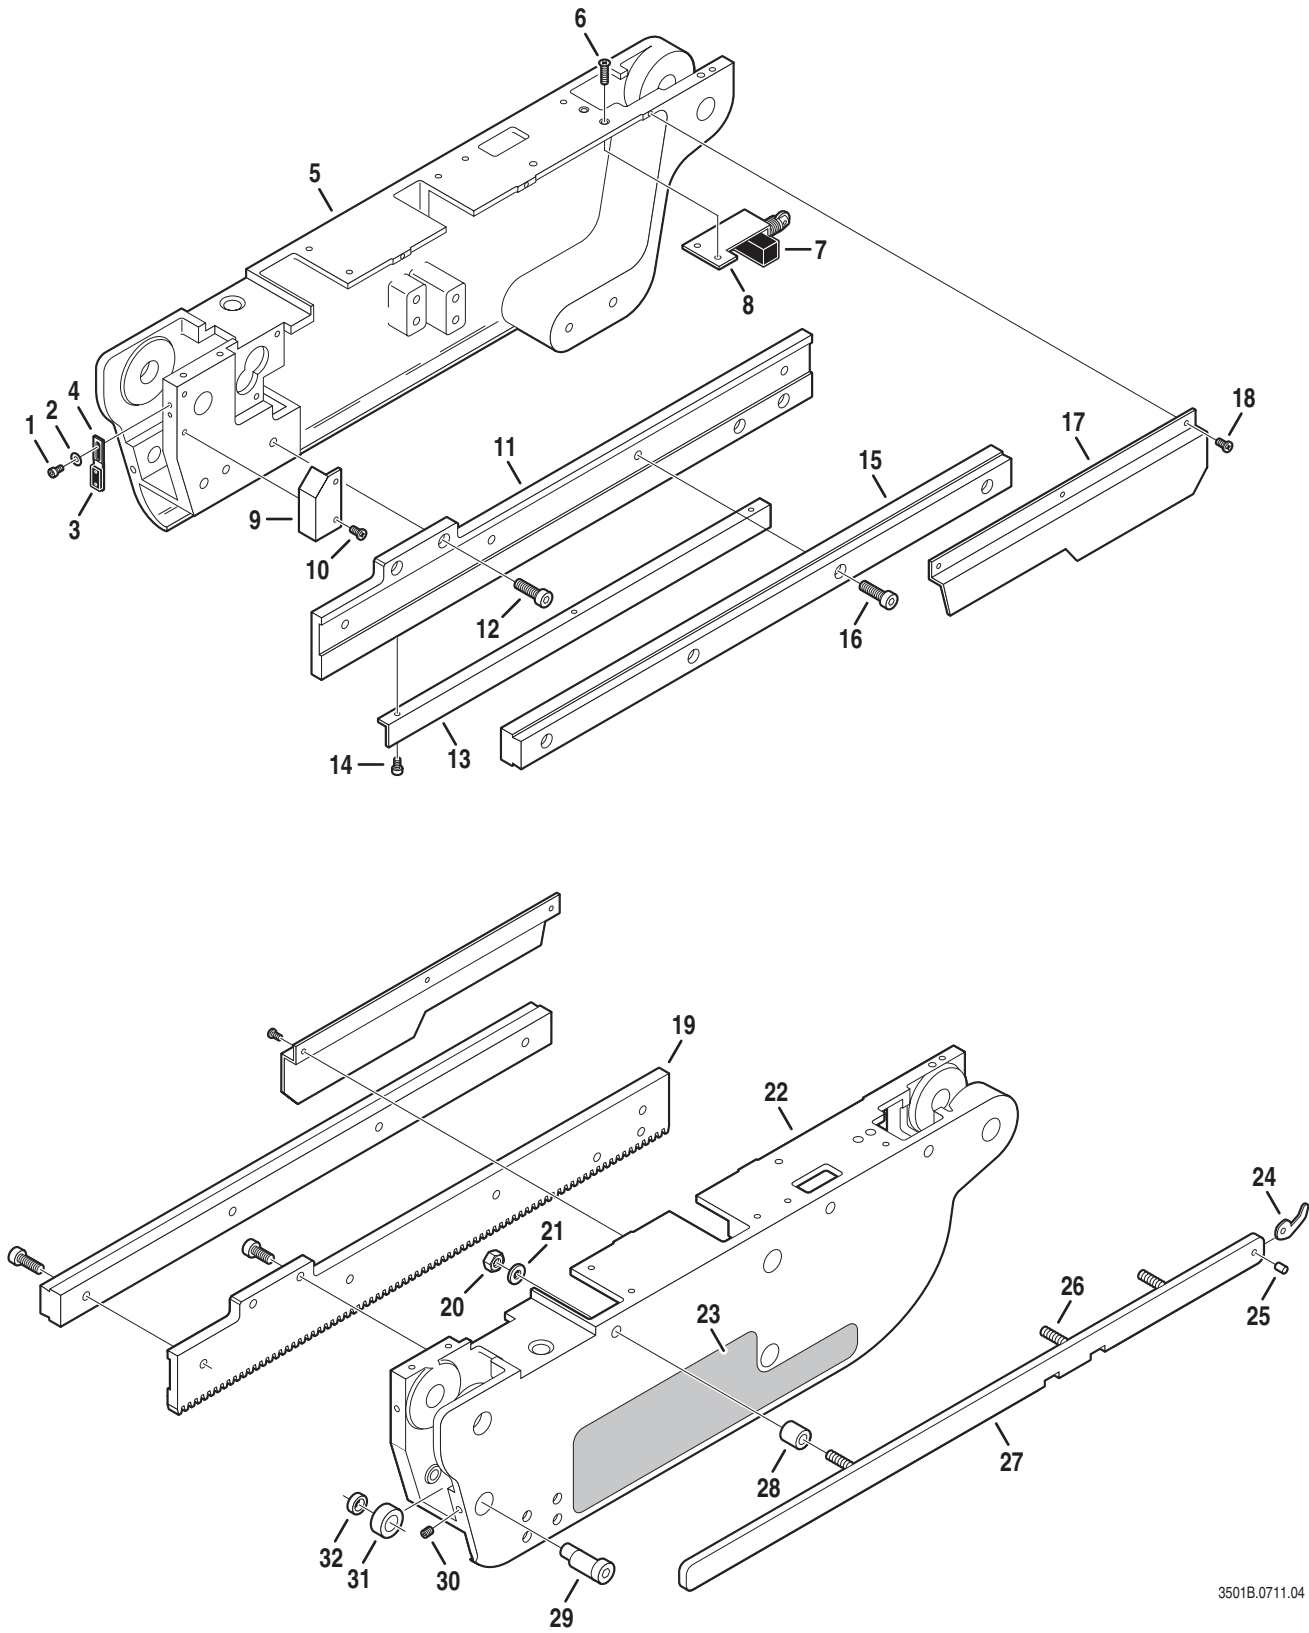


3501B.0711.04



#### 4. SIDE FRAME ASSEMBLIES

Item	Part No.	Description	Qty.
1	D6-060-07	BOLT, allen, M4 x 8 .....	2
2	D6-035-19	WASHER, flat, M4 .....	2
3	D5-036-07	MICRO-SWITCH .....	1
4	D5-036-08	BRACKET, micro-switch mounting .....	1
5	D3-035-08	FRAME, side, left .....	1
6	D6-066-18	SCREW, countersunk phillips, M4 x 15 .....	4
7	D5-032-17	MICRO-SWITCH .....	2
8	D3-035-20	BRACKET, micro-switch mounting, left .....	1
	D3-035-21	BRACKET, micro-switch mounting, right .....	1
9	D3-035-58	COVER, micro-switch .....	1
10	D6-035-04	SCREW, phillips, M4 x 6 .....	2
11	D3-035-20	BRACKET, slide bar, left .....	1
12	D6-010-53	BOLT, allen, M8 x 20 .....	8
13	D3-035-22	ACTUATOR, slide, micro-switch .....	1
14	D6-010-28-1	BOLT, allen, M5 x 6 .....	3
15	D3-035-19	BAR, slide .....	2
16	D6-010-33	BOLT, allen, M8 x 25 .....	8
17	D3-035-13	COVER, hose, left .....	1
	D3-035-14	COVER, hose, right .....	1
18	D6-043-10	SCREW, phillips, M4 x 8 .....	6
19	D3-035-59	BRACKET, slide bar, right .....	1
20	D6-010-13-1	NUT, M8 (plated) .....	6
21	D6-010-09-1	WASHER, lock, M8 (plated) .....	6
22	D3-035-07	FRAME, side, right .....	1
23	D3-035-60	NAMEPLATE, decal, 3501B, right .....	1
	D3-035-61	NAMEPLATE, decal, 3501B, left .....	1
24	D3-010-43	STOP, rail (large) .....	2
25	D3-010-41	PIN, rail stop .....	2
26	D3-032-34	STUD, side rail mount, M8 x 45 .....	6
27	D3-035-04	SIDE RAIL, seat section, right .....	1
	D3-035-05	SIDE RAIL, seat section, left .....	1
28	D3-010-01	COLLAR, side rail .....	6
29	D3-035-30	AXIS, eccentric cam .....	2
30	D6-035-05	SCREW, set, M6 x 8 .....	2
31	D3-035-29	ROLLER, support .....	2
32	D3-035-28	SPACER, nylon .....	2

## 5. BACK & LEG SECTION CYLINDER ASSEMBLIES

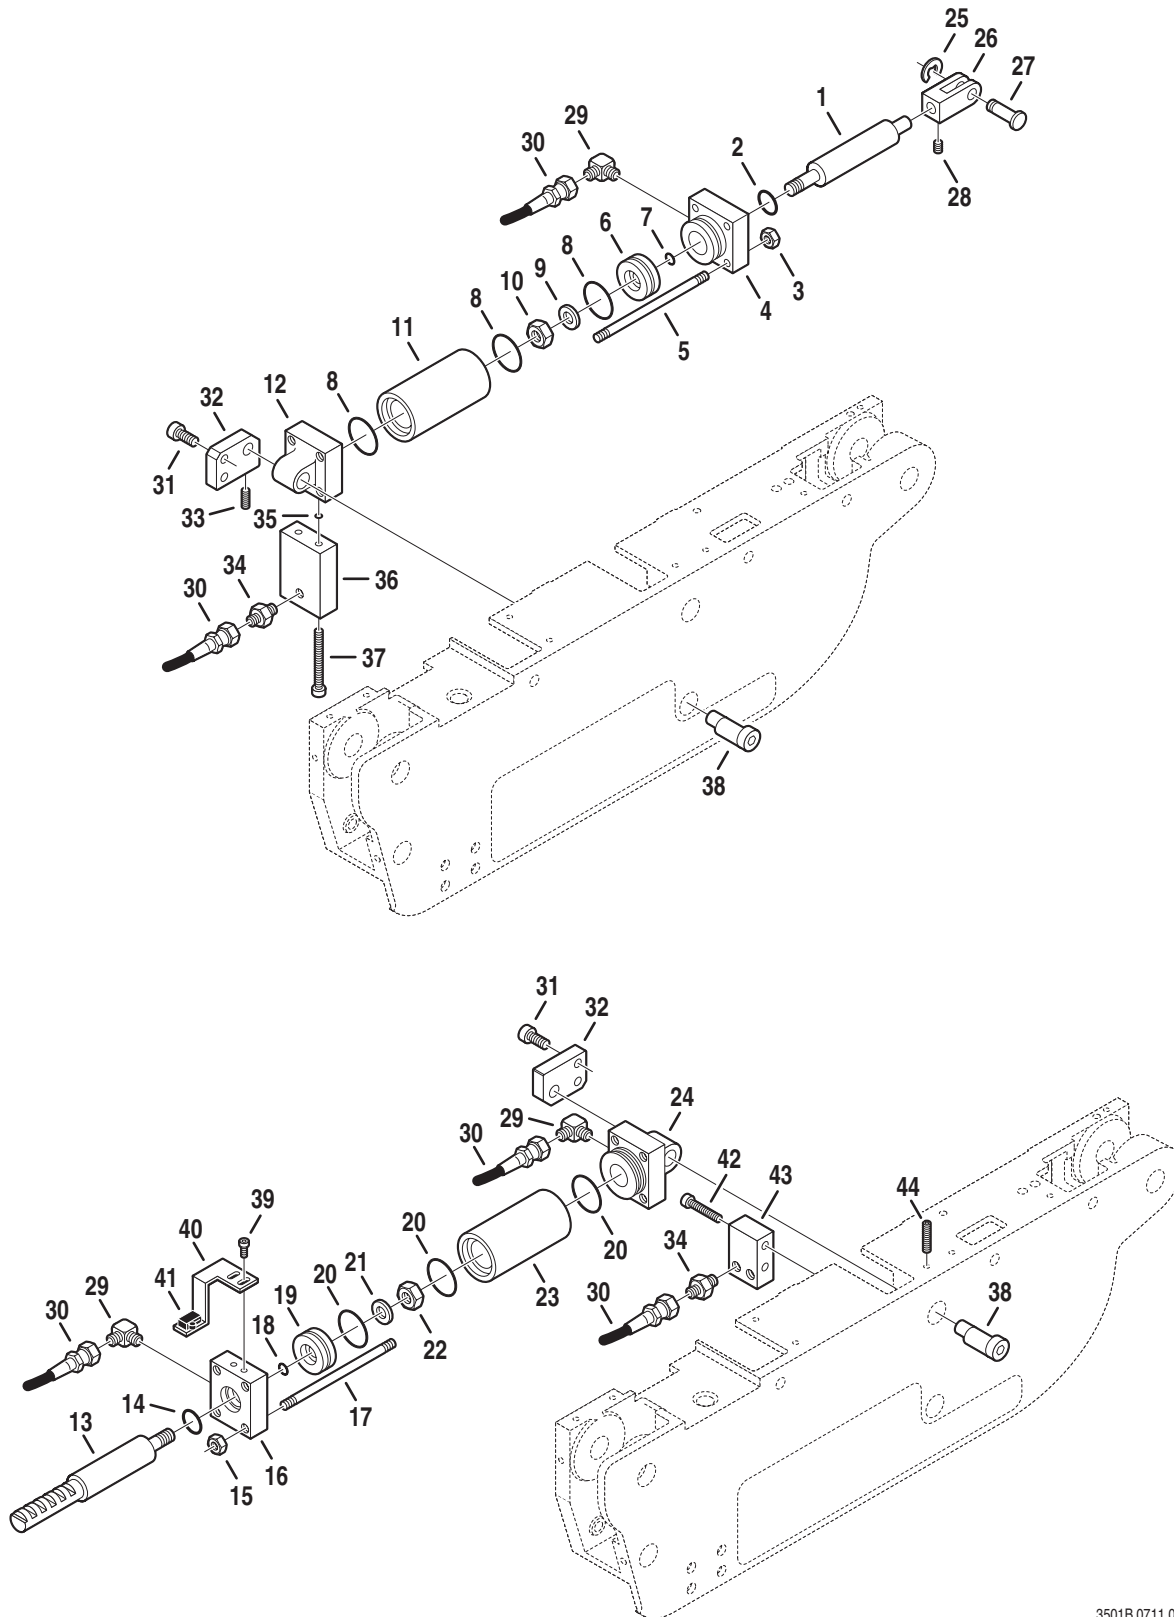


3501B.0711.05

# 5. BACK & LEG SECTION CYLINDER ASSEMBLIES

Item	Part No.	Description	Qty.
	D4-035-06-1	CYLINDER ASSEMBLY, leg section, left .....	1
	D4-035-06-2	CYLINDER ASSEMBLY, leg section, right .....	1
1	----	•RAM .....	1
2	D4-036-67	•PENTASEAL, PS-22A .....	1
3	D6-010-55	•NUT, M8 .....	4
4	----	•HEAD CAP .....	1
5	D4-035-07	•STUD .....	4
6	----	•PISTON .....	1
7	D4-010-02	•O-RING, P-14 .....	1
8	D4-010-54	•O-RING, P-34 .....	3
9	D6-010-42	•WASHER, lock, M10 .....	1
10	D6-010-43	•NUT, M10 .....	1
11	----	•CYLINDER .....	1
12	----	•TAIL CAP .....	1
	D4-035-04-1	CYLINDER ASSEMBLY, back section, left .....	1
	D4-035-04-2	CYLINDER ASSEMBLY, back section, right .....	1
13	----	•RAM .....	1
14	D4-036-67	•PENTASEAL, PS-22A .....	1
15	D6-010-55	•NUT, M8 .....	4
16	----	•HEAD CAP .....	1
17	D4-035-05	•STUD .....	4
18	D4-010-02	•O-RING, P-14 .....	1
19	----	•PISTON .....	1
20	D4-010-54	•O-RING, P34 .....	3
21	D6-010-42	•WASHER, lock, M10 .....	1
22	D6-010-43	•NUT, M10 .....	1
23	----	•CYLINDER .....	1
24	----	•TAIL CAP .....	1
25	D6-036-08	CIRCLIP .....	2
26	D6-036-07	CLEVIS .....	2
27	D6-036-06	PIN, clevis .....	2
28	D6-010-34	SCREW, set, M6 x 6 .....	2
29	D4-010-29	FITTING, hydraulic, 90° elbow .....	A/R
30	----	HOSE, flexible (specify function) .....	A/R
31	D6-010-53	BOLT, allen, M8 x 20 .....	4
32	D4-036-05	PLATE, cylinder mounting, left .....	1
	D4-036-06	PLATE, cylinder mounting, right .....	1
33	D6-010-87	SCREW, set, M6 x 20 .....	2
34	D4-031-06	FITTING, flexible hose .....	A/R
35	D4-010-01	O-RING, P8 .....	1
36	D4-035-15-2	BLOCK, plumbing, left .....	1
	D4-035-15-1	BLOCK, plumbing, right .....	1
37	D6-032-09	BOLT, allen, M5 x 50 .....	2
38	D6-036-09	AXIS, eccentric cam .....	4
39	D6-010-10-3	BOLT, allen, M4 x 10 .....	4
40	D5-036-20	BRACKET, micro-switch mounting, left .....	1
	D5-036-19	BRACKET, micro-switch mounting, right .....	1
41	D5-036-18	MICRO-SWITCH .....	2
42	D6-036-10	BOLT, allen, M6 x 40 .....	2
43	D4-035-52	BLOCK, plumbing .....	1
44	D6-010-91	SCREW, set, M6 x 25 .....	2

## 6. KIDNEY LIFT ASSEMBLY

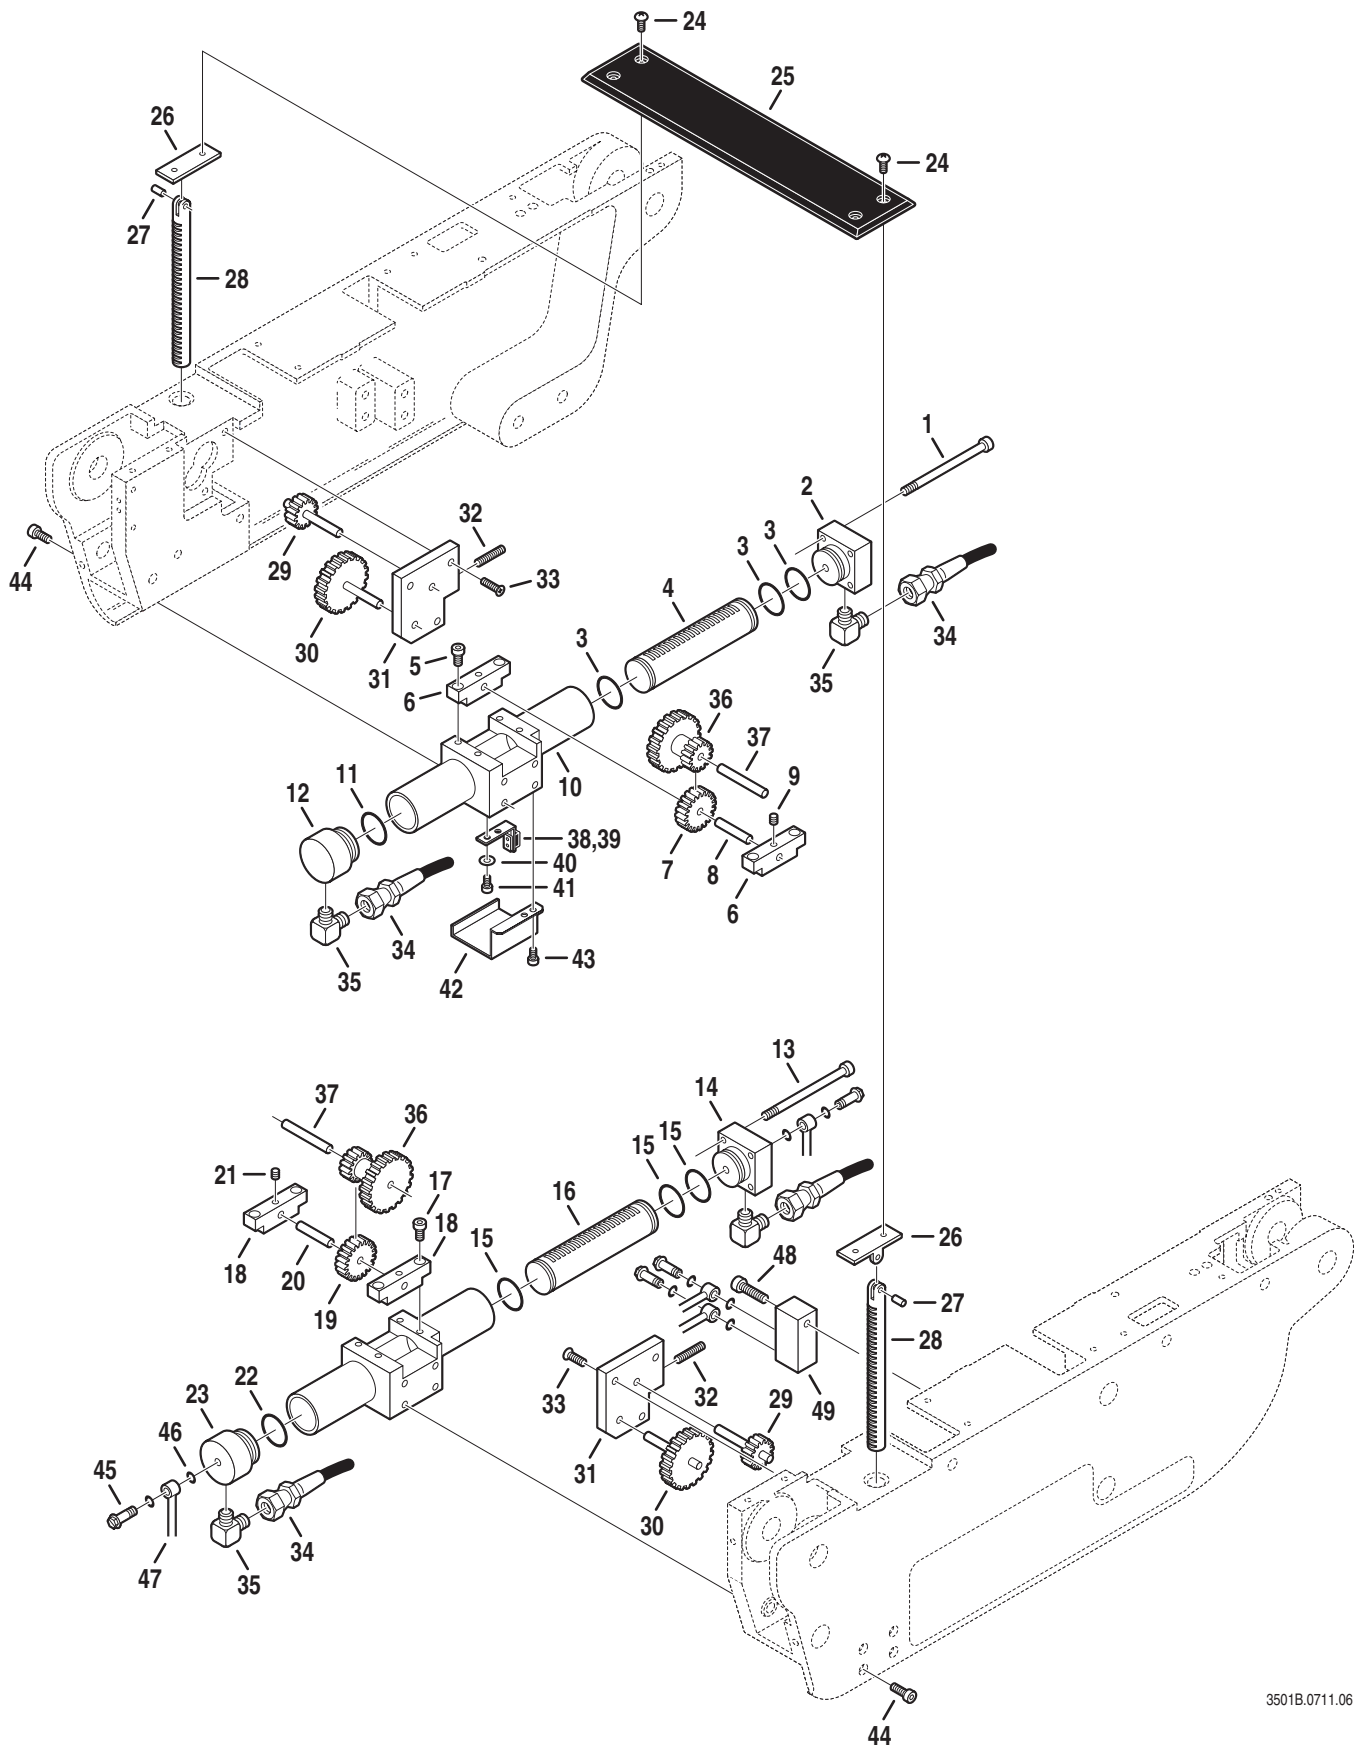


3501B.0711.06

## 6. KIDNEY LIFT ASSEMBLY

Item	Part No.	Description	Qty.
	D4-035-09-1	CYLINDER ASSEMBLY, kidney lift, left .....	1
1	D6-035-01	•BOLT, allen, M6 X 100 .....	4
2	----	•END CAP, left cylinder .....	1
3	D4-010-57	•O-RING, P-21 .....	3
4	D4-035-09-4	•PISTON, kidney lift .....	1
5	D6-010-70	•BOLT, allen, M5 x 10 .....	4
6	D4-035-10	•PILLOW BLOCK .....	2
7	D4-035-11	•GEAR .....	1
8	D4-035-11-1	•SHAFT .....	1
9	D6-010-34	•SCREW, set, M6 x 6 .....	2
10	D4-035-09-3	•CYLINDER, kidney lift .....	1
11	D4-010-12	•O-RING, P-24 .....	1
12	----	•HEAD CAP, left cylinder .....	1
	D4-035-09-2	CYLINDER ASSEMBLY, kidney lift, right .....	1
13	D6-035-01	•BOLT, allen, M6 x 100 .....	4
14	----	•END CAP, right cylinder .....	1
15	D4-010-57	•O-RING, P-21 .....	3
16	D4-035-09-4	•PISTON, kidney lift .....	1
17	D6-010-70	•BOLT, allen, M5 x 10 .....	4
18	D4-035-10	•PILLOW BLOCK .....	2
19	D4-035-11	•GEAR .....	1
20	D4-035-11-1	•SHAFT .....	1
21	D6-010-34	•SCREW, set, M6 x 6 .....	2
22	D4-010-12	•O-RING, P-24 .....	1
23	----	•HEAD CAP, right cylinder .....	1
24	D5-035-42-1	SCREW, round head phillips, M5 x 10 .....	4
25	D5-035-42	TOP, kidney lift .....	1
26	D3-032-39-1	PIVOT, kidney lift .....	2
27	D6-031-24	PIN, roll, M5 x 15 .....	2
28	D3-032-52	SHAFT, kidney lift .....	2
29	D4-035-14	GEAR .....	2
30	D4-035-13	GEAR .....	2
31	D3-035-62	COVER, gear .....	2
32	D6-035-02	SCREW, set, M5 x 25 .....	2
33	D6-035-03	SCREW, countersunk, phillips, M5 x 15 .....	6
34	----	HOSE, flexible (specify function) .....	A/R
35	D4-010-29	FITTING, hydraulic, 90° elbow .....	A/R
36	D4-035-12	GEAR .....	2
37	D4-035-12-1	SHAFT .....	2
38	D5-036-22	MICRO-SWITCH .....	1
39	D5-036-23	BRACKET, micro-switch mounting .....	1
40	D6-035-19	WASHER, flat, M4 .....	2
41	D6-060-07	BOLT, allen, M4 x 8 .....	2
42	D5-036-21	COVER, micro-switch .....	1
43	D6-060-07	BOLT, allen, M4 x 8 .....	2
44	D6-010-67	BOLT, allen, M5 x 15 .....	8
45	D4-010-24	BOLT, plumbing, M6 .....	A/R
46	D4-010-08	O-RING, P-7 .....	A/R
47	----	OIL LINE (specify function) .....	A/R
48	D6-010-91	BOLT, allen, M6 x 25 .....	1
49	D4-036-20	VALVE, bypass .....	1

## 7. SLIDE ASSEMBLY

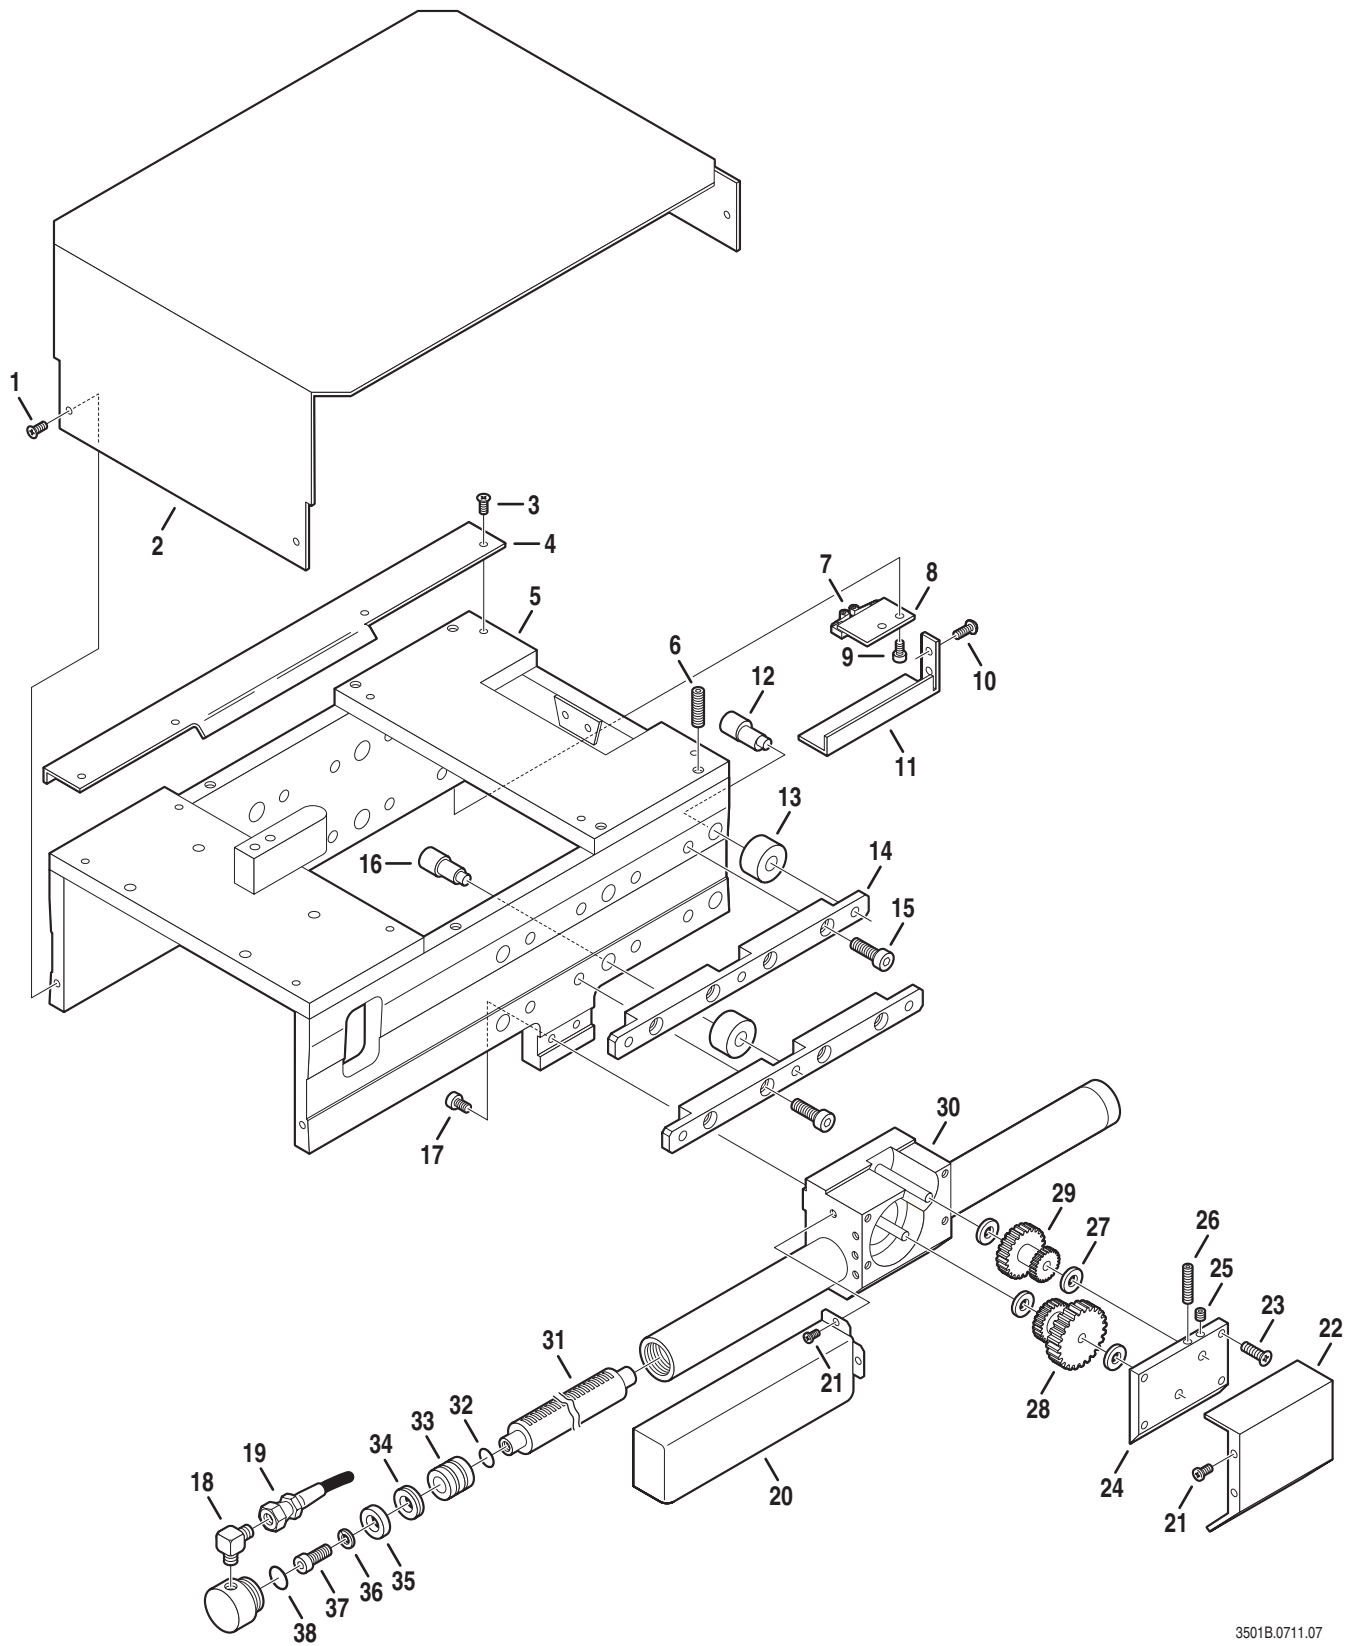


3501B.0711.07

**7. SLIDE ASSEMBLY**

Item	Part No.	Description	Qty.
1	D6-035-08	SCREW, flat head, M4 x 8 .....	4
2	D2-035-01	COVER, hose .....	1
3	D6-035-08	SCREW, flat head, M4 x 8 .....	8
4	D2-035-02	COVER, lateral tilt frame, left .....	1
	D2-035-03	COVER, lateral tilt frame, right .....	1
5	D2-035-04	FRAME, lateral tilt .....	1
6	D6-010-04	SCREW, set, M8 x 30 .....	6
7	D5-032-15	MICRO-SWITCH .....	2
8	D2-035-05	BRACKET, micro-switch .....	1
9	D6-060-07	BOLT, allen, M4 x 8 .....	2
10	D6-035-04	SCREW, button head, M4 x 8 .....	2
11	D2-035-06	COVER, micro-switch .....	1
12	D2-035-07	AXIS, slide roller, eccentric cam .....	6
13	D2-035-08	ROLLER, slide .....	12
14	D2-035-10	RETAINER, slide roller .....	4
15	D6-010-33	BOLT, allen, M8 x 25 .....	16
16	D2-035-09	AXIS, slide roller .....	6
17	D6-010-17-1	BOLT, allen, M8 x 15 (plated) .....	2
18	D4-010-29	FITTING, hydraulic, 90° elbow .....	A/R
19	----	HOSE, hydraulic .....	A/R
20	D2-035-49	COVER, slide cylinder, head end .....	1
	D2-035-50	COVER, slide cylinder, foot end .....	1
21	D6-043-10	SCREW, phillips, M4 x 8 .....	8
22	D2-035-51	COVER, slide cylinder, center .....	1
	D4-035-51	CYLINDER ASSEMBLY, slide .....	1
23	D6-035-03	•SCREW, flat head, M5 x 15 .....	4
24	D4-035-20	•COVER, gear case .....	1
25	D6-010-75	•SCREW, set, M5 x 5 .....	1
26	D6-035-02	•SCREW, set, M5 x 25 .....	1
27	D4-035-17	•COLLAR, gear .....	4
28	D4-035-19	•GEAR .....	1
	D4-035-19-1	•GEAR, bearing .....	1
29	D4-035-18	•GEAR .....	1
30	----	•HOUSING & TUBE, 3501B slide cylinder .....	1
31	----	•RAM .....	1
32	D4-010-02	•O-RING, P-14 .....	2
33	----	•PISTON .....	2
34	D4-035-21	•SCRAPER, SWA-30 .....	2
35	D4-035-22	•SEAL, piston, SKY-22 .....	2
36	D6-010-09	•WASHER, lock, M8 .....	2
37	D6-010-53	•BOLT, allen, M8 x 20 .....	2
38	D4-010-12	•O-RING, P-24 .....	2

## 8. LATERAL TILT ASSEMBLY

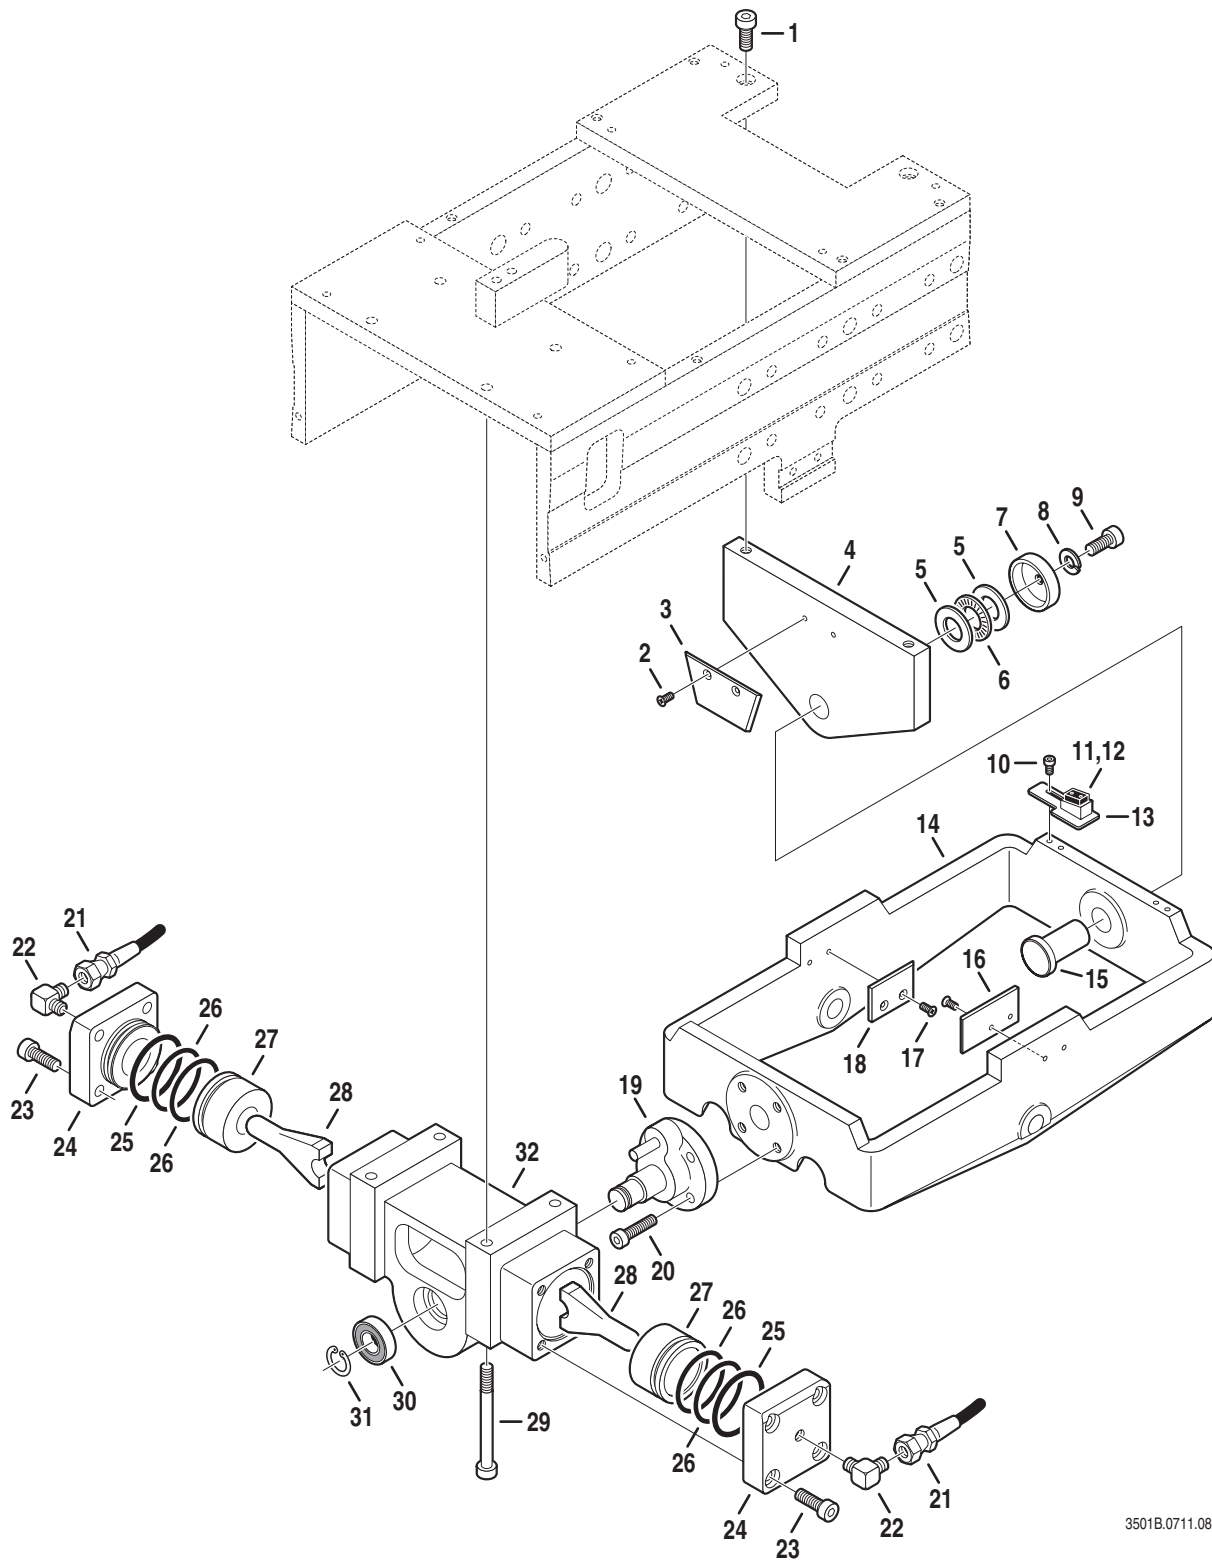


3501B.0711.08



**8. LATERAL TILT ASSEMBLY**

Item	Part No.	Description	Qty.
1	D6-010-53	BOLT, allen, M8 x 20 .....	2
2	D6-067-23	SCREW, countersunk, phillips, M4 x 8 .....	2
3	D5-035-20	ACTUATOR PLATE, micro-switch .....	1
4	D2-036-01	MOUNT, Trendelenburg pivot housing .....	1
5	D6-036-16	WASHER, thrust .....	2
6	D6-036-17	BEARING, thrust .....	1
7	D6-036-18	COVER, bearing .....	1
8	D6-010-09	WASHER, lock, M8 .....	1
9	D6-010-53	BOLT, allen, M8 x 20 .....	1
10	D6-060-07	BOLT, allen, M4 x 8 .....	4
11	D5-032-16	MICRO-SWITCH .....	2
12	D2-035-15	BLOCK, micro-switch mounting, left .....	1
	D2-035-16	BLOCK, micro-switch mounting, right .....	1
13	D2-035-14	BRACKET, micro-switch mounting .....	2
14	D2-036-02	HOUSING, Trendelenburg pivot .....	1
15	D2-036-03	AXIS, lateral-tilt pivot .....	1
16	D5-036-27	ACTUATOR PLATE, micro-switch .....	1
17	D6-067-23	SCREW, countersunk, phillips, M4 x 8 .....	4
18	D5-036-28	ACTUATOR PLATE, micro-switch .....	1
19	D2-035-52	LEVER, lateral-tilt .....	1
20	D6-010-54	BOLT, allen, M8 x 30 .....	4
21	----	HOSE, flexible (specify function) .....	A/R
22	D4-010-29	FITTING, hydraulic, 90° elbow .....	2
23	D6-010-33	BOLT, allen, M8 x 25 .....	8
24	D4-035-53	CAP, end .....	2
25	D4-035-23	O-RING, S-50 .....	2
26	D4-010-04	O-RING, P-44 .....	4
27	D4-035-25	PISTON .....	2
28	D4-036-39	ROD, connecting .....	2
29	D6-031-18	BOLT, allen, M8 x 90 .....	4
30	D2-035-33	BEARING, sealed roller .....	1
31	D6-036-20	CIRCLIP .....	1
32	D4-035-54	HOUSING, lateral tilt cylinder .....	1

## 9. TRENDELENBURG ASSEMBLY

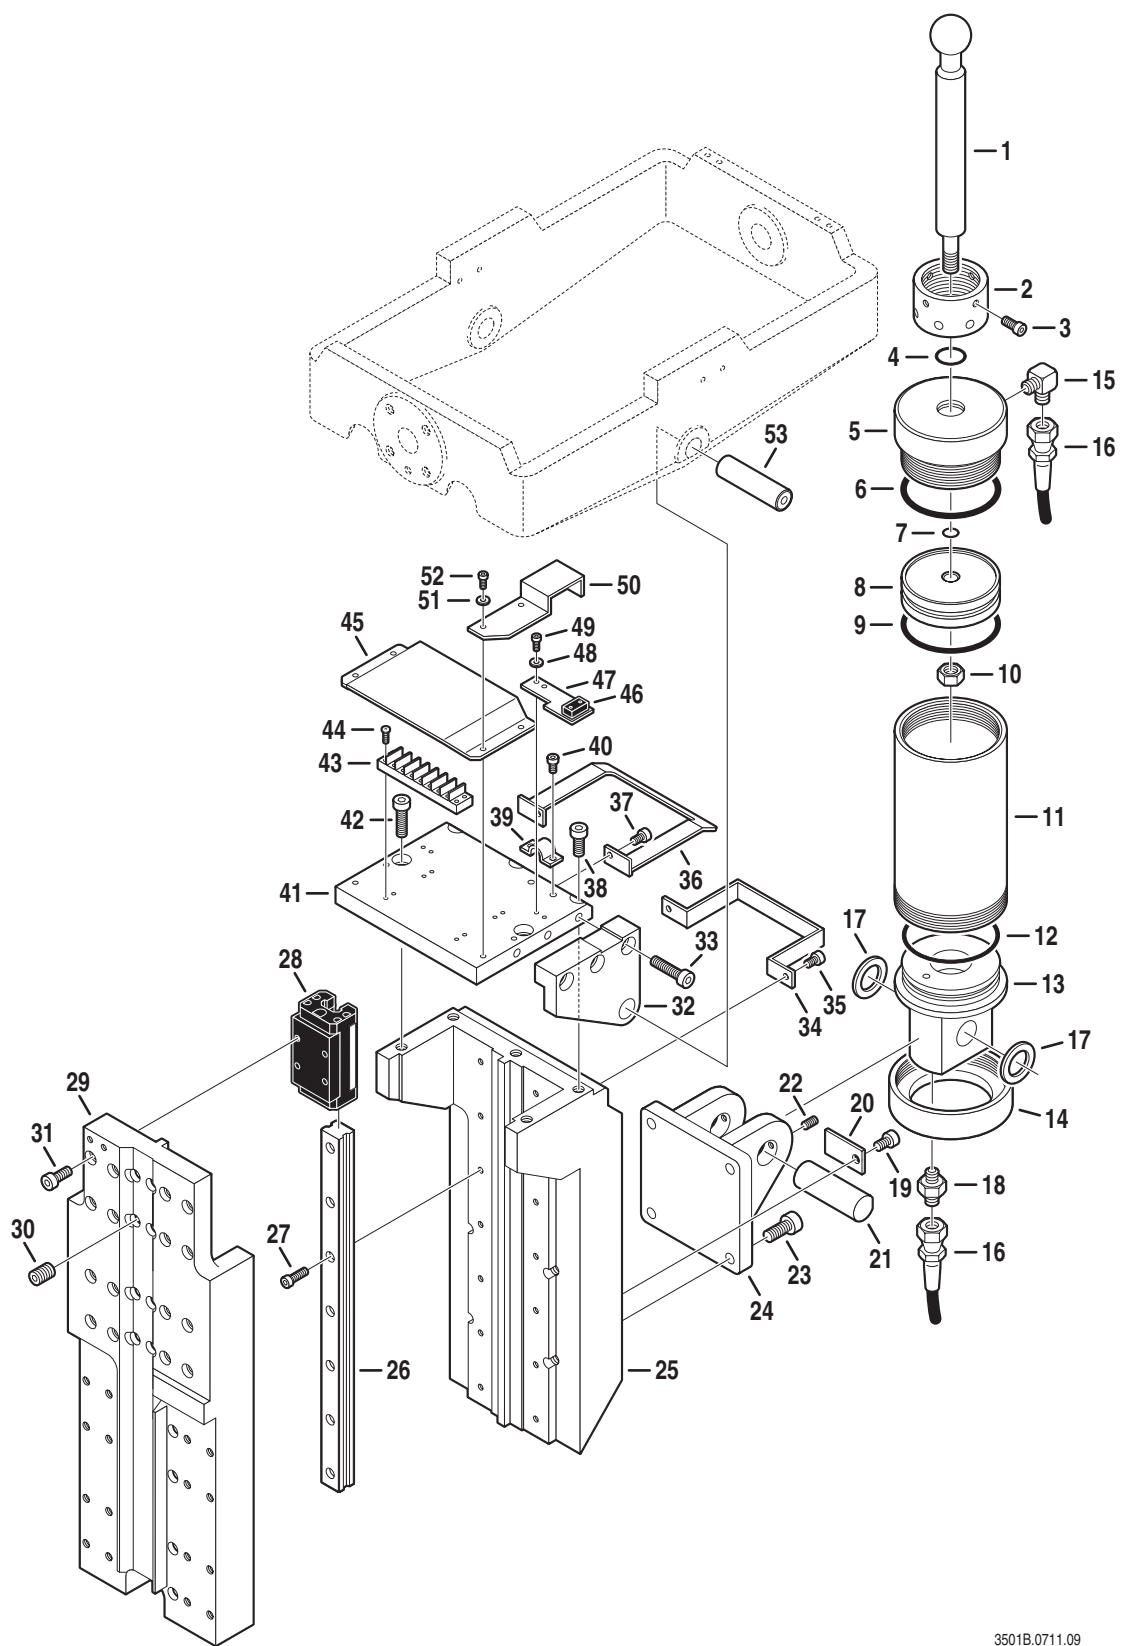


3501B.0711.09

## 9. TRENDELENBURG ASSEMBLY

Item	Part No.	Description	Qty.
	D4-036-43	CYLINDER ASSEMBLY, Trendelenburg .....	1
1	D4-036-44	•ROD .....	1
2	----	•RETAINER NUT, ball joint .....	1
3	D6-010-51	•BOLT, allen, M6 x 10 .....	4
4	D4-060-23	•O-RING, P-20 .....	1
5	D4-036-46	•CAP, end, top .....	1
6	D4-035-29	•O-RING, P-65 .....	1
7	D4-010-56	•O-RING, P-10A .....	1
8	D4-036-47	•PISTON .....	1
9	D4-010-06	•O-RING, P-60 .....	1
10	D6-010-43	•NUT, M10 .....	1
11	D4-036-48	•CYLINDER .....	1
12	D4-010-10	•O-RING, G-65 .....	1
13	D4-036-49	•CAP, end, bottom .....	1
14	D4-036-50	•NUT, bottom end cap .....	1
15	D4-010-29	FITTING, hydraulic, 90° elbow .....	1
16	----	HOSE, flexible (specify function) .....	A/R
17	D4-036-51	SHIM .....	2
18	D4-031-06	FITTING, flexible hose .....	1
19	D6-010-51	BOLT, allen, M6 x 10 .....	2
20	D2-036-16	GUIDE, hose .....	2
21	D2-036-11	AXIS, Trendelenburg cylinder .....	1
22	D6-060-38	SCREW, set, M5 x 10 .....	2
23	D6-010-53	BOLT, allen, M8 x 20 .....	4
24	D2-036-12	MOUNT, Trendelenburg cylinder .....	1
	D2-035-59	SLIDER ASSEMBLY .....	1
25	----	SLIDER, section #1 (not available separately) .....	1
26	D3-035-63	SLIDE RAIL .....	2
27	D6-010-38	BOLT, allen, M6 x 15 .....	14
28	D3-065-27	SLIDE, bearing .....	4
29	----	SLIDER, section #2 (not available separately) .....	1
30	D6-010-27	SCREW, set, M10 x 15 .....	8
31	D6-010-38	BOLT, allen, M6 x 15 .....	16
32	D2-035-53	PLATE, Trendelenburg tilt, right .....	1
	D2-035-54	PLATE, Trendelenburg tilt, left .....	1
33	D6-035-11	BOLT, allen, M8 x 35 .....	6
34	D2-035-42	BRACKET .....	1
35	D6-035-13	BOLT, allen .....	2
36	D2-035-39	BRACKET, shroud .....	1
37	D6-010-51	BOLT, allen, M6 x 10 .....	2
38	D6-010-53	BOLT, allen, M8 x 20 .....	3
39	D2-036-08	BRACKET .....	1
40	D6-060-07	BOLT, allen, M4 x 8 .....	2
41	D2-035-55	CAP, slider section #1 .....	1
42	D6-010-54	BOLT, allen, M8 x 30 .....	2
43	D5-036-31	TERMINAL STRIP .....	2
44	D6-011-20	SCREW, phillips, M3 x 10 .....	8
45	D2-035-32	COVER, terminal strip .....	1
46	D5-032-16	MICRO-SWITCH .....	2
47	D2-035-29	BRACKET, micro-switch mounting, right .....	1
	D2-035-28	BRACKET, micro-switch mounting, left .....	1
48	D6-035-19	WASHER, flat, M4 .....	4

## 9. TRENDELENBURG ASSEMBLY (continued)

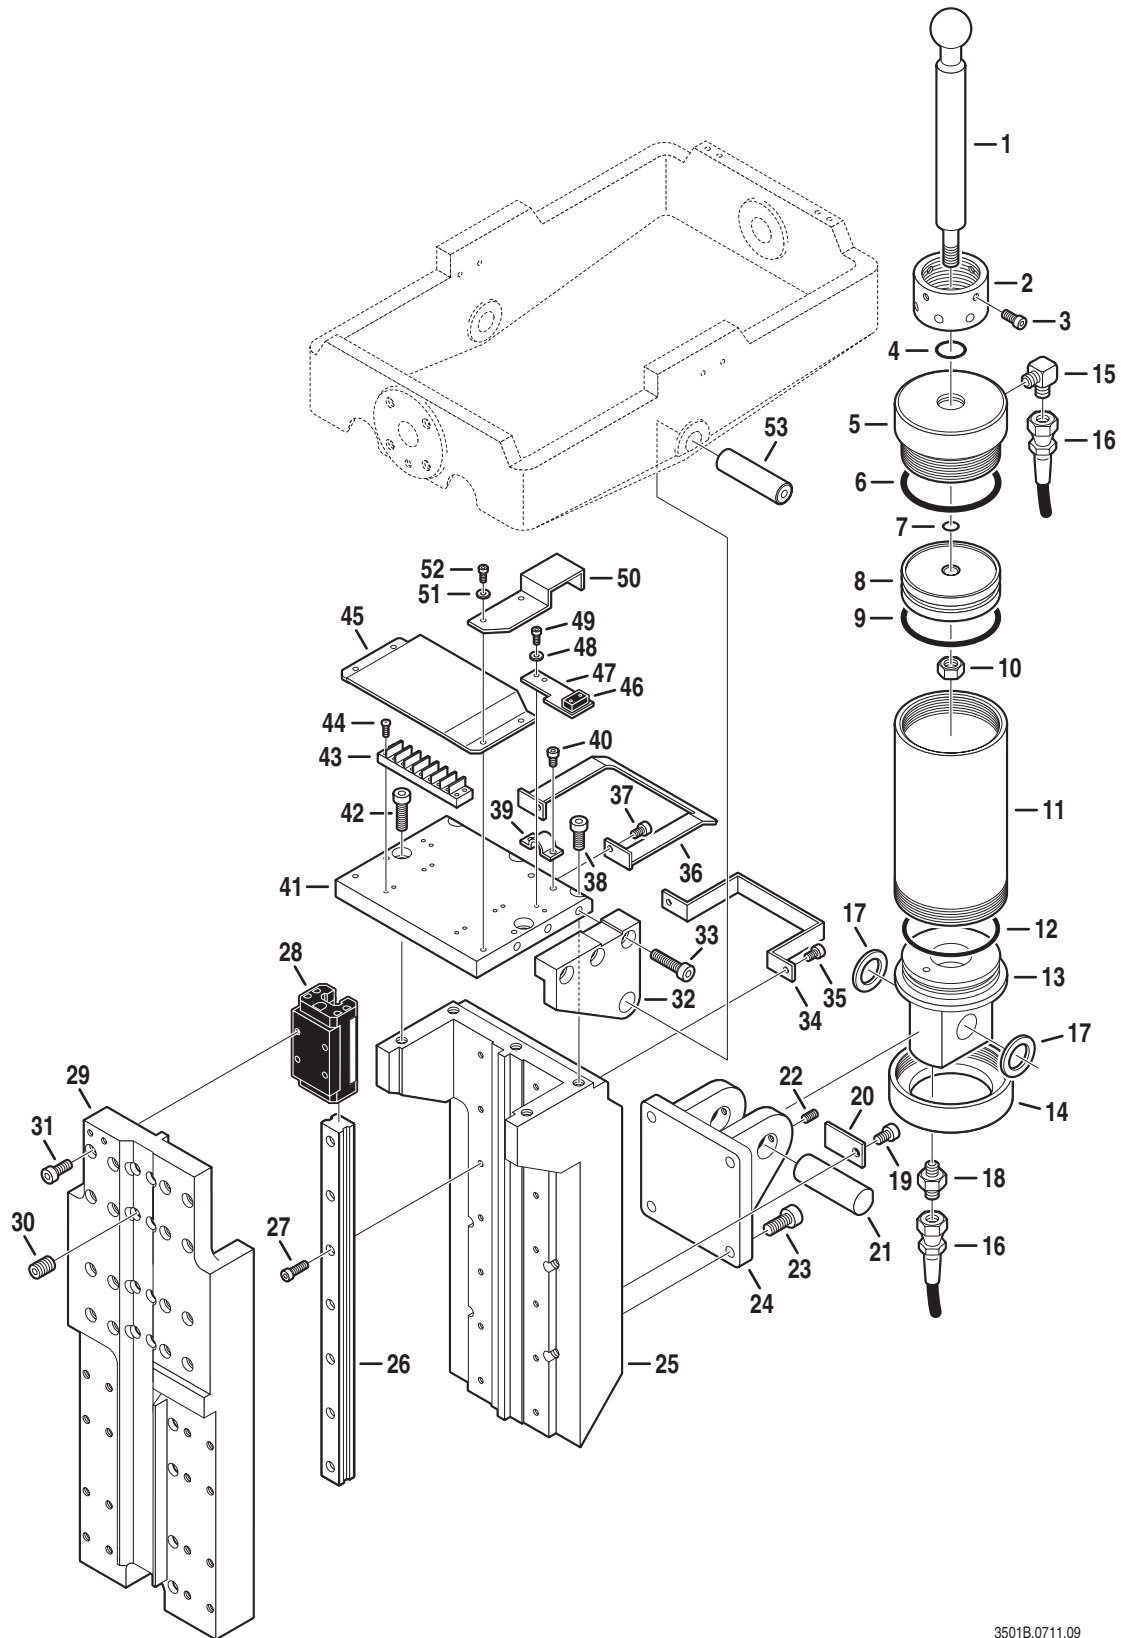


3501B.0711.09

# 9. TRENDELENBURG ASSEMBLY (continued)

Item	Part No.	Description	Qty.
49	D6-065-08	BOLT, allen, M4 x 12 .....	4
50	D2-035-30	COVER, micro-switch, right .....	1
	D2-035-31	COVER, micro-switch, left .....	1
51	D6-035-19	WASHER, flat, M4 .....	4
52	D6-065-08	BOLT, allen, M4 x 12 .....	4
53	D2-035-22	AXIS, Trendelenburg pivot .....	2

10. ELEVATION ASSEMBLY

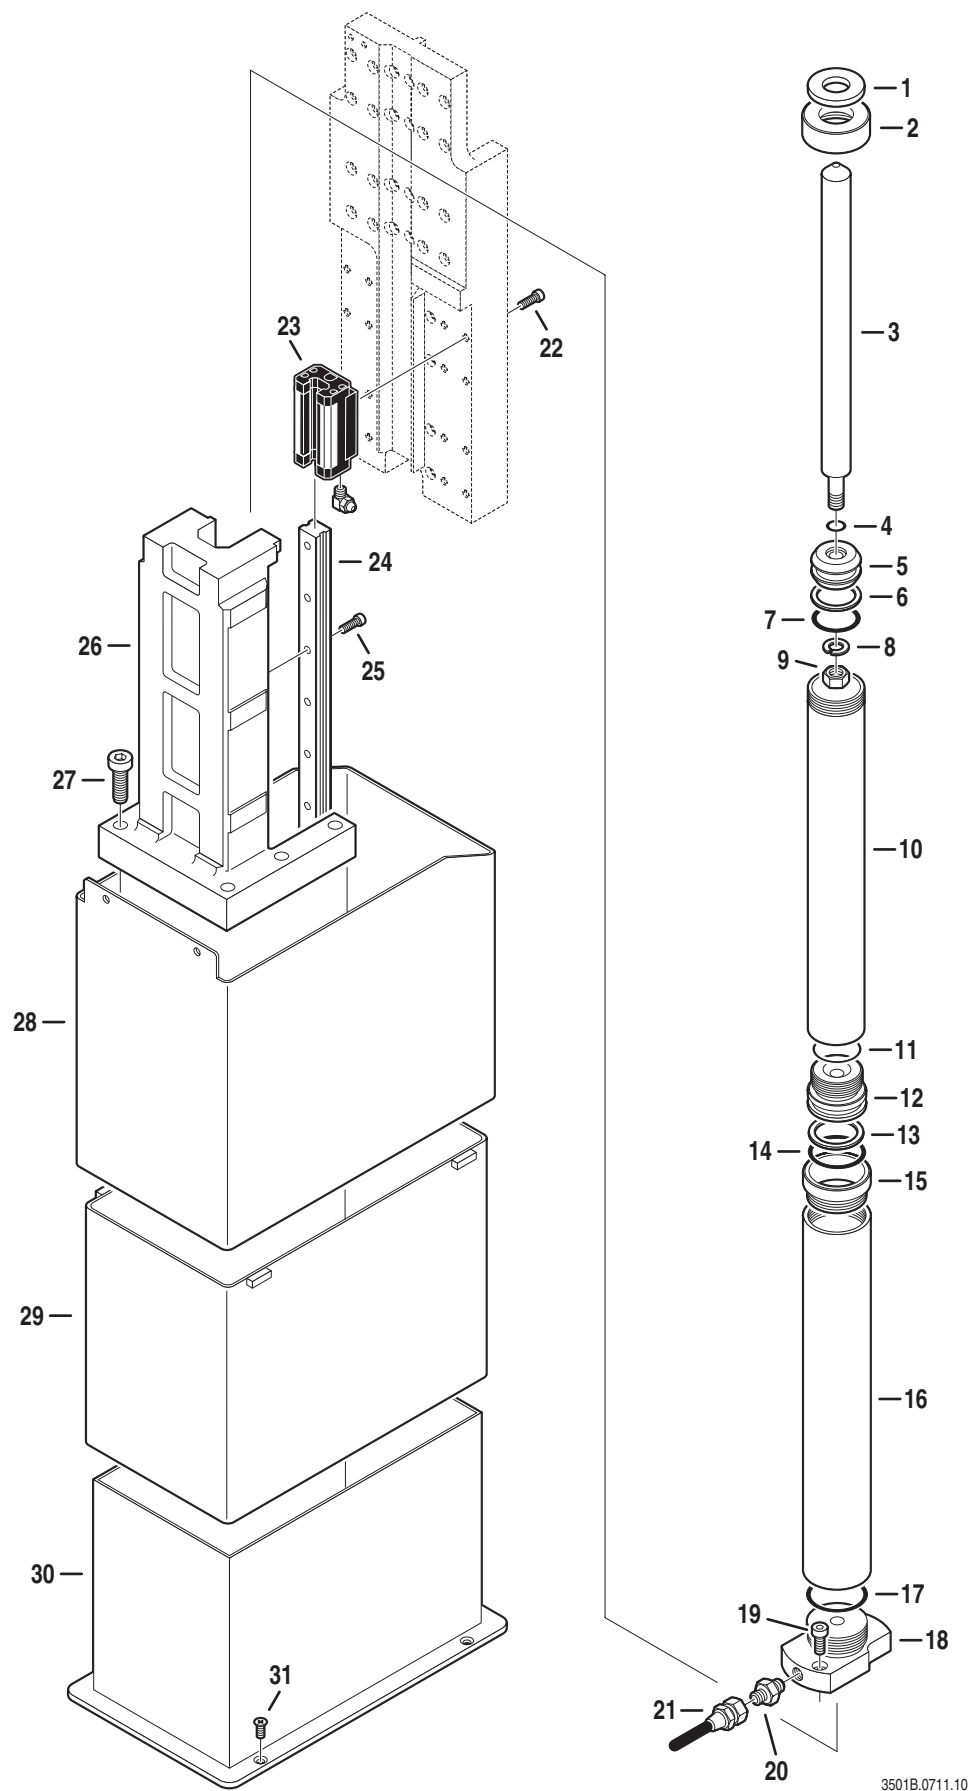


3501B.0711.10

## 10. ELEVATION ASSEMBLY

Item	Part No.	Description	Qty.
	D4-036-52	CYLINDER ASSEMBLY .....	1
1	D4-036-53	•CUSHION, rubber .....	1
2	----	•CAP .....	1
3	----	•ROD, primary piston .....	1
4	D4-010-56	•O-RING, P-10A .....	1
5	----	•PISTON, primary .....	1
6	D4-036-57	•RING, back-up .....	1
7	D4-050-01	•O-RING, P-29 .....	1
8	D6-010-42	•WASHER, lock, M10 .....	1
9	D6-010-43	•NUT, hex, M10 .....	1
10	----	•TUBE, secondary piston .....	1
11	D4-034-68	•O-RING, P-31 .....	1
12	----	•PISTON, secondary .....	1
13	D4-036-63	•RING, back-up .....	1
14	D4-010-54	•O-RING, P-36 .....	1
15	----	•CAP, elevation tube .....	1
16	----	•TUBE, elevation cylinder .....	1
17	D4-040-40	•O-RING, P-39 .....	1
18	----	•BASE, elevation cylinder .....	1
19	D6-010-38	BOLT, allen, M6 x 15 .....	2
20	D4-010-31	FITTING, flexible hose .....	1
21	----	HOSE, flexible (specify function) .....	A/R
22	D6-010-38	BOLT, allen, M6 x 15 .....	16
23	D3-065-27	SLIDE, bearing .....	4
	----	FITTING, grease .....	4
24	D3-035-63	SLIDE RAIL .....	2
25	D6-010-38	BOLT, allen, M6 x 15 .....	14
26	----	SLIDER SECTION #4 .....	1
27	D6-035-16	BOLT, allen, M12 x 40 .....	6
28	D2-035-56	SHROUD, elevation, upper .....	1
29	D2-035-57	SHROUD, elevation, middle .....	1
30	D2-035-58	SHROUD, elevation, lower .....	1
31	D6-050-31	SCREW, phillips, M5 x 15 .....	4

# 11. HYDRAULIC COMPONENTS

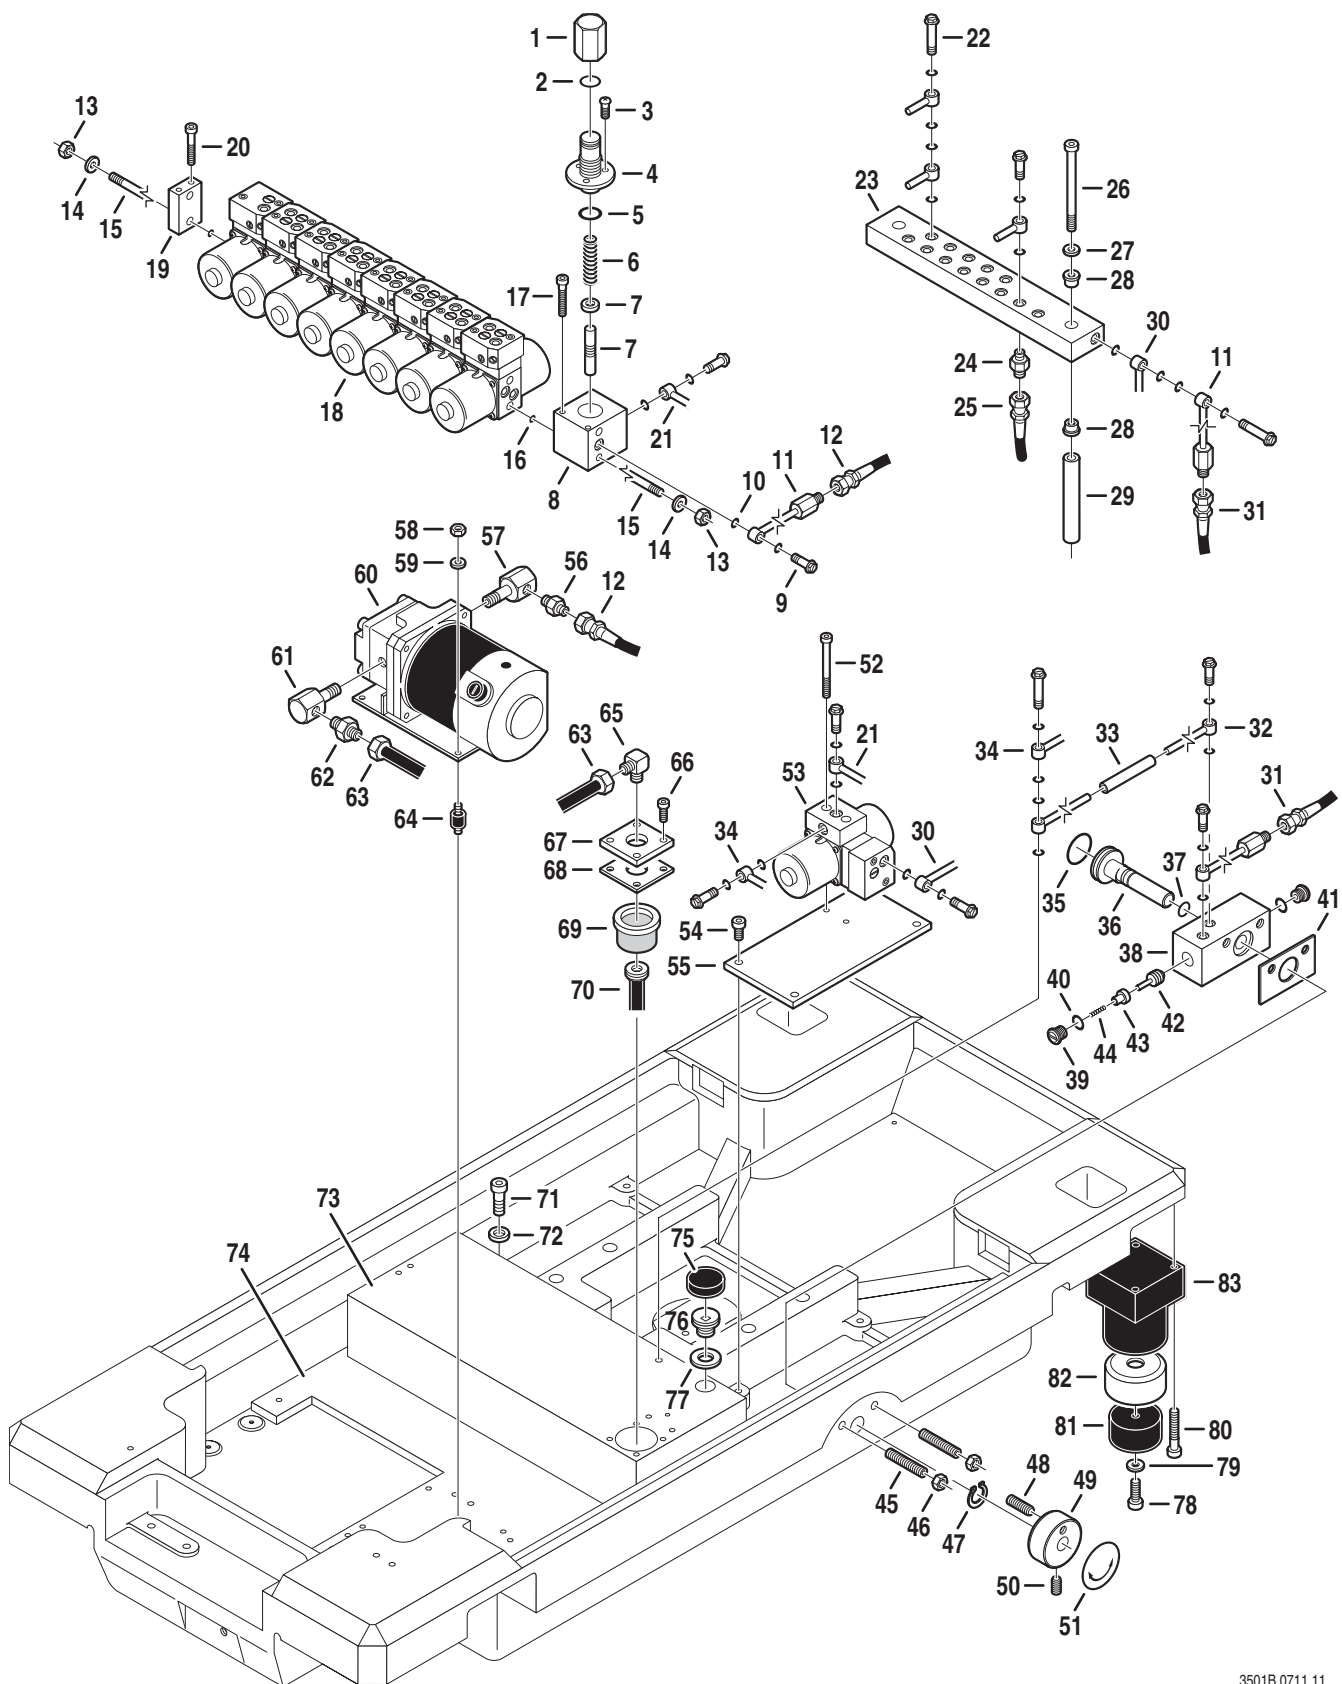


3501B.0711.11



## 11. HYDRAULIC COMPONENTS

Item	Part No.	Description	Qty.
--	D4-031-23	PRESSURE RELIEF VALVE .....	1
1	-----	•CAP, pressure relief valve (not available separately) .....	1
2	D4-031-67	•O-RING, P-10 .....	1
3	D6-034-14	•SCREW .....	3
4	-----	•BODY, pressure relief valve (not available separately) .....	1
5	D4-010-51	•O-RING, P-16 .....	1
6	D4-031-12	•SPRING .....	1
7	D4-031-23-4	•VALVE, relief, 5mm dia. (steel) .....	1
8	-----	•HOUSING, relief valve (5mm dia. valve) (not available separately) .....	1
9	D4-010-24	BOLT, plumbing, M6 .....	A/R
10	D4-010-08	O-RING, P-7 .....	A/R
11	D4-032-49	OIL LINE .....	A/R
12	D4-032-64	HOSE, flexible, pump return .....	1
13	D6-010-76	NUT, M5 .....	4
14	D6-010-77	WASHER, lock, M5 .....	4
15	D6-032-14	STUD, M5 x 345 .....	2
16	D4-010-52	O-RING, P-4 .....	A/R
17	D6-010-65	BOLT, allen, M5 x 35 .....	4
18	D4-067-33	ELECTRO / MINI VALVE ASSEMBLY, (3-way), 24vdc, elevation .....	A/R
	D4-067-35	ELECTRO / MINI VALVE ASSEMBLY, (4-way), 24vdc .....	A/R
19	D4-010-40	CAP, end .....	1
20	D6-010-64	BOLT, allen, M5 x 40 .....	2
21	-----	OIL LINE (specify function) .....	A/R
22	D4-010-26	BOLT, plumbing, M6 (long) .....	A/R
23	D4-036-66	TERMINAL, plumbing .....	1
24	D4-010-31	FITTING, flexible hose .....	A/R
25	-----	HOSE, flexible (specify function) .....	A/R
26	D6-032-13	BOLT, allen, M6 x 140 .....	2
27	D6-010-85	WASHER, flat, M6 .....	2
28	D6-031-16	BUSHING, isolation .....	4
29	D4-032-81	STAND-OFF .....	2
30	-----	OIL LINE (specify function) .....	A/R
31	-----	FLEXIBLE HOSE (specify function) .....	A/R
32	-----	OIL LINE (specify function) .....	A/R
33	D4-032-51	FLEXIBLE TUBE .....	1
34	-----	OIL LINE, (specify function) .....	A/R
--	D4-017-15	EMERGENCY BRAKE RELEASE ASSEMBLY .....	1
35	D4-041-15	•O-RING, P18 .....	1
36	D4-017-19	•PLUNGER .....	1
37	D4-010-08	•O-RING, P-7 .....	1
38	D4-017-16	•BLOCK, emergency brake release .....	1
39	D6-017-34	•PLUG, cap .....	2
40	D4-010-08	•O-RING, P-7 .....	2
41	D6-017-32	•SPACER .....	1
42	D4-017-18	•PILOT PLUNGER .....	1
43	D4-017-17	•VALVE .....	1
44	D6-017-33	•SPRING .....	1
45	D6-035-06	•SCREW, set, M6 x 25 .....	2
46	D6-010-41	•NUT, hex, M6 .....	2
47	D6-017-31	•RING, retaining .....	1
48	D6-010-87	•SCREW, set, M6 x 20 .....	1
49	D6-017-30	•KNOB .....	1

# 11. HYDRAULIC COMPONENTS (continued)

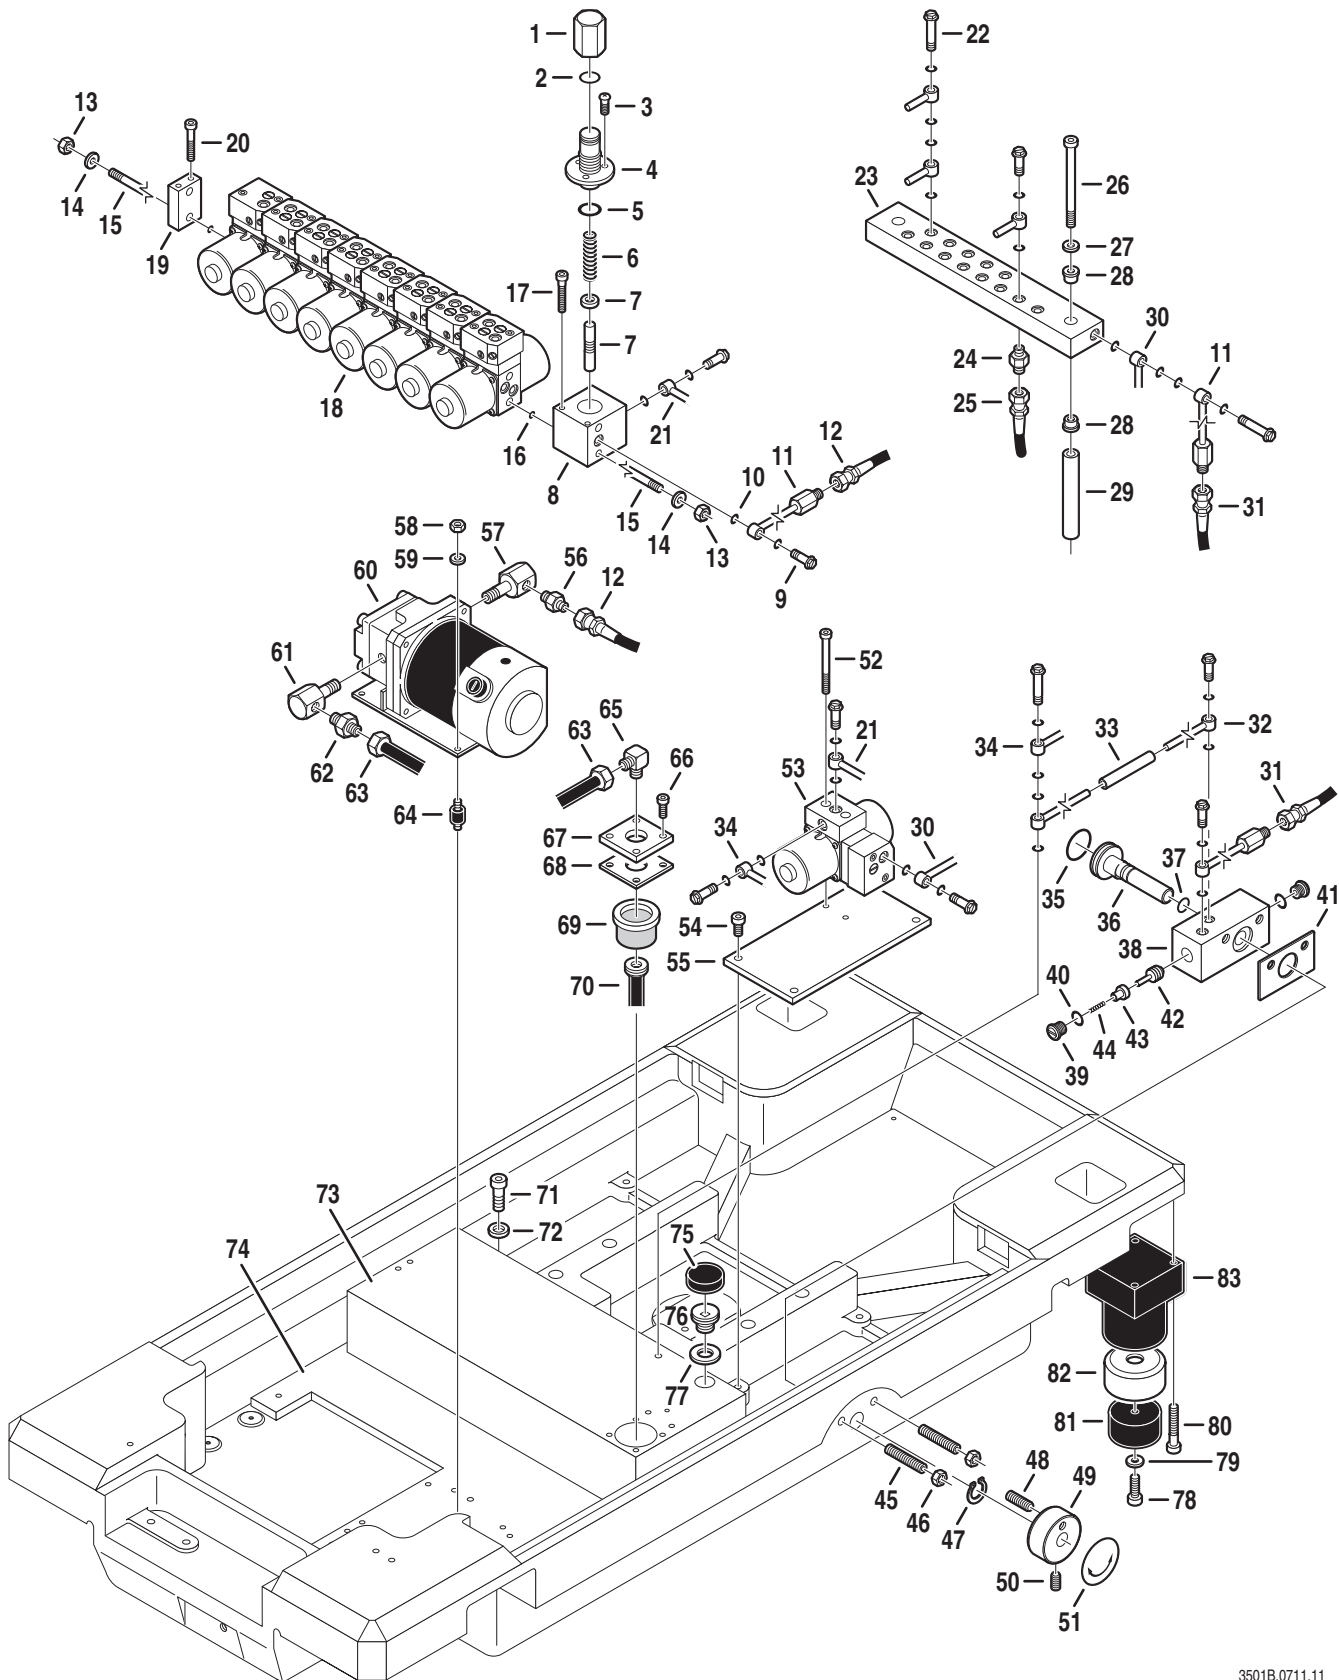


3501B.0711.11

## 11. HYDRAULIC COMPONENTS (continued)

Item	Part No.	Description	Qty.
50	D6-060-38	•SCREW, set, M5 x 10 .....	1
51	D6-017-29	•DECAL .....	1
52	D6-010-99	BOLT, allen, M5 x 60 .....	2
53	D4-067-34	ELECTRO / MINI VALVE ASSEMBLY (3-way), 24vdc, brake (blue dot) .....	A/R
54	D6-010-73	BOLT, allen, M6 x 12 .....	4
55	D1-036-04	PLATE, electro / mini valve assembly mounting .....	1
56	D6-032-63	FITTING, flexible hose .....	1
57	D5-034-33	FITTING .....	1
58	D6-010-76	NUT, hex, M5 .....	4
59	D6-010-77	WASHER, lock, M5 .....	4
60	D4-034-32	PUMP / MOTOR ASSEMBLY .....	1
61	D5-034-33-1	FITTING .....	1
62	D4-032-67	FITTING, flexible hose .....	1
63	D4-032-66	TUBE, suction .....	1
64	D4-031-65	ISOLATION MOUNT, motor .....	4
65	D4-030-12	FITTING, hydraulic, 90° .....	1
66	D6-010-67	BOLT, allen, M5 x 15 .....	4
67	D4-031-14	COVER, oil tank .....	1
68	D4-031-13	GASKET, oil tank cover .....	1
69	D4-031-11	STRAINER, oil .....	1
70	D4-030-19	TUBE, induction .....	1
71	D6-010-51	BOLT, allen, M6 x 10 .....	2
72	D6-010-85	WASHER, flat, M6 .....	2
73	D4-036-64	RESERVOIR, oil tank .....	1
74	D4-036-65	PLATE, oil tank receiving .....	1
75	D4-010-39	CAP, oil filler .....	1
76	D4-010-38	FITTING, oil filler .....	1
77	D4-010-37	GASKET, oil filler .....	1
78	D6-010-30	BOLT, allen, M6 x 20 .....	4
79	D6-010-36	WASHER .....	4
80	D6-010-39	BOLT, allen, M6 x 45 .....	16
81	D4-031-96	PAD, brake, self-leveling, hard .....	2
	D4-031-97	PAD, brake, self-leveling, soft .....	2
82	D4-031-95-1	SEAT, brake, rubber .....	4
83	D4-035-47	CYLINDER ASSEMBLY, brake .....	4

## 12. ELECTRO / MINI-VALVE ASSEMBLY

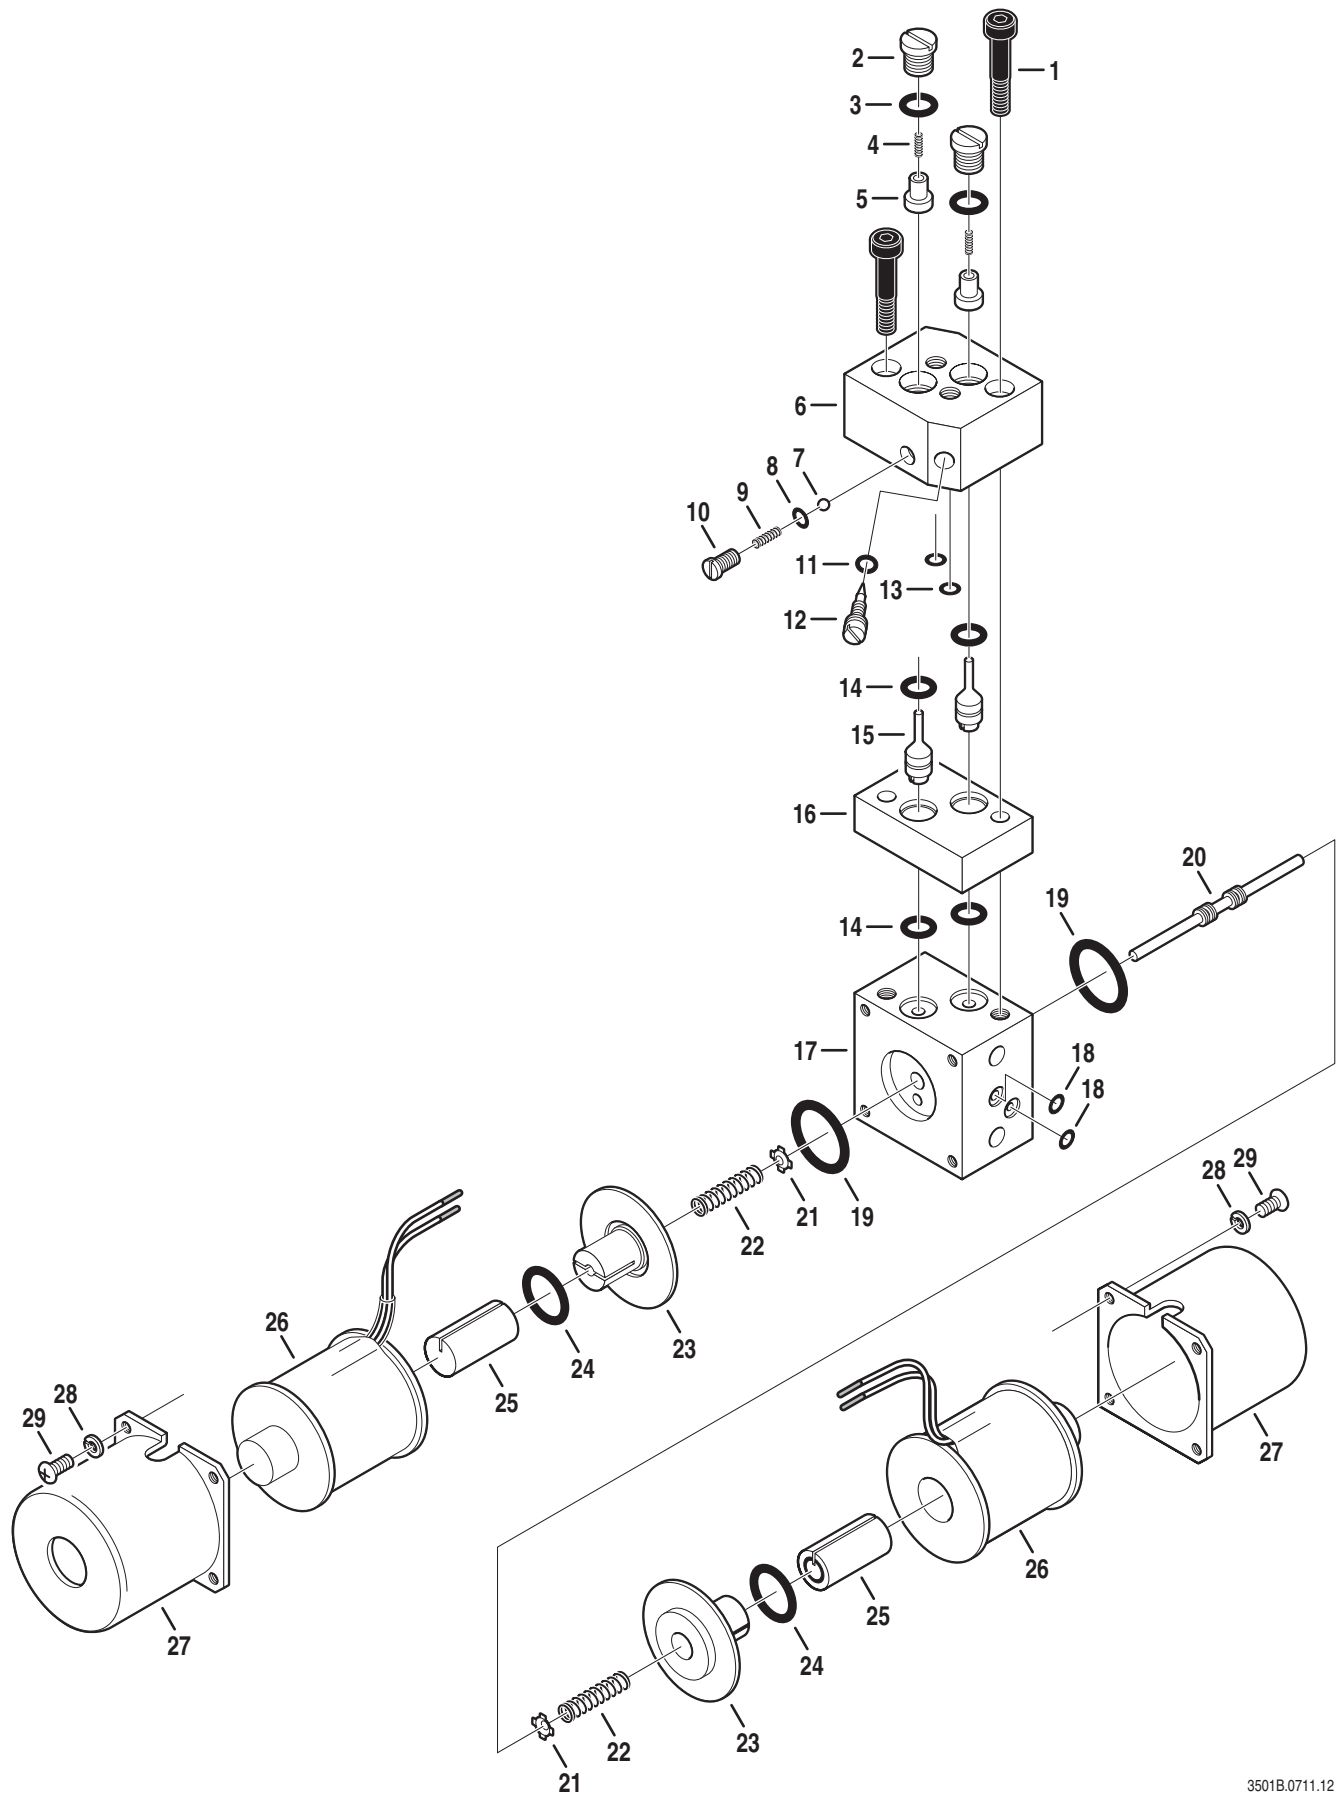


3501B.0711.12

**12. ELECTRO / MINI-VALVE ASSEMBLY**

Item	Part No.	Description	Qty.
1	D6-010-65	BOLT, allen, M5x35 .....	2
2	D4-010-41	PLUG, cap .....	A/R
3	D4-010-08	O-RING, P-7 .....	A/R
4	D4-010-42	SPRING, return .....	A/R
5	D4-010-25	VALVE, non-return .....	A/R
6	----	VALVE BLOCK, 4-way (not available separately) .....	A/R
	----	VALVE BLOCK, 3-way (not available separately) .....	A/R
7	----	BALL, check (not available separately) .....	A/R
8	D4-050-12	O-RING, P-5 .....	A/R
9	----	SPRING (not available separately) .....	A/R
10	----	PLUG (not available separately) .....	A/R
11	D4-010-20	O-RING, P-3 .....	A/R
12	----	VALVE, needle, speed control (not available separately) .....	A/R
13	D4-010-19	O-RING, P-6 .....	A/R
14	D4-010-01	O-RING, P-8 .....	A/R
15	----	PILOT PLUNGER (not available separately) .....	A/R
16	----	VALVE BLOCK (not available separately) .....	A/R
17	----	VALVE BLOCK (not available separately) .....	A/R
18	D4-010-52	O-RING, P-4 .....	A/R
19	D4-010-51	O-RING, P16 .....	A/R
20	----	SPOOL VALVE (not available separately) .....	A/R
21	D4-034-28	RETAINER, spool valve .....	A/R
22	D4-034-29	SPRING, return, spool valve .....	A/R
23	----	GUIDE, bushing (not available separately) .....	A/R
24	D4-010-14	O-RING, P-12 .....	A/R
25	D4-034-31	PLUNGER, spool valve .....	A/R
26	D5-067-37	SOLENOID, 24VDC .....	A/R
	D5-067-02	•PIN, connector .....	A/R
27	D5-034-37	HOUSING, solenoid .....	A/R
28	D6-010-78	WASHER, lock, M3 .....	8
29	D6-010-79	SCREW, phillips, M3x5 .....	8

### 13. PUMP & ELECTRICAL COMPONENTS

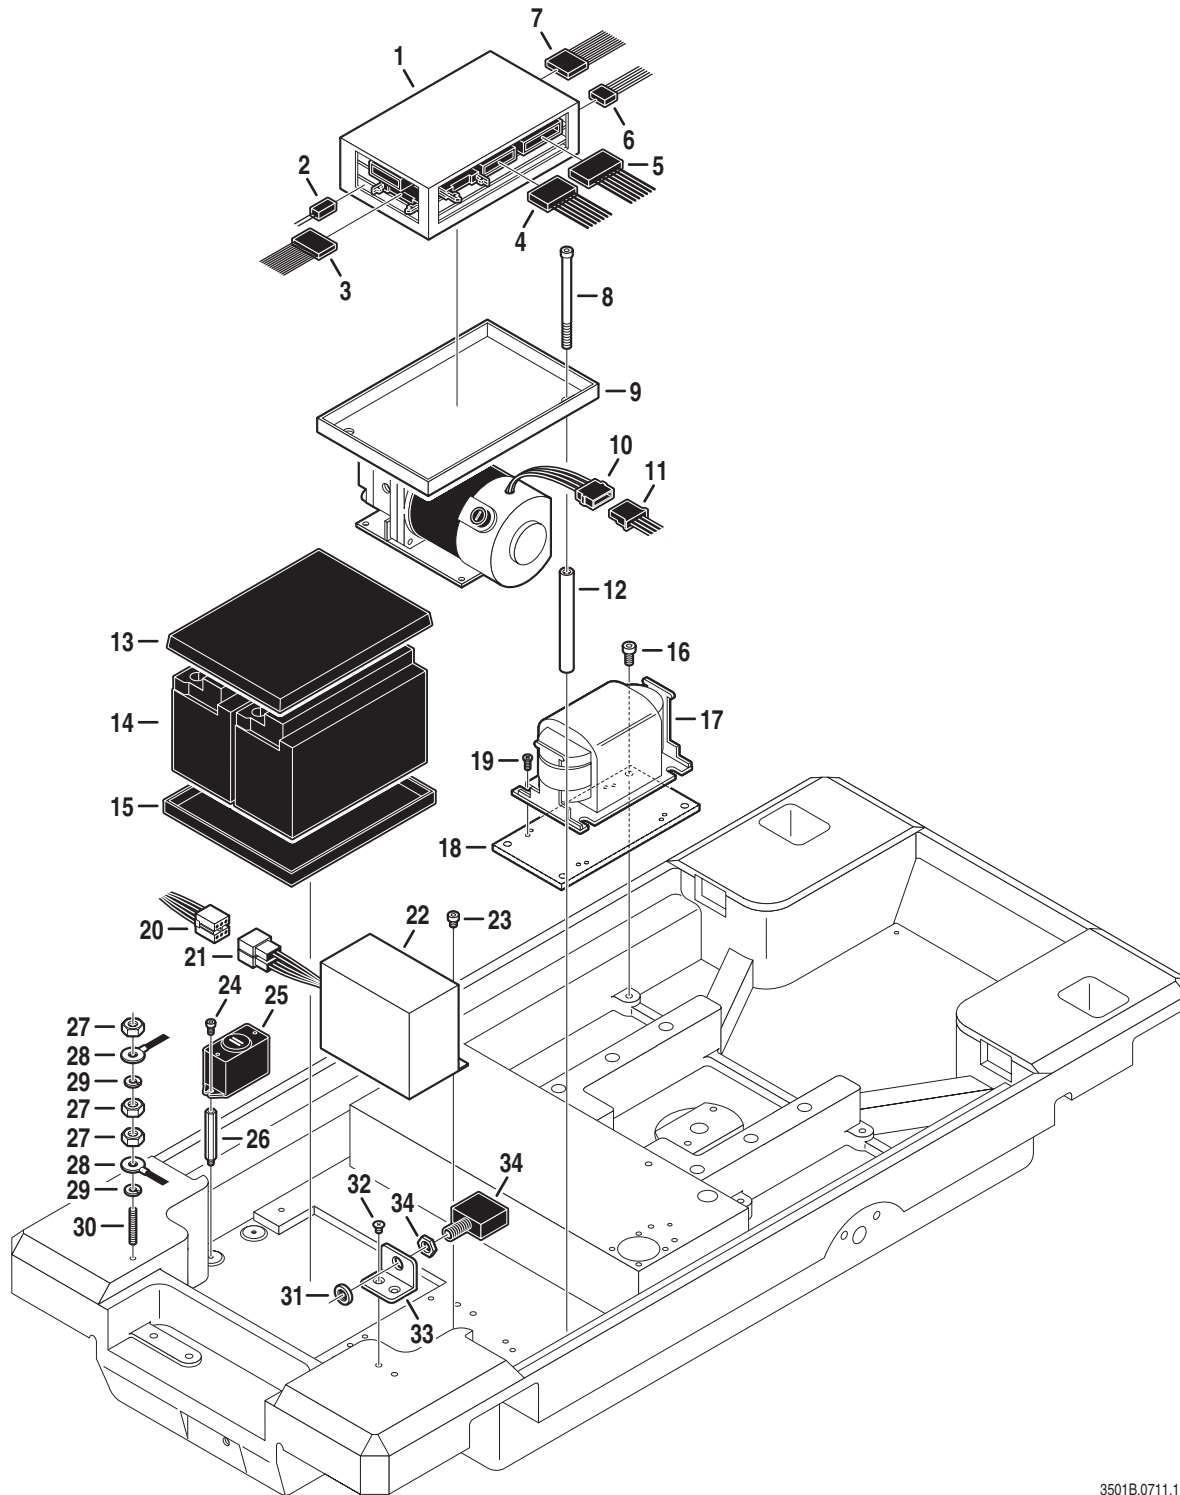


3501B.0711.13

### 13. PUMP & ELECTRICAL COMPONENTS

Item	Part No.	Description	Qty.
1	D5-036-02	RELAY BOX .....	1
2	D5-067-32	CONNECTOR, 2-pin, female .....	1
3	D5-067-30	CONNECTOR, 26-pin, female (CN-10) .....	1
4	D5-067-28	CONNECTOR, 16-pin, female (CN-1A) .....	1
5	D5-067-27	CONNECTOR, 20-pin, female (CN1B) .....	1
6	D5-067-26	CONNECTOR, 7-pin, female (CN-7) .....	1
7	D5-067-24	CONNECTOR, 12-pin, female (CN-3) .....	1
8	D6-032-21	BOLT, allen, M5 x 105.....	2
9	D1-032-23	TRAY, relay box .....	1
10	D5-067-33	CONNECTOR, 4-pin, female .....	1
11	D5-067-34	CONNECTOR, 4-pin, male .....	1
12	D1-032-22	STAND-OFF .....	2
13	D1-032-21	COVER, battery .....	1
14	D5-032-43	BATTERY, 12V .....	2
15	D1-032-20	TRAY, battery .....	1
16	D6-032-18	BOLT, allen .....	4
17	D5-035-21	TRANSFORMER .....	1
18	D1-036-03	PLATE, transformer mounting .....	1
19	D6-032-17	SCREW, phillips .....	4
20	D5-032-60	CONNECTOR, 6-pin, male .....	2
21	D5-032-59	CONNECTOR, 6-pin, female .....	1
22	D5-067-22	CAPACITOR / RECTIFIER UNIT .....	1
23	D6-010-28	BOLT, allen, M5 x 6 .....	2
24	D6-060-07	BOLT, allen, M4 x 8 .....	2
25	D5-034-49	BUZZER .....	1
26	D6-034-13	STAND-OFF .....	2
27	D6-010-76	NUT, hex, M5 .....	3
28	----	GROUND WIRE .....	A/R
29	D6-017-28	WASHER, lock, M5 .....	2
30	D6-035-02	SCREW, set, M5 x 25 .....	1
31	D6-067-22	NUT .....	1
32	D6-067-23	SCREW, phillips, countersunk, M4 x 8 .....	2
33	D5-067-35	BRACKET, circuit breaker .....	1
34	D5-067-36	CIRCUIT BREAKER ASSEMBLY, 15A .....	1

# 14. BASE & ELECTRICAL COMPONENTS

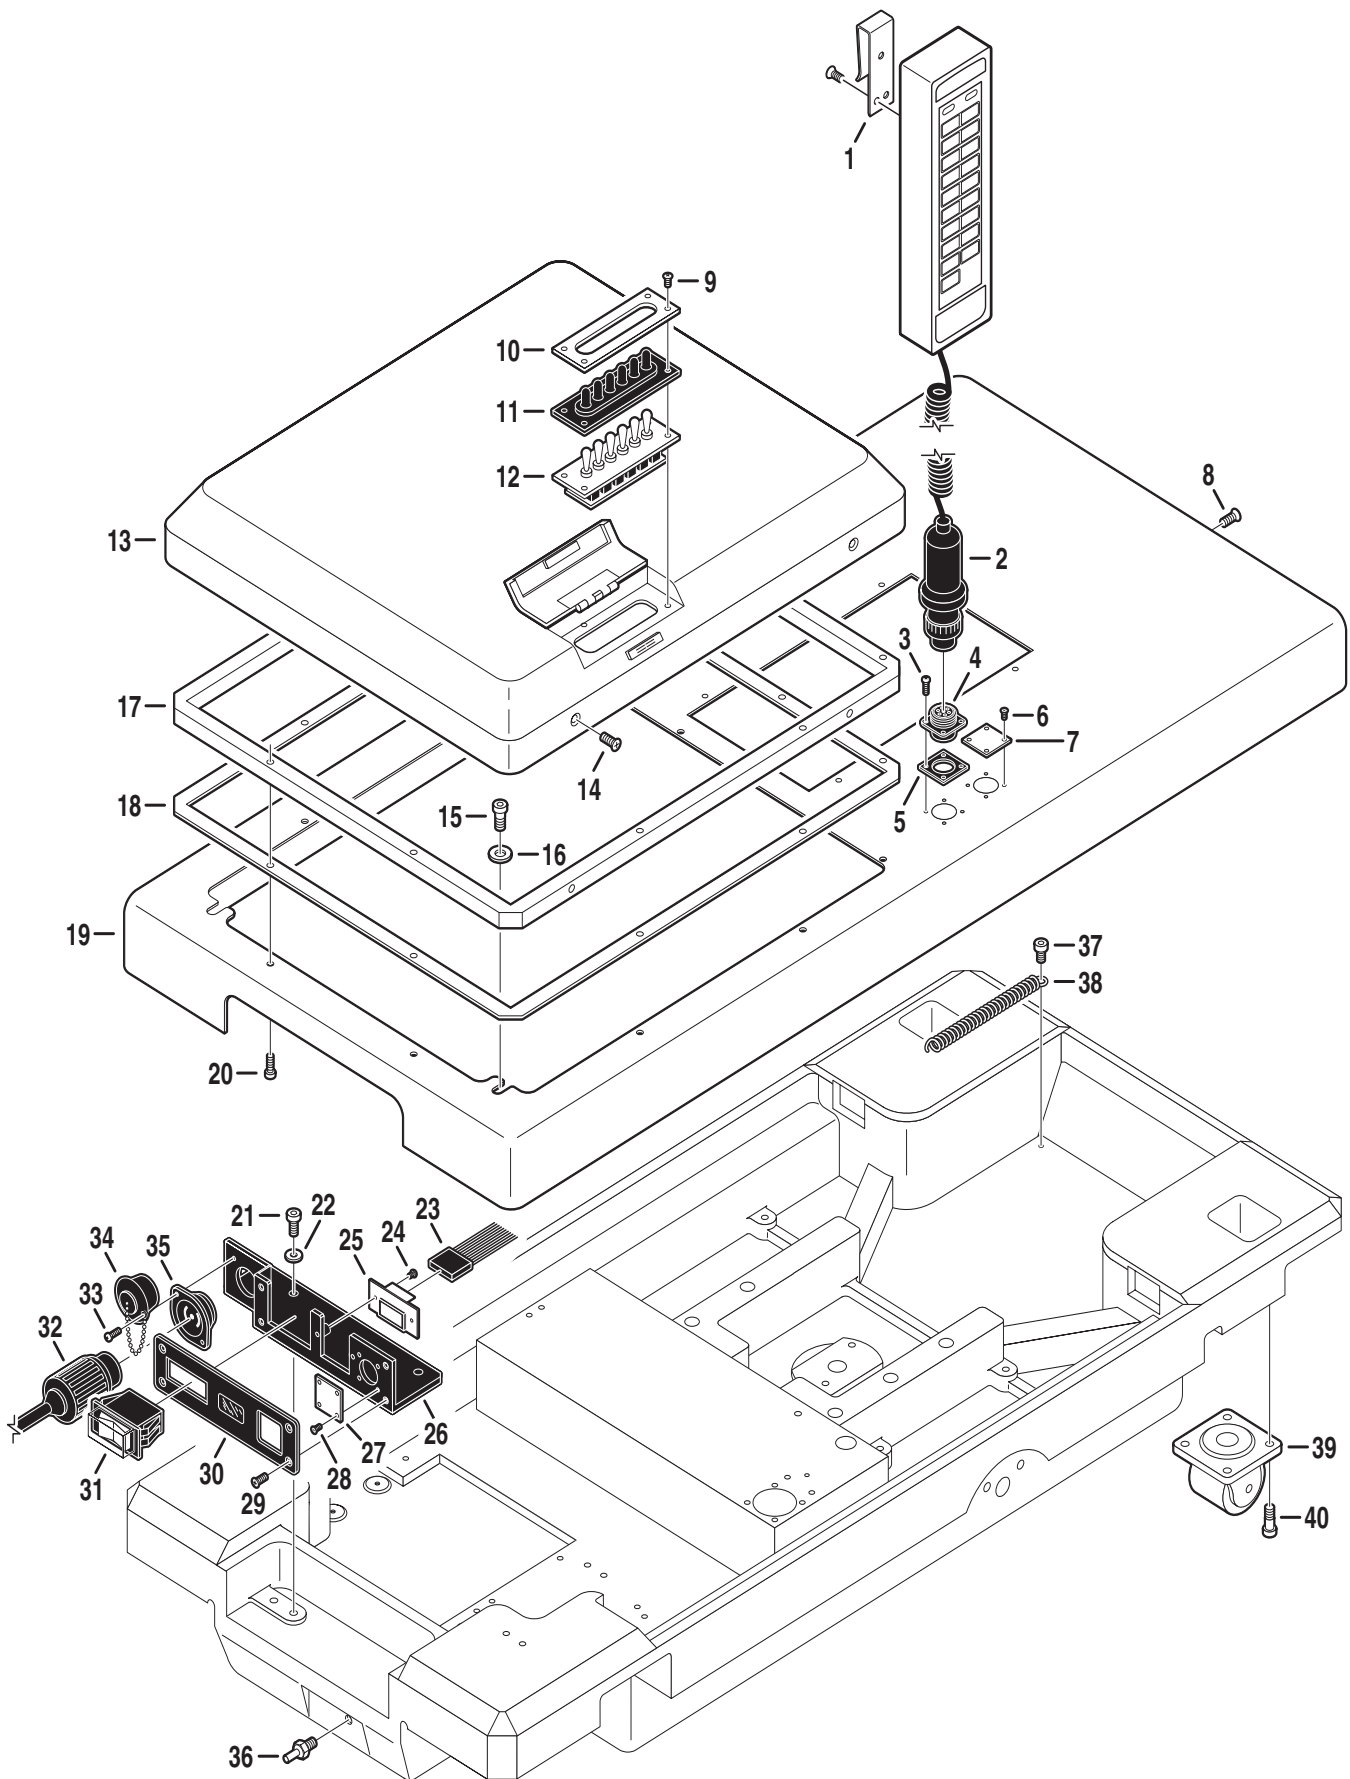

2501B.0711.14



## 14. BASE & ELECTRICAL COMPONENTS


Item	Part No.	Description	Qty.
	D5-035-18	PENDANT CONTROL ASSEMBLY .....	1
1	D5-031-14	•HOOK, pendant .....	1
2	D5-035-22	•CORD ASSEMBLY, pendant control .....	1
3	D6-011-20	SCREW, phillips, countersunk, M3 x 10 .....	4
4	D5-034-06	CONNECTOR, 7-pin, female .....	1
5	D5-034-05	GASKET, connector .....	1
6	D6-067-03	SCREW, phillips, countersunk, M3 x 6 .....	4
7	D6-035-39	COVER .....	1
8	D6-050-37	SCREW, phillips, M4 x 8 .....	1
9	D6-036-01	SCREW, phillips, M4 x 8 .....	4
10	D5-034-38	FACEPLATE, 6-switch .....	1
11	D5-034-39	COVER, switch assembly .....	1
12	D5-034-40	SWITCH PLATE ASSEMBLY .....	1
	D5-034-41	•SWITCH, toggle, 2-position .....	6
13	D1-034-01	COVER, service access .....	1
14	D6-050-37	SCREW, phillips, countersunk, M4 x 8 .....	4
15	D6-010-51	BOLT, allen, M6 x 10 .....	2
16	D6-010-85	WASHER, flat, M6 .....	2
17	D1-034-03	FRAME .....	1
18	D1-034-04	GASKET .....	1
19	D3-035-64	HOUSING, base .....	1
20	D6-010-67	BOLT, allen, M5 x 15 .....	10
21	D6-010-51	BOLT, allen, M6 x 10 .....	3
22	D6-010-40	WASHER, lock, M6 .....	3
23	D5-067-38	CONNECTOR, 12-pin, female .....	1
24	D6-067-25	SCREW .....	2
25	D5-067-39	BATTERY INDICATOR ASSEMBLY .....	1
26	D1-036-02	BRACKET .....	1
27	D5-065-06	COVER .....	1
28	D6-034-05	SCREW, phillips, M6 x 7 .....	4
29	D6-060-41	SCREW, allen, M4 x 3 .....	4
30	D1-036-01	FACEPLATE .....	1
31	D5-034-46	SWITCH, on/off (includes cover) .....	1
32	D5-066-31	POWER CORD ASSEMBLY .....	1
33	D6-034-05	SCREW, phillips, M6 x 7 (plated) .....	2
34	D5-066-32	COVER, w/chain .....	1
35	D5-066-30	CONNECTOR, 3-prong .....	1
36	D6-034-20	EQUALIZATION TERMINAL .....	1
37	D6-010-51	BOLT, allen, M6 x 10 .....	1
38	D6-065-28	SPRING .....	1
39	D1-010-30	CASTER, 105HBP .....	4
40	D6-010-96	BOLT, allen, M10 x 20 .....	16

**SPECIAL TOOLS & MAINTENANCE ITEMS**

Item	Part No.	Description	Qty.
	6-050-02	GAUGE, oil pressure .....	A/R
	D6-010-89	GREASE, slider .....	2.8 oz
	D6-010-90	OIL, hydraulic .....	Qt
	D4-011-02	HOSE, hydraulic, specify length .....	A/R
	D4-011-03	FITTING, hydraulic hose end .....	A/R





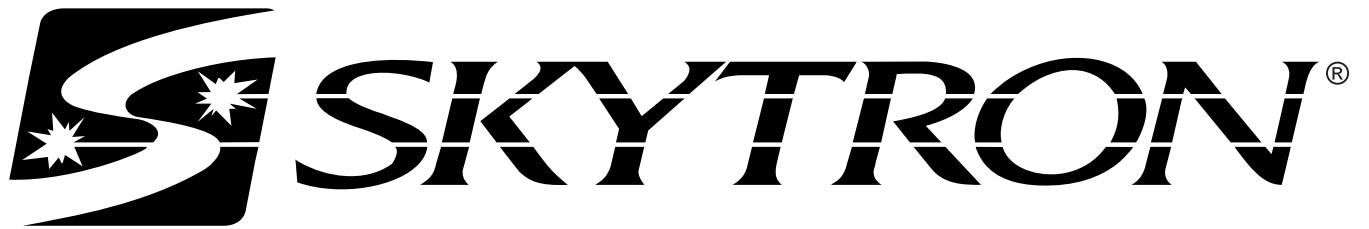

***SURGICAL TABLE  
MAINTENANCE MANUAL***



***MODEL 3501B EZ SLIDE***



# TABLE OF CONTENTS

Title	Page
SECTION I HYDRAULIC SYSTEM .....	6
1-1. General .....	6
1-2. Component Operation .....	7
a. Motor/Pump Operation .....	7
b. Pressure Relief Valve .....	7
c. Mini-Valves .....	8
d. Hydraulic Cylinders (Slave Cylinders) .....	10
e. Elevation Cylinder Return Circuit .....	12
f. Brake System .....	12
g. Emergency Brake Release .....	13
h. Flex/Reflex System .....	13
1-3. Hydraulic Adjustments .....	14
a. Fluid Level .....	14
b. Bleeding The Hydraulic System .....	14
c. Pressure Relief Valve .....	14
d. Speed Controls .....	15
SECTION II MECHANICAL TABLE ADJUSTMENTS .....	16
2-1. Back Section Gear Mesh Adjustment .....	16
2-2. Hydraulic Cylinder Adjustment .....	16
a. Back Section .....	16
b. Leg Section .....	16
c. Trendelenburg Cylinder Ball Joint .....	17
2-3. Head Section Adjustment .....	17
2-4. Slide Roller Adjustment .....	18
2-5. Side Rails .....	18
2-6. Casters .....	18
SECTION III HYDRAULIC TROUBLESHOOTING .....	19
3-1. Precautions .....	19
3-2. Troubleshooting Notes .....	19
3-3. ELEVATION DIAGNOSIS CHART .....	20
3-4. TRENDELENBURG DIAGNOSIS CHART .....	21
3-5. LATERAL - TILT DIAGNOSIS CHART .....	22
3-6. FLEX SYSTEM DIAGNOSIS CHART .....	23
3-7. BACK SECTION DIAGNOSIS CHART .....	24
3-8. LEG SECTION DIAGNOSIS CHART .....	25
3-9. SLIDE DIAGNOSIS CHART .....	26
3-10. KIDNEY LIFT DIAGNOSIS CHART .....	27
3-11. BRAKE CIRCUIT DIAGNOSIS CHART .....	28
3-12. Flexible Hose Identification and Placement .....	29
3-13. Kidney Lift System .....	30

## TABLE OF CONTENTS (continued)

Title	Page
SECTION IV ELECTRICAL SYSTEM .....	32
4-1. General .....	32
4-2. Components .....	32
SECTION V ELECTRICAL TROUBLESHOOTING .....	34
5-1. General .....	34
5-2. Troubleshooting Notes .....	34
5-3. Main Switch .....	34
5-4. Batteries .....	35
5-5. Capacitor / Rectifier / AC120V Transformer .....	36
5-6. Pendant Control .....	37
5-7. Auxiliary Switches .....	39
5-8. Relay Box .....	40
5-9. Main Wire Harness Continuity Tests .....	42
5-10. Solenoids .....	43
5-11. Motor/Pump Assembly .....	44
5-12. Return-to-Level / Positioning Inhibit Micro-Switches .....	45
5-13. Micro-Switch Troubleshooting .....	46



### WARNING



Indicates a possibility of personal injury.

### NOTE

Indicates important facts or helpful hints.



### CAUTION



Indicates a possibility of damage to equipment.



**BASIC RECOMMENDED TOOLS:**

1/8". 1/4" STRAIGHT BLADE SCREWDRIVERS  
 #2 PHILLIPS SCREWDRIVER  
 HYDRAULIC PRESSURE GAUGE SKYTRON P.N. 6-050-02  
 METRIC ALLEN WRENCHES 1.5mm-8mm  
 ADJUSTABLE CRESCENT WRENCH  
 DIGITAL VOLTMETER, TRUE RMS  
 METRIC OPEN END WRENCHES 7mm-18mm  
 LEVEL (CARPENTERS)  
 GREASE GUN  
 BEARING GREASE P.N. D6-010-89-1

**BASIC RECOMMENDED MAINTENANCE PROCEDURES**

The basic items notes below should be inspected at a minimal interval period of 6 months (dependant on usage). For optimal usage, safety and longevity of the product, have it serviced only by an authorized Skytron representative with authentic Skytron replacement parts.


- Check Power Cord (if applicable)
- Check Pendant Control (if applicable)
- Check Oil Level in Reservoir
- Check For Hydraulic Leaks
- Check Pressure Relief Valve Setting
- Check All Table Functions
- Check Side Rails and Gravity Stops
- Check Velcro
- Check Lateral Tilt Housing Bolts
- Lubricate Elevation Slider Assembly with Mobilux EP (Extreme Pressure) Grease P/N D6-010-89-1
- Tighten X-Ray Top Stand-Offs, Use Blue Loc-Tite
- Lubricate Casters
- Check brake pads for wear and inspect brake cylinders for proper operation.
- Inspect the Trendelenburg Cylinder & Ball Joint Retainer Nut



Only facility-authorized Skytron trained, maintenance personnel should troubleshoot the Skytron 3501B EZ SLIDE Surgical Table. Trouble shooting by unauthorized personnel could result in personal injury or equipment damage.

How to contact us:  
 SKYTRON  
 5000 36th St. SE, Grand Rapids, MI 49512  
 PH: 1-800-759-8766 (SKY-TRON)  
 FAX: 616-957-5053

# 3501B EZ SLIDE EQUIPMENT LABELS

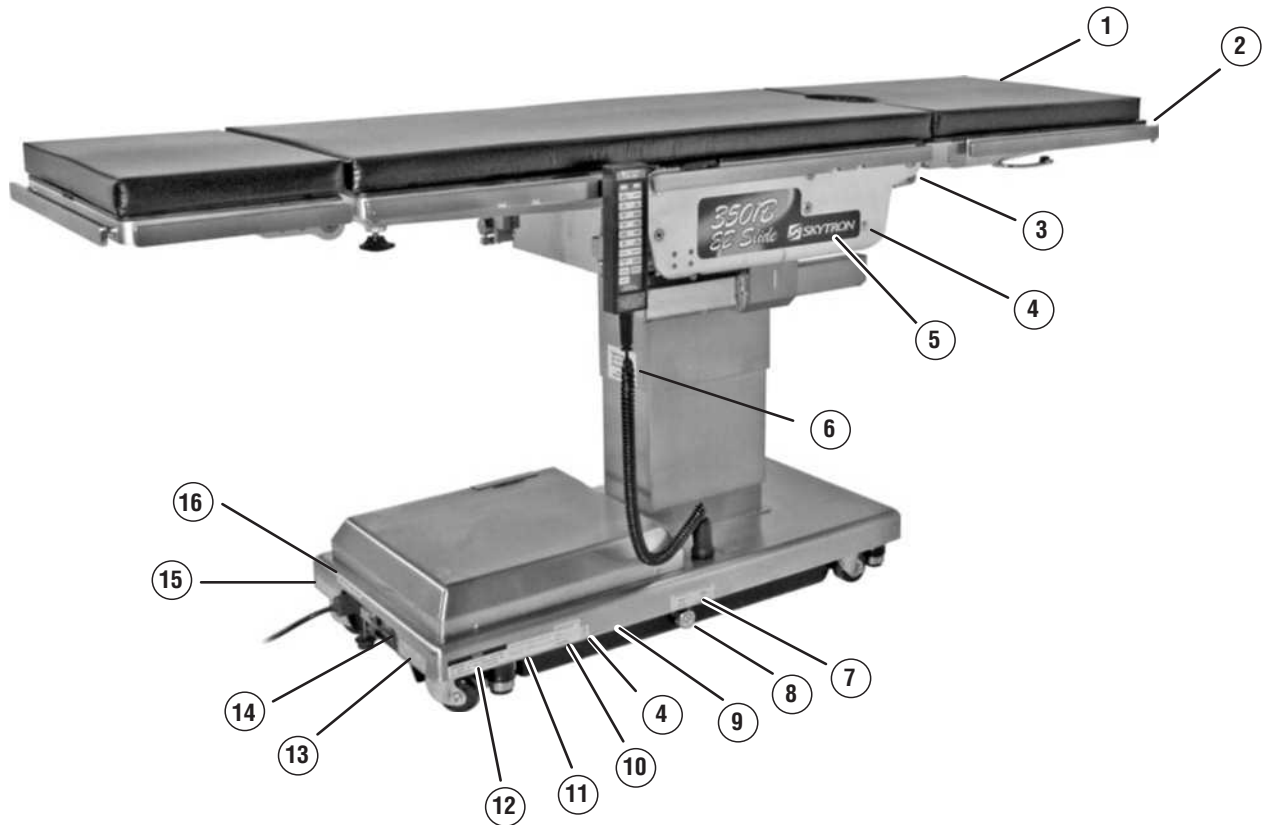

D6-032-47

**WARNING**  
USE HEAD SECTION AS FOOT EXTENSION ONLY - WHEN REVERSING PATIENT ON TABLE REFER TO OPERATOR MANUAL.

D6-032-46

**WARNING**  
DO NOT SIT ON END OF LEG SECTION(S) AS LOADS IN EXCESS OF 140 LBS. MAY CAUSE INSTABILITY THAT COULD CAUSE THE TABLE TO BE TIPPED OVER.

**SKYTRON**  
GRAND RAPIDS, MI  
1-800-SKYTRON  
(616) 957-0500

MODEL NO.  120V ☐ 60 Hz ☐ 5 AMP

SERIAL NO.

FUSE  AMP FAST ACTING

MANUFACTURED BY MIZUHO IKA CO., LTD., TOKYO, JAPAN

D6-017-05



D3-035-60 right D3-035-61 left



D6-035-38

**Table Capacity:**  
Lift 700 lbs.  
Articulate 600 lbs.  
See Operators Manual for Limitations.

D6-065-26



D6-067-33



L1-010-00



D6-011-34

THIS PRODUCT COMPLIES WITH RADIATION PERFORMANCE STANDARD 21 CFR 101.10.100 AT THE TIME OF MANUFACTURE

Manufacturer:

Model No.:

SKYTRON

D6-011-32

**DANGER - EXPLOSION HAZARD. DO NOT USE IN THE PRESENCE OF FLAMMABLE ANAESTHETICS**  
**DANGER - RISQUE D'EXPLOSION. NE PAS EMPLOYER EN PRESENCE D'ANESTHESIQUES INFLAMMABLES**

D6-031-43

**DANGER**  
**POSSIBLE EXPLOSION HAZARD IF USED IN THE PRESENCE OF FLAMMABLE ANESTHETICS.**

D6-065-22

**CAUTION**  
To reduce the risk of electric shock, do not move cover or back. Refer servicing to qualified service personnel. Refer to accompanying documents.

D6-034-21




D6-065-21

Grounding reliability can only be achieved when the equipment is connected to an equivalent receptacle marked "Hospital Only" or "Hospital Grade"

D6-067-27

TWIST TO LOCK OR RELEASE PLUG

## 3501B EZ Slide General Purpose Surgical Table Specifications

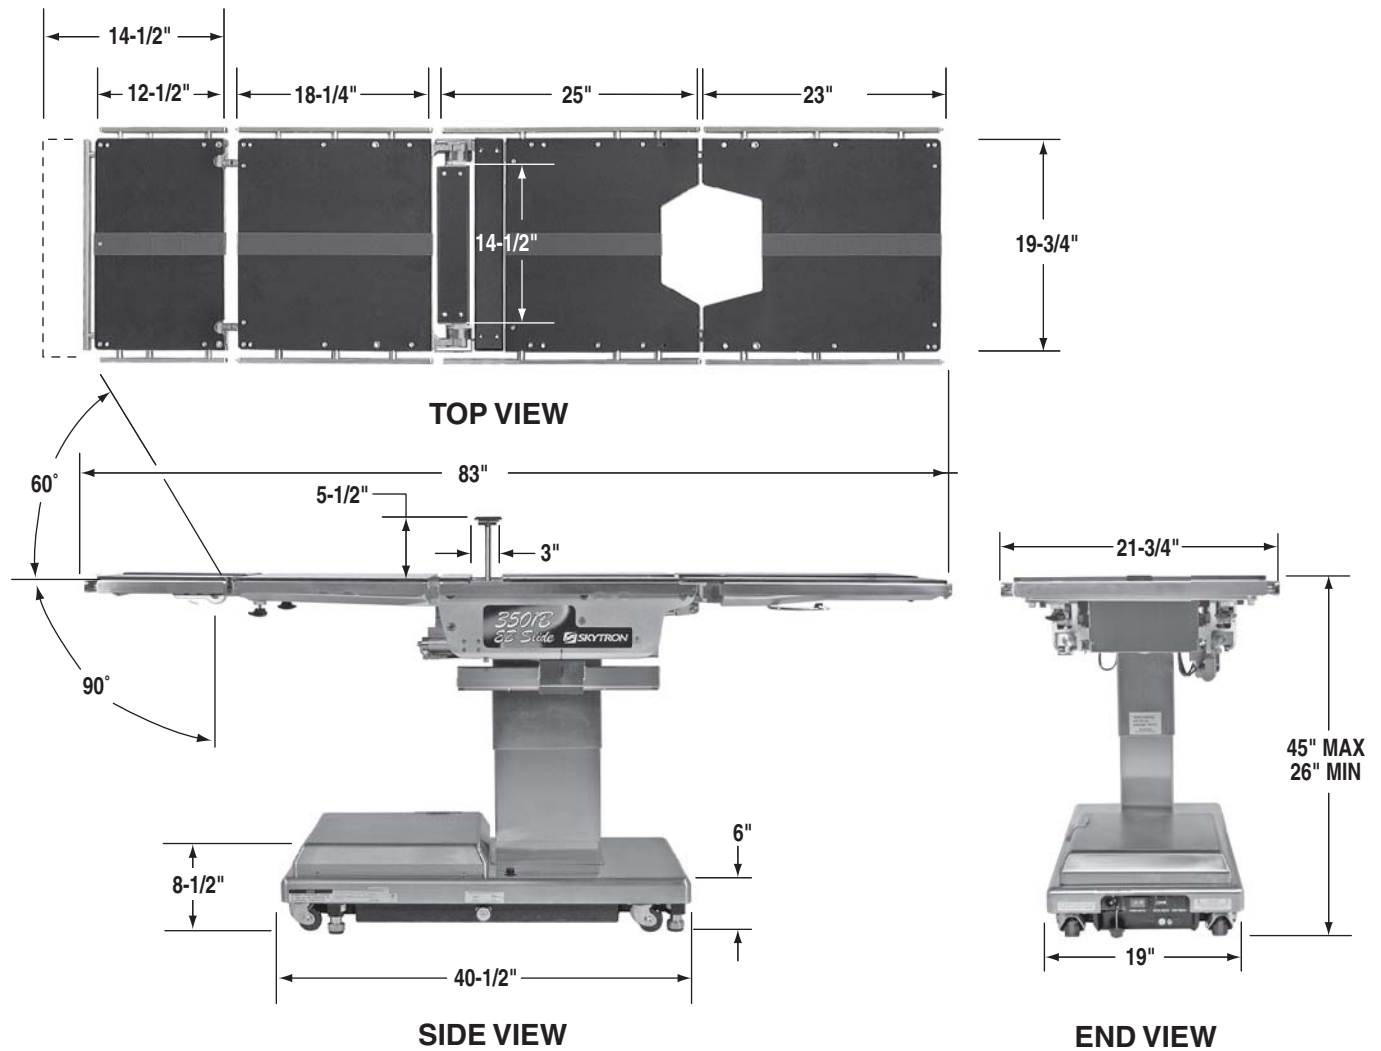

### ENTELA CERTIFIED

TO UL2601-1

CAN/CSA601.1, IEC 60601-2-46

### Electrical Specifications

Power requirements	120 VAC, 60Hz, 450 Watts
Current Leakage	Less than 100 micro amps
Power Cord	15 feet w/hospital grade connector (removable)

## SECTION I HYDRAULIC SYSTEM

## 1-1. General

The hydraulic system (with the exception of the hydraulic cylinders and hoses) is contained within the base of the table. The hydraulic valves and pump are electrically controlled by the use of a hand-held push button pendant control. The power requirements for the table are 120 VAC, 5 amp, 60 Hz.

The table contains the following components. Refer to the block diagram (figure 1-1) for relationship.

**a. Oil Reservoir** - Main oil supply. Approximately two quarts.


**b. Motor/Pump Assembly** - A positive displacement gear type pump provides the necessary oil pressure and volume.

**c. Pressure Relief Valve** - Provides an alternate oil path when the hydraulic cylinders reach the end of their stroke.

**d. Electro/Hydraulic Mini-Valve Assemblies** - These direct the fluid to the appropriate hydraulic cylinders.

**e. Hydraulic Lines, Fittings, Connections** - They provide a path for the hydraulic oil.

**f. Hydraulic Cylinders** - They convert the hydraulic fluid pressure and volume into mechanical motion.

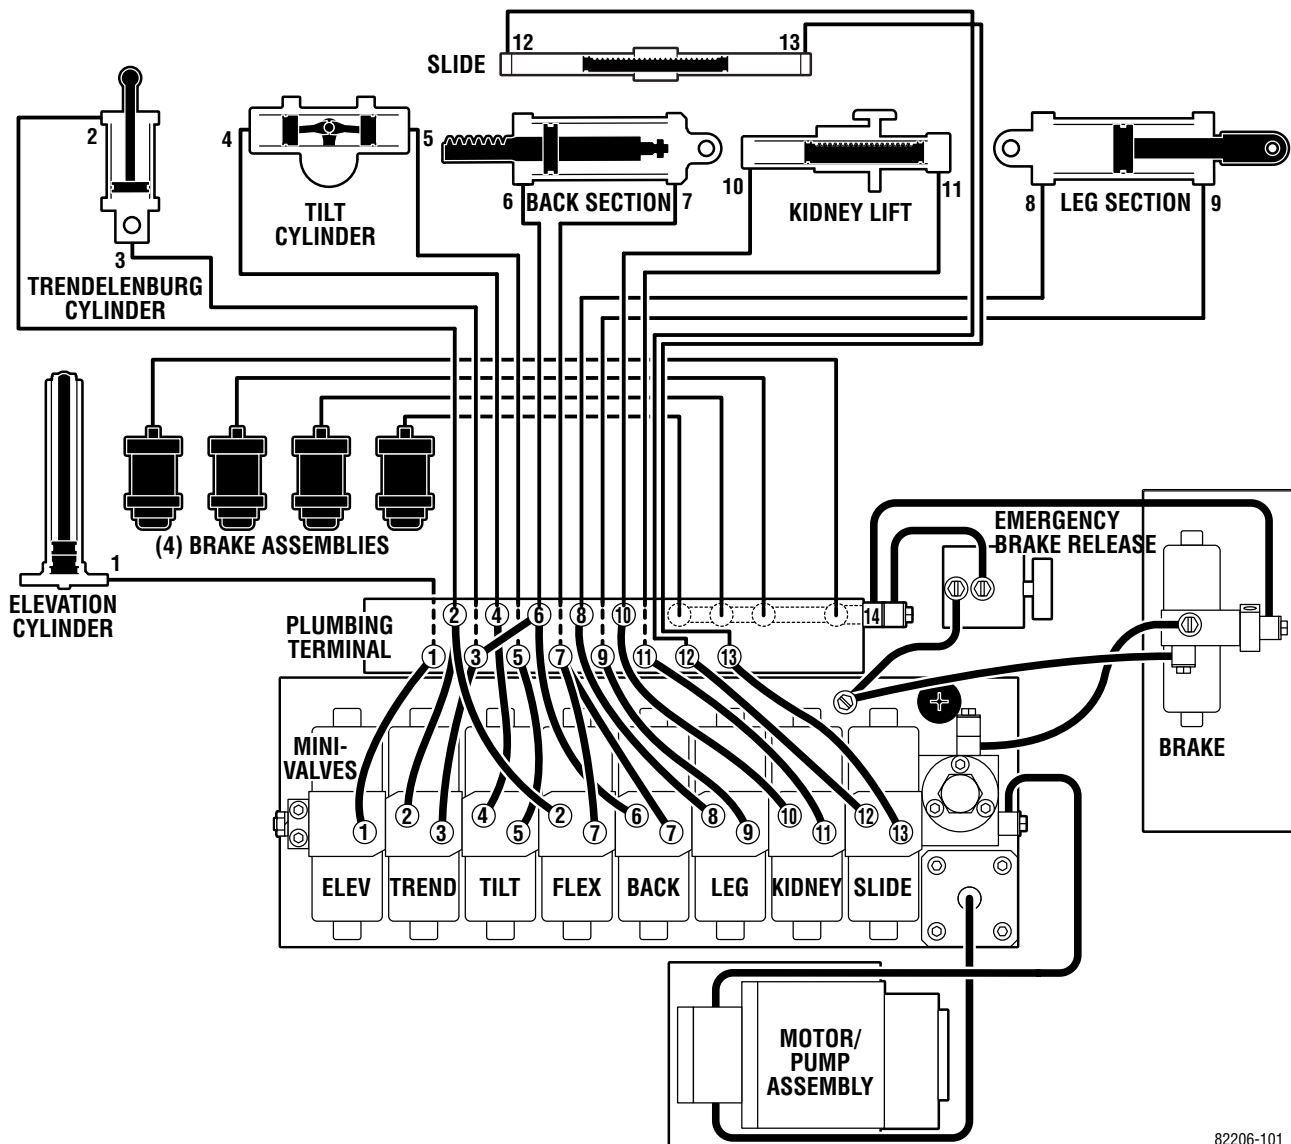

82206-101

Figure 1-1. Hydraulic Block Diagram

## 1-2. Component Operation

### a. Motor/Pump Operation

The motor/pump assembly is a gear type pump that provides the oil pressure and volume for the entire hydraulic system. The pump has an inlet side and an outlet side. The inlet side is connected to the reservoir which provides the oil supply. The reservoir has a very fine mesh screen strainer which prevents foreign material from entering the oil system.

The output line of the pump is connected to the main oil galley which is internal and common to all the hydraulic mini-valves and pressure relief valve. Also, common to the hydraulic mini-valves and pressure relief valve is an oil galley that internally connects to the oil reservoir to provide a return path for the hydraulic oil. See figure 1-2.

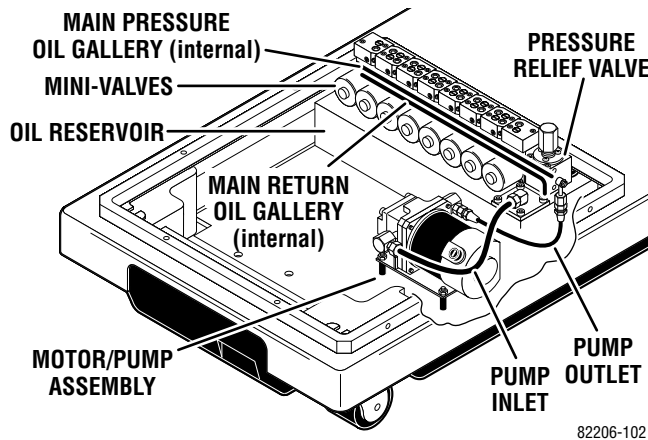


Figure 1-2.

### b. Pressure Relief Valve

This device provides an alternate oil path back to the reservoir when the hydraulic cylinders reach the end of their stroke and the pump continues to run. If this path were not provided, the pump motor would stall because the oil cannot be compressed. The pressure relief valve is directly connected to the mini-valve bodies and shares both the common internal main pressure oil galley, and the return oil galley that internally connects to the reservoir. See figure 1-3.

The main component of the valve is an adjustable spring loaded plunger that when it is pushed off from its seat by the oil pressure the oil then flows back into the reservoir. See figure 1-4. Turning the adjustment nut clockwise increases the amount of oil pressure required to open the valve, and turning it counterclockwise decreases the amount of oil pressure. (See adjustment section for specification.)

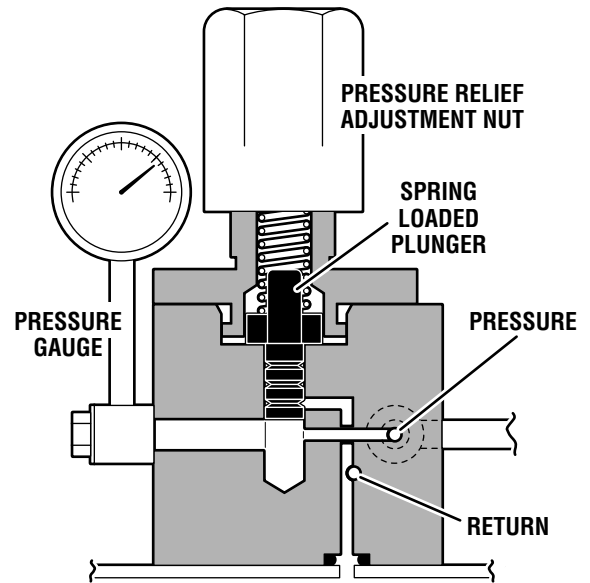


Figure 1-3. Pressure Relief Valve Not Functioning

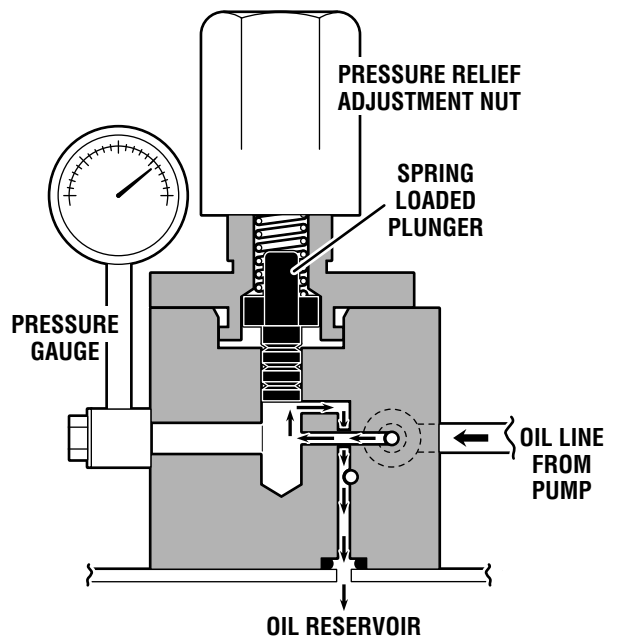


Figure 1-4. Pressure Relief Valve Functioning

### c. Mini-Valves

The operation of the mini-valves is identical for all table functions except the elevation and brake circuits. These two hydraulic circuits use a 3-way (single check valve) type mini-valve. All other functions use a 4-way (dual check valve) type mini-valve.

Either type mini-valve is controlled by two pushing type, electrically operated solenoids. The solenoids push the spool valve (located in the lower portion of the valve) one way or the other. This motion opens the main supply galley (which has pump pressure) allowing the oil to flow through the various parts of the mini-valve to the function. The spool valve also opens an oil return circuit which allows the oil to return to the oil reservoir.

The main components of the mini-valve and their functions are listed below:

1. Spool Valve - Opens the main oil galley (pump pressure) to either mini-valve outlet depending on which direction the spool valve is pushed. Also it provides a return path for the oil returning back into the reservoir.

2. Pilot Plunger - There are two plungers in a four-way mini-valve (one in a 3-way mini-valve), one under each check valve. The purpose of the pilot plungers is to mechanically open the return check valve allowing the oil to return back into the reservoir.

3. Check Valve - Two are provided in each four-way mini-valve to seal the oil in the cylinders and oil lines and prevent any movement of the table. One check valve is provided in a 3-way mini-valve.

4. Speed Controls - There are two speed controls in each 4-way mini-valve. They are needle valve type controls which restrict the volume of oil returning back into the reservoir, thereby controlling the speed of the table surface movement. A 3-way mini-valve has only one speed adjustment.

The speed controls are always located in the return oil circuit to allow the movement of the cylinder to be controlled. Also, by using this control method, it does not matter what size cylinder and piston is used because the speed is controlled by restricting


the return oil. If the pump puts out more volume to a slave cylinder than is allowed by the speed control, the pressure relief valve opens and provides an alternate path for the pump oil to return to the reservoir.

The following material depicts the three operating positions of the mini-valve. The movement of the slave cylinder piston (extend or retract) is determined by which port of the Mini-Valve is activated.

#### Mini-Valve in Neutral Position

(No fluid flow) See figure 1-5.

- Spool Valve Centered - This closes off both oil pressure and oil return galleys.
- Pilot Plungers Both Closed - The pilot plungers control the opening of the check valves. If they are closed, the check valves must be closed.
- Check Valves - Both check valves are closed trapping the oil in the cylinder and oil lines.
- Speed Control - When the mini-valve is in the neutral position, the speed control does not affect anything.

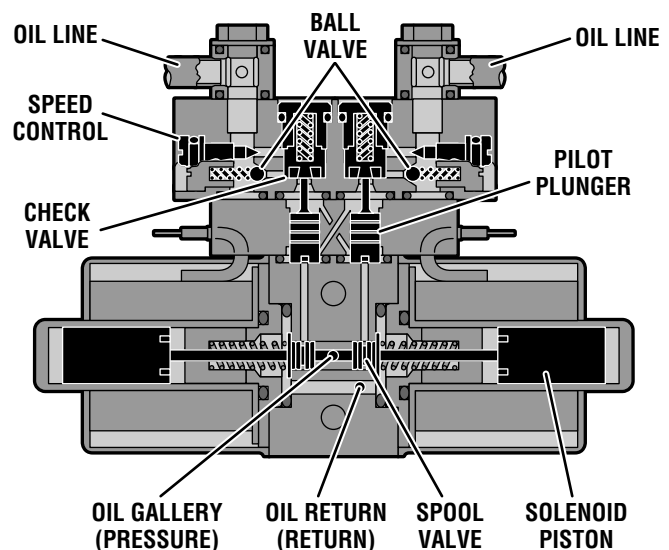

82206-105


Figure 1-5. Mini-Valve in Neutral Position



### Mini-Valve Right Port Activated

(See figure 1-6)

Right Mini-Valve Port is Supply Line  
Left Mini-Valve Port is Return Line

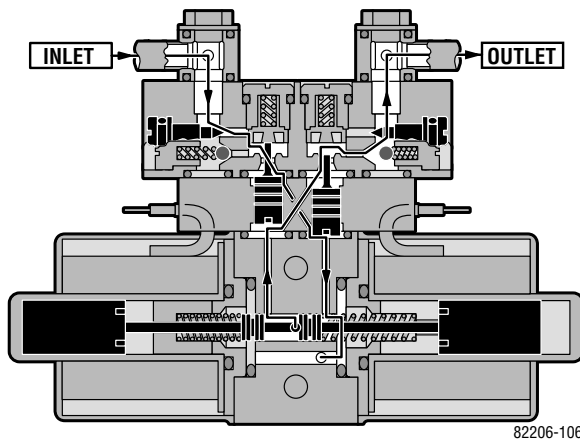


**Figure 1-6. Mini-Valve Right Port Activated**

- **Spool Valve** - Pushed to the left by electric solenoid. This opens the internal oil pressure galley allowing the fluid to go through the check valve and on to the cylinder. Also, the spool valve opens the oil return line providing an oil path through the internal oil galley back to the reservoir.
- **Pilot Plunger Valve** - Left pilot plunger valve is pushed up by the incoming oil pressure mechanically opening the check valve located above it in the return circuit. This action allows the oil from the return side of the slave cylinder to go back into the reservoir. The right pilot plunger valve is not affected in this operation mode.
- **Check Valves** - Both check valves are opened in this operation mode. The right check valve is pushed open by the oil pressure created by the pump. The oil then continues through the lines and supplies the inlet pressure to move the slave cylinder piston. The left check valve is held open mechanically by the pilot plunger and allows the oil from the return side of the slave cylinder to go through the mini-valve back to the reservoir.
- **Speed Control** - The right speed control (output side) does not have any effect in this operation mode because the oil is routed around the speed control through a bypass valve to the output port. The left speed control controls the speed of the table function by restricting the flow of oil going back into the reservoir.

### Mini-Valve Left Port Activated

(See figure 1-7.)

Left Mini-Valve Port is Supply Line  
Right Mini-Valve Port is Return Line

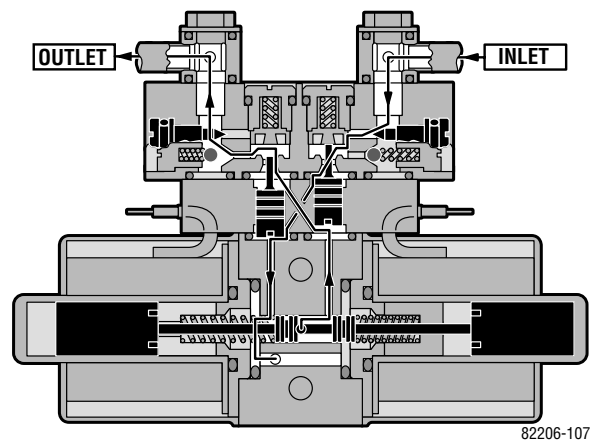

**Figure 1-7. Mini-Valve Left Port Activated**

- **Spool Valve** - Pushed to the right by electric solenoid. This opens the internal oil pressure galley allowing the fluid to go through the check valve and on to the cylinder. Also, the spool valve opens the oil return line providing an oil path through the internal oil galley back to the reservoir.
- **Pilot Plunger Valve** - Right pilot plunger valve is pushed up by the incoming oil pressure mechanically opening the check valve located above it in the return circuit. This action allows the oil from the return side of the slave cylinder to go back into the reservoir. The left pilot plunger valve is not affected in this operation mode.
- **Check Valves** - Both check valves are opened in this operation mode. The left check valve is pushed open by the oil pressure created by the pump. The oil then continues through the lines and supplies the inlet pressure to move the slave cylinder piston. The right check valve is held open mechanically by the pilot plunger and allows the oil from the return side of the slave cylinder to go through the mini-valve back to the reservoir.
- **Speed Control** - The left speed control (output side) does not have any effect in this operation mode because the oil is routed around the speed control through a bypass valve to the output port. The right speed control controls the speed of the table function by restricting the flow of oil going back into the reservoir.

## d. Hydraulic Cylinders (Slave Cylinders)

There are several different types of hydraulic cylinders used in the table that activate the control functions. With the exception of the elevation and brake cylinders, all operate basically the same way. The control functions are listed below.

Back Section -----	2 double action cylinders
Leg Section -----	2 double action cylinders
Trendelenburg ----	1 double action cylinder
Lateral Tilt -----	1 double action cylinder
Elevation -----	1 single action cylinder
Kidney Lift -----	2 double action cylinders
Brakes -----	4 single action cylinders
Slide -----	1 double action cylinder

1. Trendelenburg, Back Section and Leg Section Cylinders - The double action cylinders are closed at one end and have a movable piston with hydraulic fluid on both sides. Connected to this piston is a ram or shaft that exits out of the other end of the cylinder. Through the use of a ball and socket, a gear, or clevis and pin arrangement, this ram is connected to a movable table surface. The movable surface can be moved one way or the other by pumping hydraulic fluid into the cylinder on either side of the piston. Obviously, if oil is pumped into one side of the cylinder, a return path must be provided for the oil on the other side. See figure 1-8.

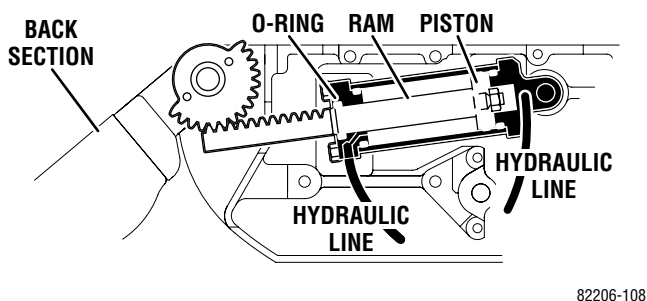


Figure 1-8. Back Section Cylinder

2. Slide Cylinder Assembly - This cylinder arrangement has two pistons, one on each end of a ram which has rack gear teeth cut into its top surface. These teeth mesh with a gear arrangement that drives a rack gear connected to the bottom of the side frame.

When hydraulic fluid is pumped into one side of the cylinder, the pistons are pushed in one direction, the gear arrangement rotates and causes the table top to slide. Oil pressure can be applied to either piston, making the table slide end for end. See figure 1-9.

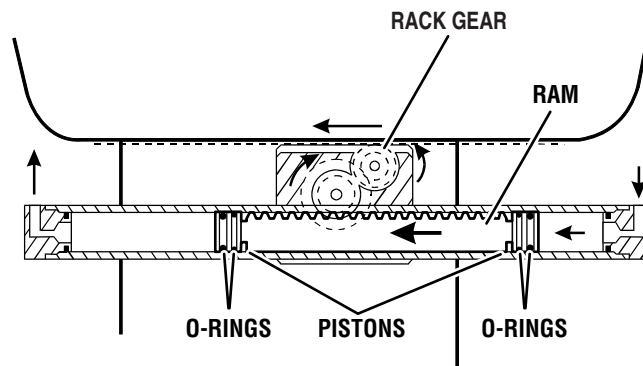


Figure 1-9. Slide Cylinder Assy.

3. Lateral Tilt Assembly - The lateral tilt assembly consists of two cylinders, pistons and connecting rods. The connecting rods attach to the lateral tilt lever which connects to the table center column assembly. The cylinder housing attaches to the table top and is attached to the center column assembly by pivots. See figure 1-10. The pistons and connecting rods are attached to a non-movable surface. Therefore, when hydraulic fluid is pumped into one side, the cylinder housing itself moves around the lateral tilt lever causing the table top to tilt to one side. To tilt the table top in the opposite direction, fluid is pumped into the opposite cylinder.

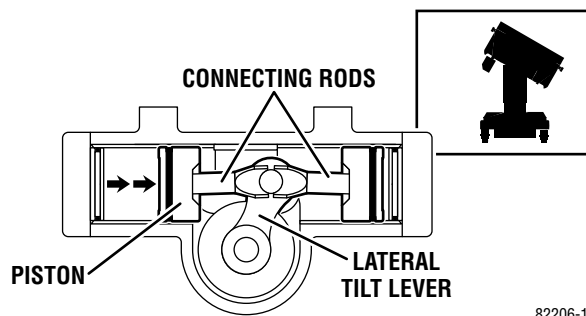



Figure 1-10. Lateral Tilt Cylinder Assembly



4. Elevation Cylinder - This single action cylinder does not have hydraulic fluid on both sides of the piston. It depends on the weight of the table top assembly to lower it.


The cylinder is set in the center of the elevation main column. The two stage cylinder is elevated by the driven force of the oil pressure. When lowering, the oil that is accumulated in the cylinder is returned to the oil reservoir through the mini-valve due to the table top weight.

A slider support assembly is used to support the weight of the upper table section. A stainless steel shroud covers the flexible hydraulic hoses and slider. See figure 1-11.

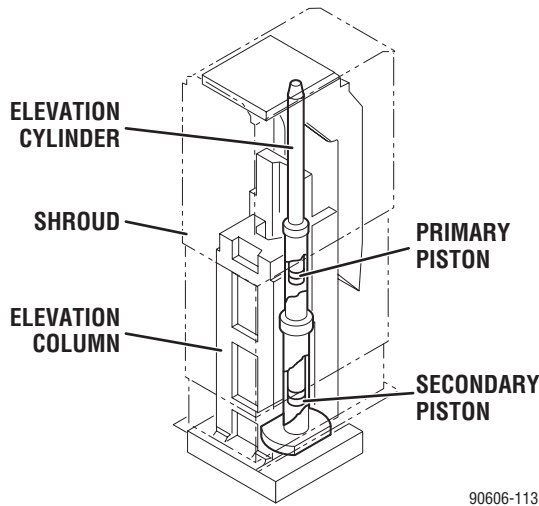


**Figure 1-11. Elevation Cylinder Assembly**

5. Kidney Lift Cylinders - The two kidney lift cylinders have a ram that has rack gear teeth cut into the top surface. O-Rings on each end of the ram allow the ram to also serve as the pistons. The rack teeth cut into the top of the ram meshes with a pinion gear. This gear meshes with other gears to supply the up or down drive for the kidney lift bars, depending on which direction the oil is pumped into the cylinder. See figure 1-12.

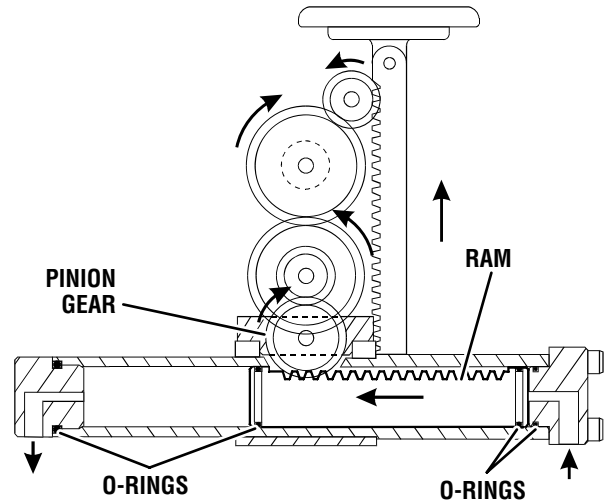

**Figure 1-12. Kidney Lift Cylinder Assembly**

6. Brake Cylinders - The brake cylinders are single action type similar to the elevation cylinder. The movable piston's ram is connected to a brake pad. See figure 1-13. Oil pumped into the top of the cylinder pushes the piston down raising the table base off its casters. An internal return spring pushes the piston up to return the oil through the mini-valve to the reservoir.

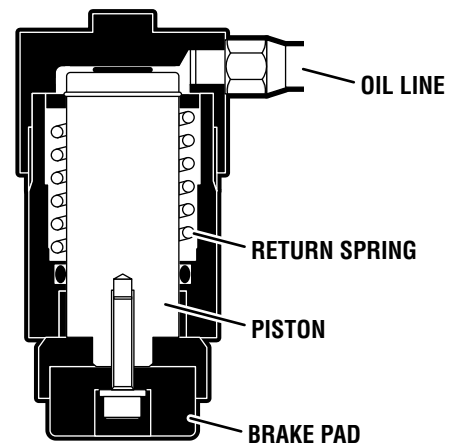


**Figure 1-13. Single Action Brake Cylinder**

### e. Elevation Cylinder Return Circuit

A three-way (single check valve type) mini-valve controls both the elevation and return circuits. The elevation circuit operation within the mini-valve is identical to the operation of the four-way valves previously described (inlet pressure opens the check valve allowing the oil to enter the cylinder). In the return position, inlet pressure pushes the pilot plunger up and opens the return check valve. See figure 1-14. The open check valve allows a path for the oil in the elevation cylinder to return to the reservoir. When the pilot plunger valve is opened, the continuing pump pressure opens the pressure relief valve which provides a return oil path to the reservoir.

The mini-valve used in the elevation circuit contains only one check valve (all four-way mini-valves use two check valves). The check valve is used to trap the oil in the elevation cylinder thereby supporting the table top. When the top is being lowered the check valve is mechanically held open by the pilot plunger through pump pressure.

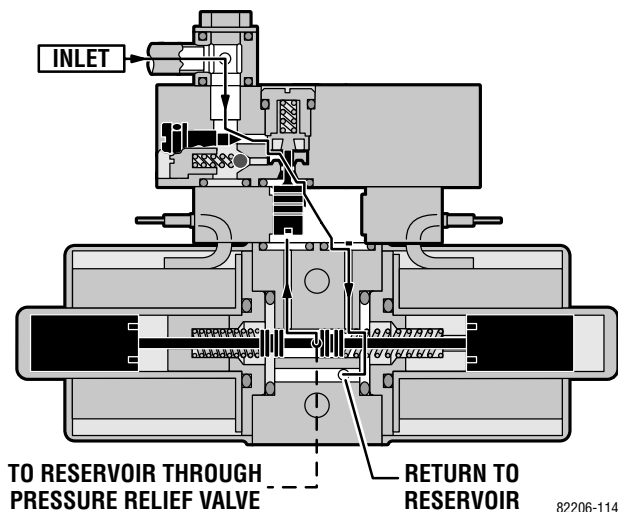


**Figure 1-14. Elevation Return Circuit**

### f. Brake System

The brake system consists of the following components: (figure 1-15)

1. Single action slave cylinders (4 each).
2. 3-way (single check valve type) mini-valve.

3. Manually controlled emergency brake release.
4. Plumbing terminal, flexible hoses, copper lines and "O" rings.
5. Portions of the electrical system.

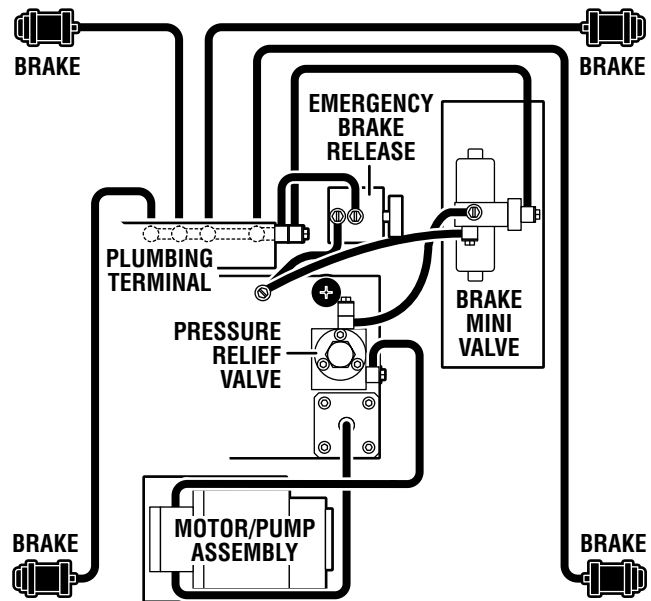

82206-115

**Figure 1-15. Brake System Block Diagram**

Each corner of the cast-iron table base has a hydraulic brake cylinder. These single action cylinders are hydraulically connected in parallel to the mini-valve and all four are activated together. It is normal for one corner of the table to raise before the others due to the weight distribution of the table.

An electronic timer in the relay box is activated when any function on the pendant control is pushed momentarily. The pump/motor and brake system mini-valve are activated and the brake cylinders are completely set. The electronic timer runs for approx. 8-10 seconds.

The brakes are released by pushing the BRAKE UNLOCK button momentarily. An electronic timer in the relay box activates the brake function hydraulic mini-valve and pump/motor.

When activated, the return hydraulic circuit operates similar to the elevation cylinder return circuit. Return springs inside the single action brake cylinders retract the brake pads and provide the pressure to return the hydraulic oil back to the reservoir. The electronic timer operates the return circuit for approximately 8-10 seconds.

### g. Emergency Brake Release

The emergency brake release is simply a manually operated bypass valve connected in parallel to the brake cylinders and the oil reservoir. See figure 1-16. When the valve is opened (turned counter-clockwise) a return circuit for the brake hydraulic fluid is opened. The return springs force the pistons up pushing the hydraulic oil back into the reservoir and retracting the brake pads.

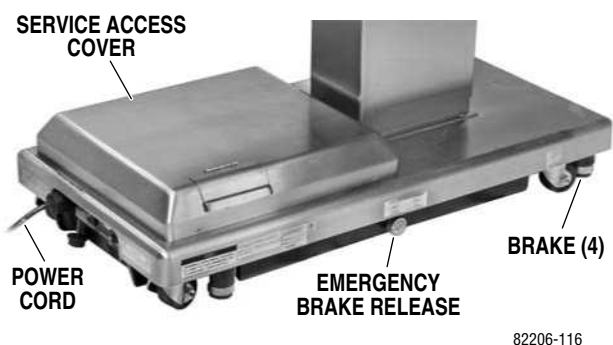


Figure 1-16.

#### NOTE

- The emergency brake release valve must be tightened securely when not in use.
- If the emergency brake release valve has been operated, the UNLOCK button on the pendant control may have to be pressed before brakes will lock again.

If the emergency brake release valve is open, the brakes will release slowly- depending on how far open the valve is, this could take anywhere from a few minutes to several hours.

### h. Flex/Reflex System

The Flex/Reflex system incorporates an additional mini-valve which connects the Trendelenburg and back section hydraulic systems in a series. When FLEX is activated by the pendant control, the Flex/Reflex mini-valve opens the oil pressure path to the Reverse Trendelenburg piston. The return oil path from the Trendelenburg piston is routed through the back section cylinder to the mini-valve return port. See figure 1-17

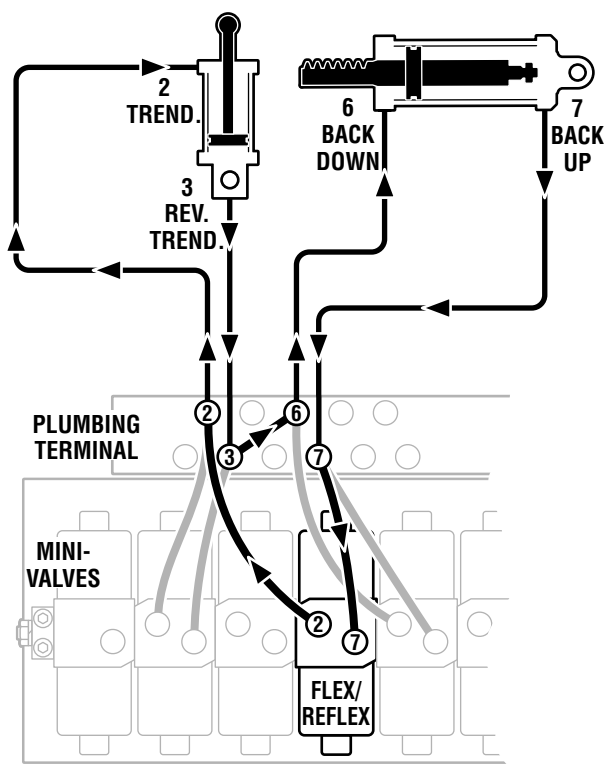


Figure 1-17. Flex/Reflex System

### 1-3. Hydraulic Adjustments

#### a. Fluid Level.

The fluid level should be approximately 1/2" below the filler hole or gasket surface. If additional fluid is needed, remove the filler vent cap with a phillips screwdriver and add fluid through this opening using a funnel. See figure 1-18.

#### NOTE

The elevation cylinder should be completely down, the brakes released and all the other control functions in their neutral position when checking oil level.

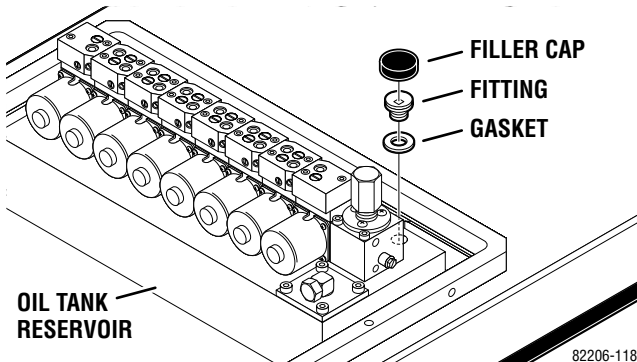


Figure 1-18.

The type of oil that should be used is Mobil DTE #25 or equivalent. This is a very high quality hydraulic oil. The table requires approximately two quarts of oil to operate properly. Exercise caution when determining equivalence to avoid damage to the hydraulic system.

#### b. Bleeding The Hydraulic System

To purge the air from the hydraulic system, operate each function back and forth at least two or three times.

#### NOTE

Whenever a hydraulic line or component is replaced, bleed the air out of the lines using the pump pressure by activating the function before making the final connection. Then operate the function until it stalls in both directions.

#### c. Pressure Relief Valve

The pressure relief valve is adjusted by turning the adjustment nut until the desired pressure is reached.

To adjust:

1. Remove the plumbing bolt securing the brake system line to the pressure relief valve and attach a hydraulic pressure gauge to the main oil galley using a long 6mm plumbing bolt. See figure 1-19.

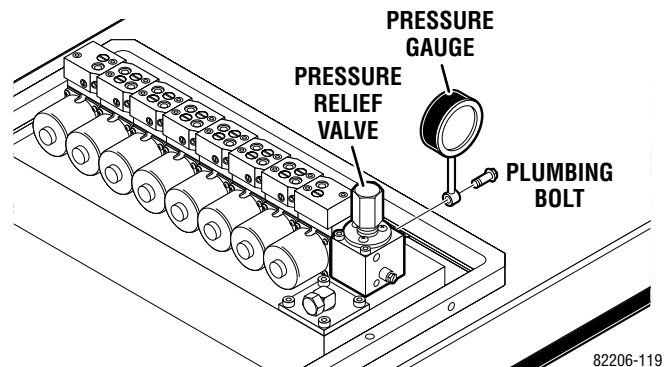


Figure 1-19.

2. Raise the table top until the piston reaches the end of its stroke and stalls. Observe reading on pressure gauge and turn the adjustment nut (clockwise to increase oil pressure, counterclockwise to decrease) until desired reading is obtained. Pressure should be 8MPA (80KG/CM<sup>2</sup> - 1138 PSI). An erratic reading and/or inability to adjust to the recommended setting may indicate the need for replacement of the pressure relief valve.

### d. Speed Controls

The speed controls restrict the volume of oil returning back to the reservoir thereby controlling the speed of each control function.

All four-way mini-valves, have two speed controls located in the ends of each valve body. All three-way mini-valves have only one speed control.

One speed control adjusts one direction of a particular function and the opposite speed control adjusts the other direction. They are adjustable by using a small straight blade screwdriver and turning the adjustment screw clockwise to decrease the speed and counterclockwise to increase the speed. See figure 1-20.

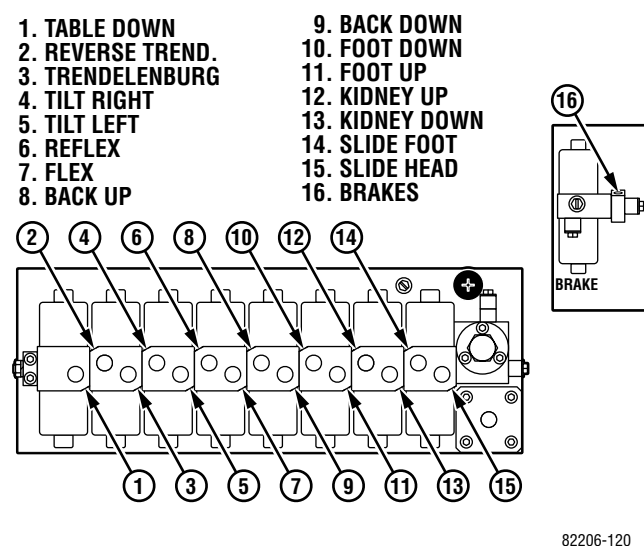


Figure 1-20.

Any control function should move in either direction at the same rate. If the rate of a certain function is too slow, open the speed control slightly and recheck. Use the second hand on a watch and time a particular function. Match that time in the opposite direction by opening or closing the speed control. Approximate operating times are as follows:

Lateral Tilt	7 seconds
Leg Up	25 seconds
Leg Down	15 seconds
Kidney Lift	7 seconds
Slide	20 seconds

A pressure gauge should be used to set the speed of the back section, Trendelenburg and flex control functions.

To adjust:

1. Attach the pressure gauge onto the main oil galley as shown in figure 1-19.

2. The gauge should read the following values when operating the various control functions in either direction. Turn the speed controls until desired values are obtained.

Back Section	Up	65KG/CM <sup>2</sup> -925PSI
	Dn	65KG/CM <sup>2</sup> -925PSI
Trendelenburg	Up	65KG/CM <sup>2</sup> -925PSI
	Dn	65KG/CM <sup>2</sup> -925PSI
Flex		70KG/CM <sup>2</sup> -995PSI
Reflex		70KG/CM <sup>2</sup> -995PSI

### NOTE

When adjusting Flex/Reflex speed controls, set Reflex last.


Elevation - There is not a speed adjustment for raising the table. The speed control will only affect the rate of descent and it should equal the rate of elevation.

## 2-1. Back Section Gear Mesh Adjustment

The gear mesh is adjusted by the use of an eccentric cam. This cam moves the gear teeth closer together to eliminate gear lash. This adjustment arrangement compensates for any wear between the gears that might occur.

To adjust:

Loosen the cam locking allen set screw. Use an allen wrench to rotate the eccentric cam. See figure 2-1. Tighten the locking set screw when adjustment is complete.

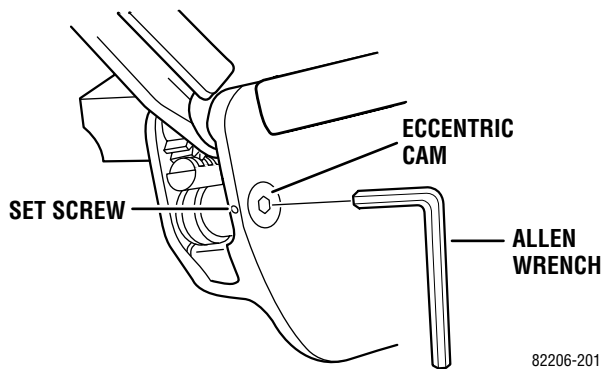

**Figure 2-1. Eccentric Cam Adjustment**

## 2-2. Hydraulic Cylinder Adjustment

The hydraulic cylinder rams that control both the back and leg sections must move together so that these sections are not twisted when operated. This is accomplished by the use of eccentric cams that move the cylinder bodies fore and aft to adjust their effective stroke.

### NOTE

Adjust gear mesh before adjusting eccentric cams for the back section.


### a. Back Section

Position the back section all the way up until it stalls. Both sides of the back section should stop moving at the same time and should not show any signs of twisting.

Any twisting or flexing of the back section as it approaches the stalled position indicates that one of the cylinders is not reaching its fully extended position at the same time as the other. This condition would require an adjustment.

To adjust:

Remove the seat section top for access to the cam locking set screws and loosen the set screws. Use an allen wrench to turn the cylinder eccentric cams as required to shift either cylinder fore or aft as needed so no twisting or flexing of the back section is observed when it is stalled in the full up position. See figure 2-2. Tighten the set screws and replace the seat section top when the adjustment is completed.

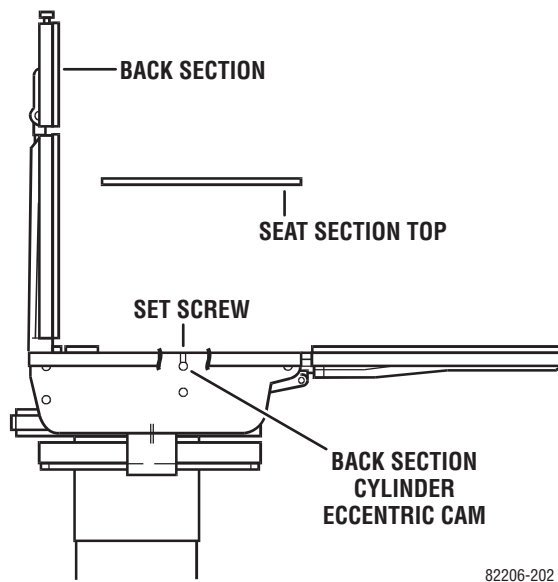

**Figure 2-2. Back Section Adjustment**

### b. Leg Section


Position the leg section all the way up. Both sides of the leg section should stop moving at the same time and should not show any signs of twisting.

Any twisting or flexing of the leg section as it approaches the stalled position indicates that one of the cylinders is not reaching its fully extended position at the same time as the other and an adjustment is required.



To adjust:


Loosen the cam locking set screws located inside the table side frames. See figure 2-3. Use an allen wrench to turn the cylinder eccentric cams as required to shift either cylinder fore or aft as needed so no twisting or flexing of the leg section is observed when it is stalled in the above horizontal position. Tighten set screws when proper adjustment is achieved.

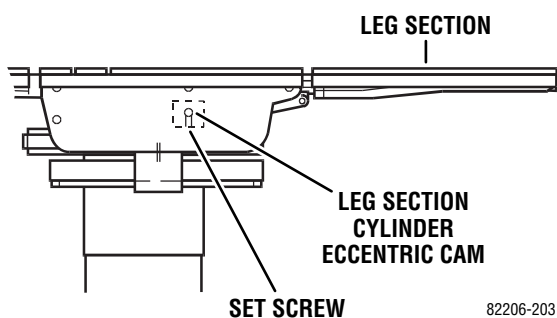

**Figure 2-3. Leg Section Adjustment**

### c. Trendelenburg Cylinder Ball Joint

Inspect the Trendelenburg ball joint on a periodic basis. Check for play of table top by sliding the table top to each extremity and applying a load. Observe for any movement in the joint. No visible play is permitted. If movement is observed inspect the tightness of the ball joint collar and the locking allen bolt. See figure 2-4. Also inspect the ball socket for signs of wear or metal particulate. Lubricate periodically using a white lithium based grease.

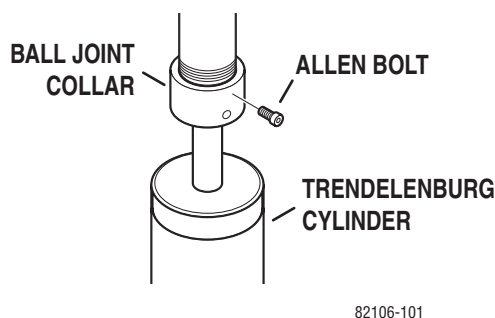

**Figure 2-4. Trendelenburg Cylinder**

### d. Slide and Kidney Lift Cylinders

If the Slide or Kidney Lift cylinder has been removed, the distance from the end of the piston to the end of the cylinder housing must be checked to make sure the functions will operate correctly.


**With table top centered**, the distance from the end of the Slide piston to end of cylinder is:

**Head End - 82 mm      Foot End - 120 mm**

The table top should slide 7-1/2" toward the head and 13-1/4" toward the foot when positioned properly. Refer to figure 2-5.

**With Kidney Lift all the way down**, the distance from the end of the Kidney Lift piston to end of cylinder is:

**Head End - 82 mm      Tail End - 11 mm**

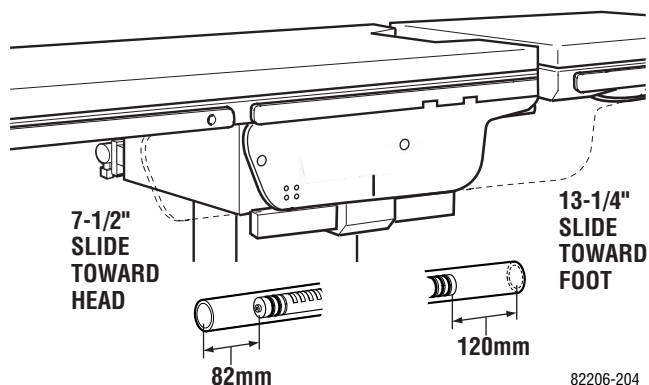


**Figure 2-5.**

### 2-3. Head Section Adjustment


The head section can be adjusted to eliminate any flexing throughout its range of travel.

To adjust:

Place the head section in level position and remove the top. See figure 2-6. Loosen but do not remove the allen bolts securing the bearing block to the frame. Loosen the allen bolt in the top of the frame and turn the set screw as required to achieve proper adjustment. One or both of the blocks may require adjustment to achieve proper alignment. Tighten all allen bolts when adjustment is complete. Test the head section throughout its range of travel. Re-adjust as needed. Replace top section when proper adjustment is achieved.

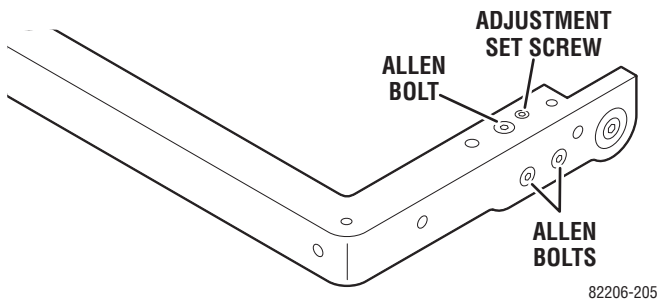

**Figure 2-6. Head Section Adjustment**

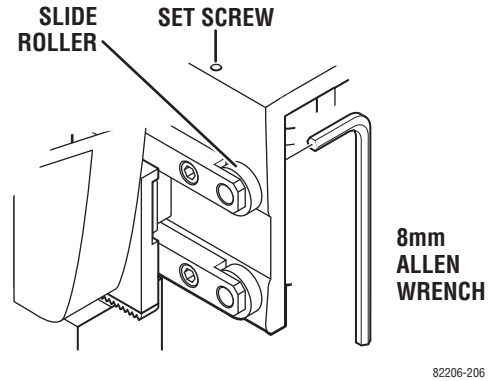

**Figure 2-7.**

#### 2-4. Slide Roller Adjustment

The pivot pins on the slide rollers are eccentric cams. The rollers can be adjusted if required to maintain proper top slide operation.


To adjust:

Remove the Seat section top, the hose cover and the right and left lateral tilt frame covers for access to the top rollers.

1. Align the table top so the rollers to be adjusted are contacting the slide bars.
2. Loosen the adjustment cam set screw and adjust the roller using an 8mm Allen wrench. See figure 2-7. To avoid any possible binding in the slide mechanism, adjust the roller on the opposite side of the table in the same manner (cam turned toward same end of table on each side).
3. Lubricate rollers and slides with white lithium based grease.
4. Adjust rollers so top slides smoothly with no up or down movement of the table top.
5. When adjustment is complete, tighten set screws, replace covers and top section.

#### 2-5. Side Rails

Inspect each of the side rail sections. Make sure that all retaining hardware is tight. Inspect the gravity stops. Make sure that each gravity stop moves freely. Clean, lubricate or replace as necessary. See figure 2-8.

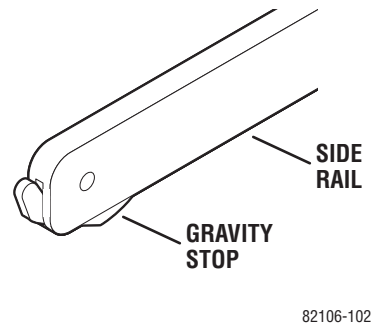

**Figure 2-8.**

#### 2-6. Casters

Clean and lubricate each of the casters. Remove any debris caught in the casters and old grease. Lubricate using a grease gun and conventional wheel bearing grease. The casters should rotate freely providing a smooth movement of the table during positioning. Replace worn or defective casters as required.



### 3-1. Precautions

Before attempting to troubleshoot any hydraulic problem on the table, please read through the precautions and notes below.



#### CAUTION



When disconnecting any of the hydraulic lines, fittings, joints, hoses, etc., for the following control functions, be sure these table surfaces are in their down position or completely supported.

Elevation  
Back Section  
Leg Section  
Kidney Lift

When working on the Trendelenburg or lateral tilt hydraulic circuits, be sure to support the table top. When working on the brake system make sure the brakes are completely retracted.

Once the problem has been determined, concentrate on that particular hydraulic circuit or control function.

Listed below are the hydraulic components that are common with all hydraulic circuits. If there is a problem with any of them, it could affect all control functions.

1. Motor/Pump Assembly
2. Reservoir
3. Pressure Relief Valve
4. Certain Oil Lines and Galleys

If there was a problem in the following components, only one control function would normally be affected.

1. Mini-Valve
2. Slave Cylinder
3. Oil Lines

#### NOTE

Whenever a hydraulic line or component is replaced, bleed the air out of the lines using the pump pressure before making the final connection. After all connections are tight, cycle the control function back and forth two or three times to purge the remaining air from the system.



#### WARNING



Failure to follow these precautions may result in an uncontrolled oil spray and damage to the table or personal injury.

### 3-2. Troubleshooting Notes

When troubleshooting a table malfunction, first determine the following:

1. Does the problem affect all control functions?
2. Does the problem affect only one control function?
3. If the problem affects one control function is it in both directions?
4. Is the problem intermittent?
5. Is the problem no movement of a table surface or does the table surface lose position?



#### CAUTION



When installing new "O" rings use hydraulic oil or white lithium grease to thoroughly lubricate the "O" rings and cylinder. Keep everything clean.

Each complete oil circuit is shown on the following pages. When troubleshooting a particular function, refer to the appropriate oil circuit diagram and the list of possible problems.

### 3-3. ELEVATION DIAGNOSIS CHART

#### Problem

Table will not elevate properly

#### Reason

Pressure Relief Valve Not Set Properly  
Low on Oil  
Spool Valve Not Centered  
Defective Pump  
Defective Mini-Valve  
Defective Solenoid or Wiring  
Defective Relay Box or Pendant Control  
Leaking Cylinder Hose  
Uneven Weight Distribution

Table will not descend properly

Incorrect Speed Adjustment  
Defective Check Valve  
Spool Valve Not Centered  
Galled Slider Assembly  
Defective Solenoid or Wiring  
Defective Relay Box or Pendant Control  
Uneven Weight Distribution

Table loses elevation

Defective Check Valve  
Leaking Mini-Valve  
Loose Fittings, Joints, Hoses  
Leaking "O" Ring Inside Cylinder


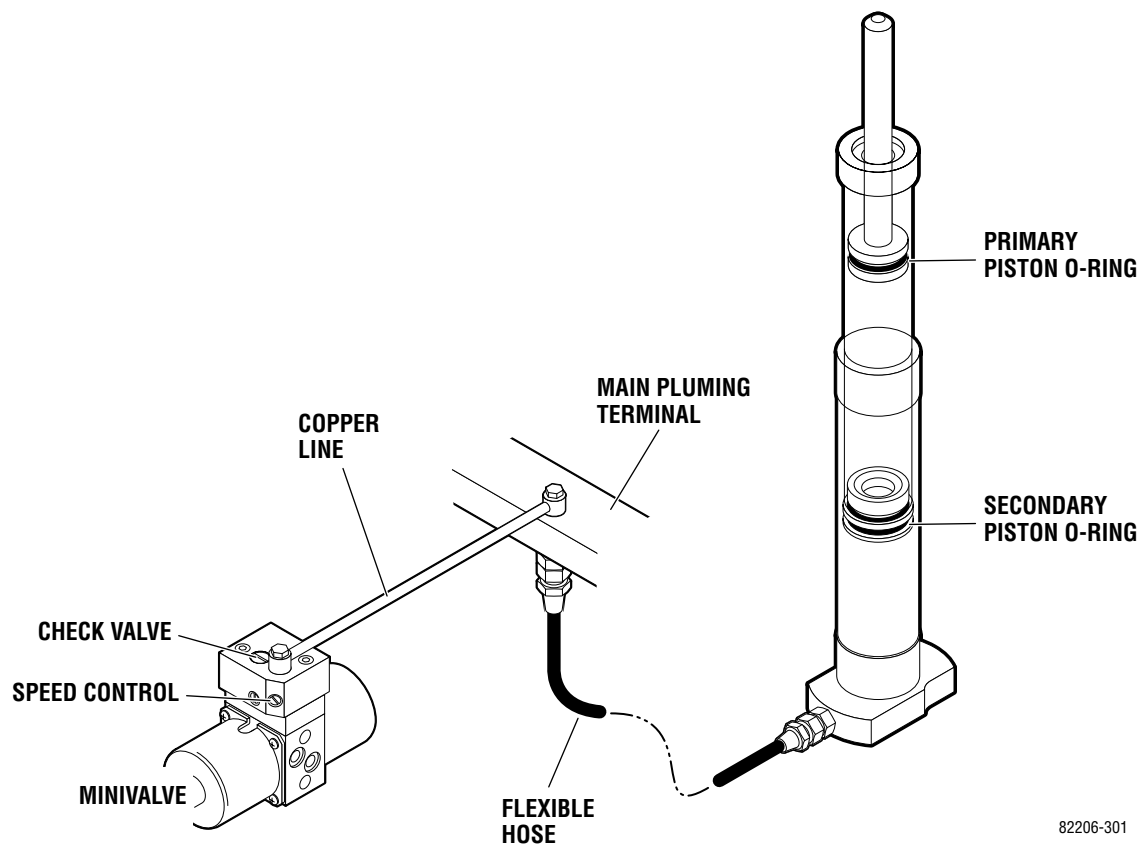


Figure 3-1. Elevation Circuit

3-4. TRENDELENBURG DIAGNOSIS CHART

Problem	Reason
Trendelenburg function moves improperly	Incorrect Speed Adjustment Spool Valve Not Centered Defective Check Valves Low on Oil Pinched Hose Defective Mini-Valve Pressure Relief Valve Not Set Properly Defective Solenoid or Wiring Defective Relay Box or Pendant Control Worn Ball Joint or Retainer Nut
Trendelenburg function chatters or loses position	Defective or Dirty Check Valve Oil Leakage in Circuit Air Inside Cylinder Pinched Hose Low on Oil

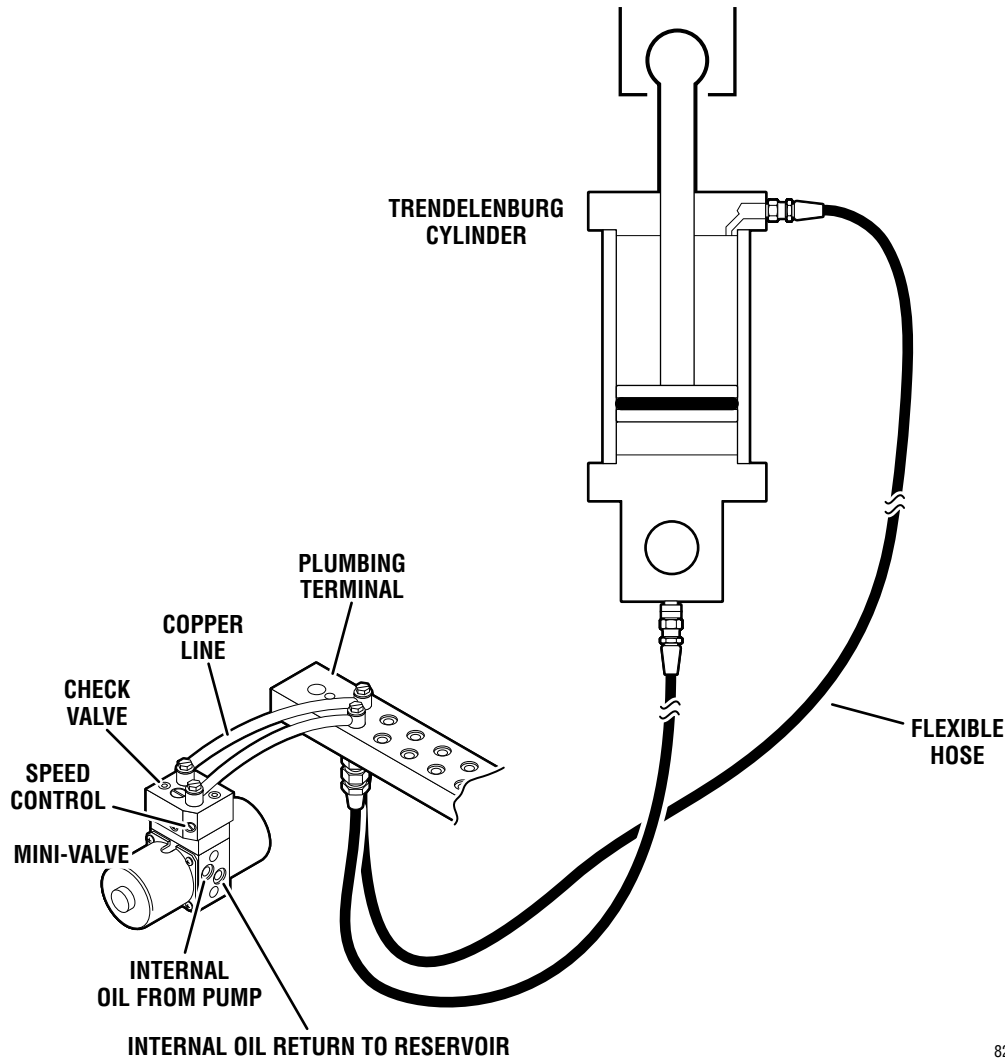

82206-302

Figure 3-2. Trendelenburg Circuit

### 3-5. LATERAL TILT DIAGNOSIS CHART

#### Problem


Lateral tilt function moves improperly

#### Reason

Incorrect Speed Adjustment  
Spool Valve Not Centered  
Defective Check Valves  
Low on Oil  
Pinched Hose  
Defective Mini-Valve  
Pressure Relief Valve Not Set Properly  
Defective Solenoid  
Defective Relay Box or Pendant Control

Lateral tilt function chatters or loses position

Defective or Dirty Check Valves  
Oil Leakage in Circuit  
Air Inside Cylinder  
Pinched Hose  
Low on Oil

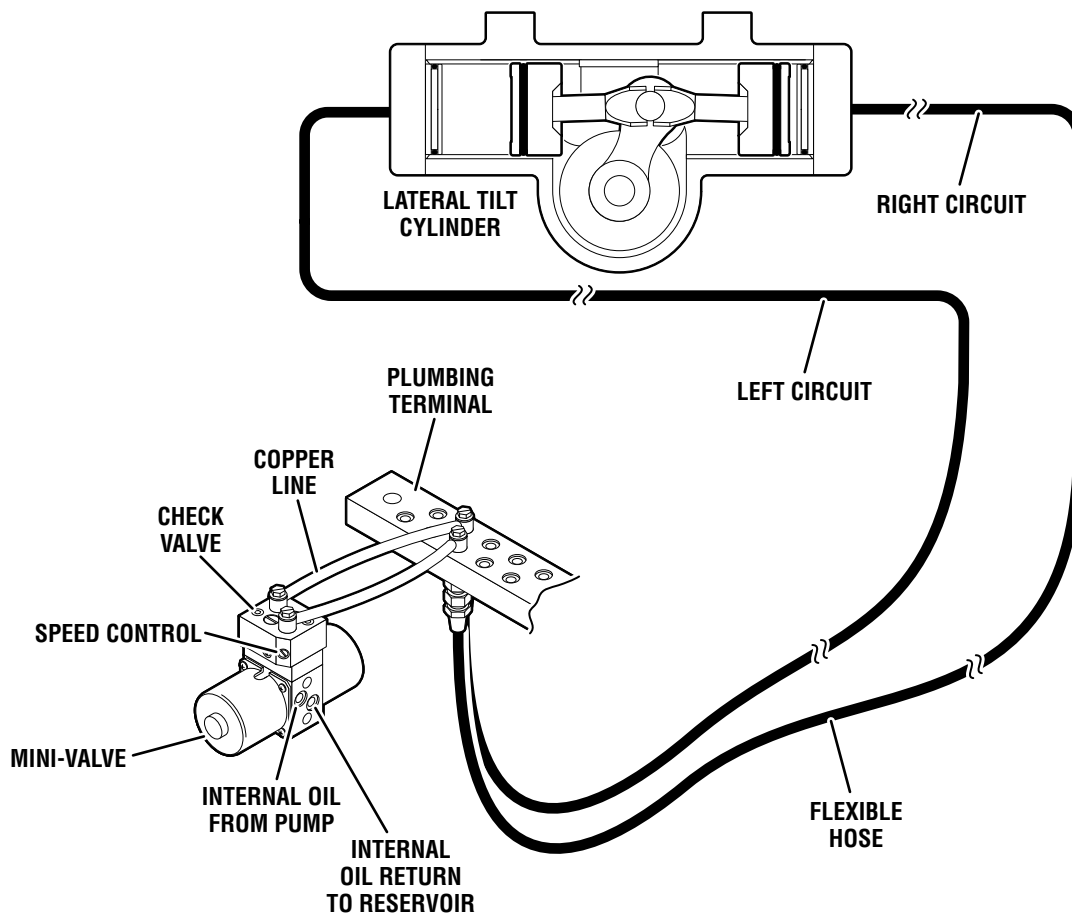

82206-303

Figure 3-3. Lateral Tilt Circuit

### 3-6. FLEX SYSTEM DIAGNOSIS CHART

#### Problem

Back Section or Trendelenburg function moves improperly

#### NOTE


If Flex System does not function properly, check the back section and Trendelenburg functions before adjusting the flex system.

#### Reason

Incorrect Speed Adjustment (Trendelenburg, Back section or Flex - check with gauge)  
Spool Valve Not Centered  
Defective Check Valves  
Low on Oil  
Pinched Hose  
Defective Mini-Valve  
Pressure Relief Valve Not Set Properly  
Defective Solenoid  
Defective Relay Box or Pendant Control  
Kidney Bridge Raised  
Worn Ball Joint or Retainer Nut

Back Section or Trendelenburg function chatters or loses position

Defective or Dirty Check Valves  
Oil Leakage in Circuit  
Air Inside Cylinder  
Pinched Hose  
Low on Oil

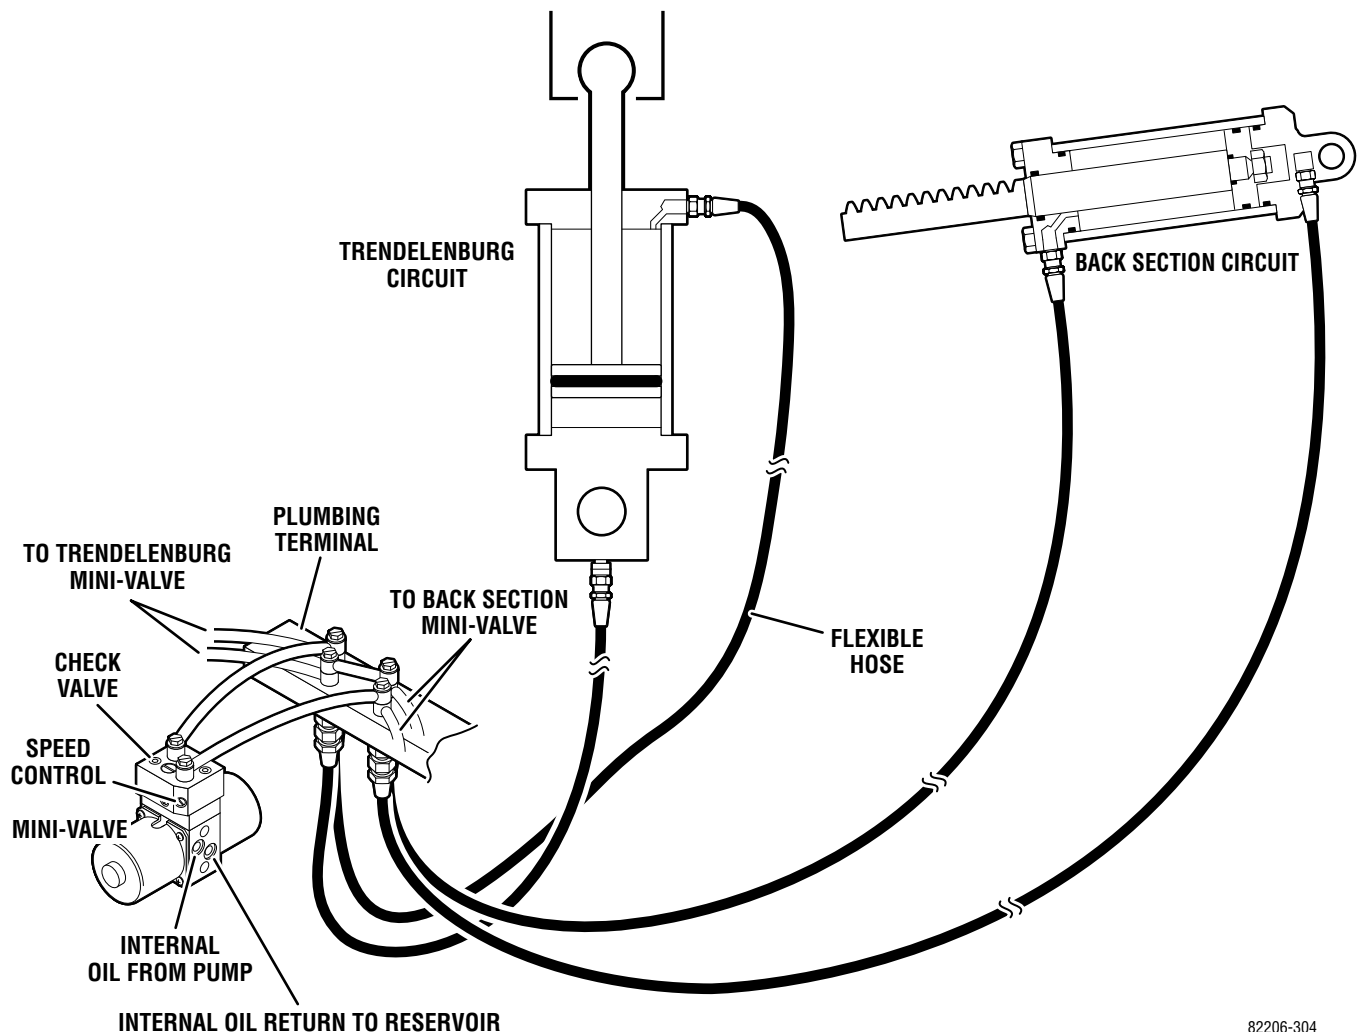

82206-304

Figure 3-4. Flex System Circuit

### 3-7. BACK SECTION DIAGNOSIS CHART

#### Problem


Back Section function moves improperly

#### Reason

Incorrect Speed Adjustment  
Spool Valve Not Centered  
Defective Check Valves  
Low on Oil  
Pinched Hose  
Defective Mini-Valve  
Pressure Relief Valve Not Set Properly  
Defective Solenoid  
Defective Relay Box or Pendant Control  
Kidney Bridge Raised  
Loose Retaining Hardware  
Microswitch out of adjustment  
Loose Table Top

Back Section function chatters or loses position

Defective or Dirty Check Valves  
Oil Leakage in Circuit  
Air Inside Cylinder  
Pinched Hose  
Low on Oil

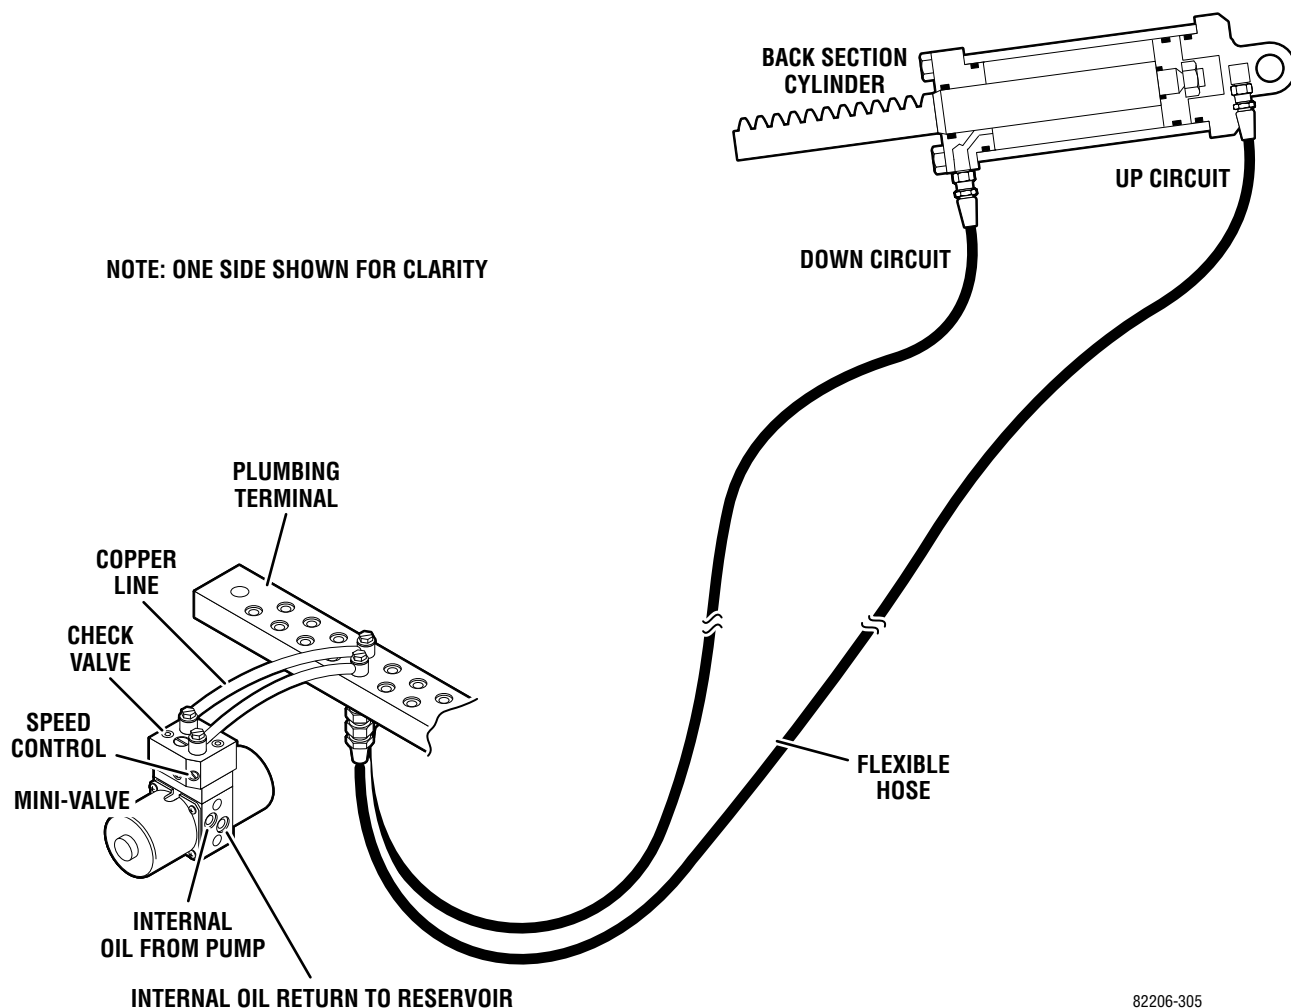

82206-305

Figure 3-5. Back Section Circuit

### 3-8. LEG SECTION DIAGNOSIS CHART

#### Problem


Leg function moves improperly

#### Reason

Incorrect Speed Adjustment  
Spool Valve Not Centered  
Defective Check Valves  
Low on Oil  
Pinched Hose  
Defective Mini-Valve  
Pressure Relief Valve Not Set Properly  
Defective Solenoid  
Defective Relay Box or Pendant Control  
Loose Retaining Hardware  
Microswitch out of adjustment  
Loose Table Top

Leg function chatters or loses position

Defective or Dirty Check Valves  
Oil Leakage in Circuit  
Air Inside Cylinder  
Pinched Hose  
Low on Oil

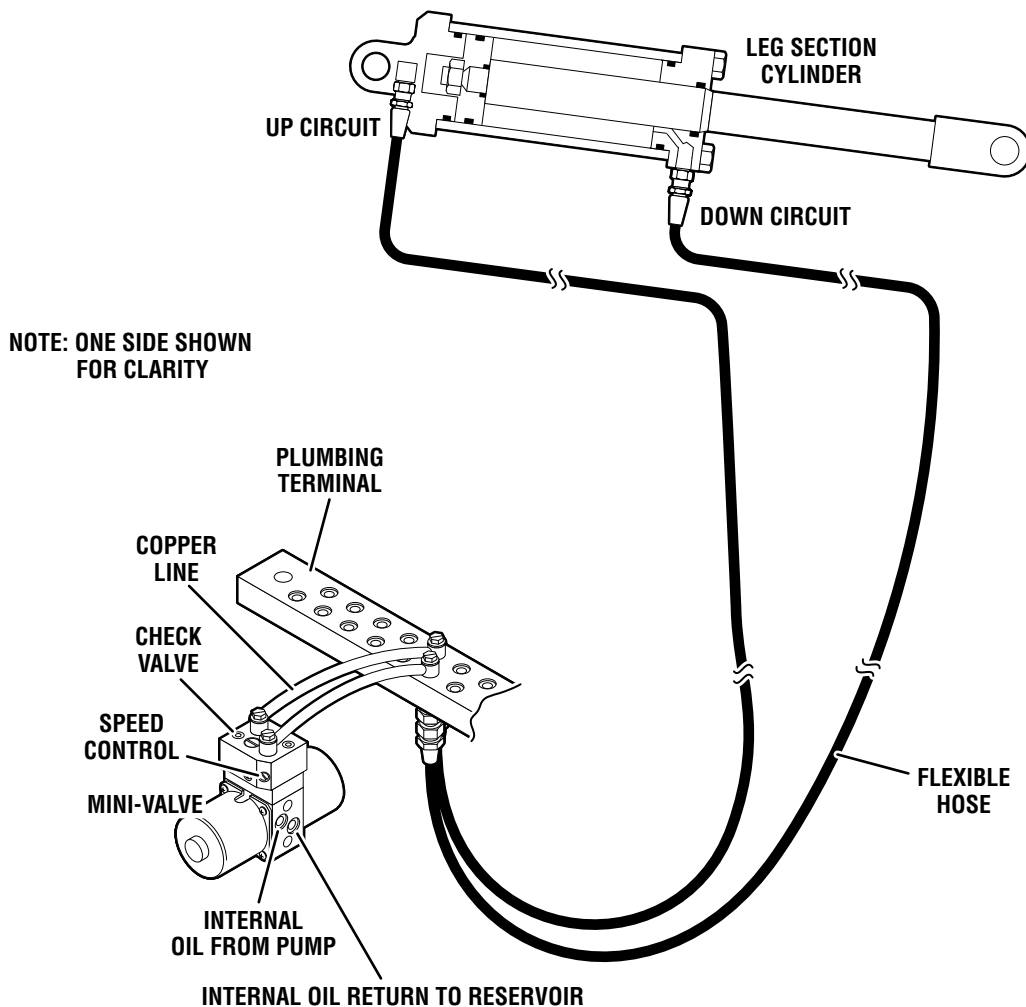

82206-306

Figure 3-6. Leg Section Circuit

## 3-9. SLIDE DIAGNOSIS CHART

**Problem**


Slide function moves improperly

**Reason**

Incorrect Speed Adjustment  
 Spool Valve Not Centered  
 Defective Check Valve  
 Low on Oil  
 Pinched Hose  
 Defective Mini-Valve  
 Pressure Relief Valve Not Set Properly  
 Defective Solenoid  
 Defective Relay Box or Pendant Control  
 Loose Retaining Hardware  
 Microswitch out of adjustment  
 Loose Table Top

Slide function chatters or loses position

Defective or Dirty Check Valve  
 Oil Leakage in Circuit  
 Air Inside Cylinder  
 Pinched Hose  
 Low on Oil

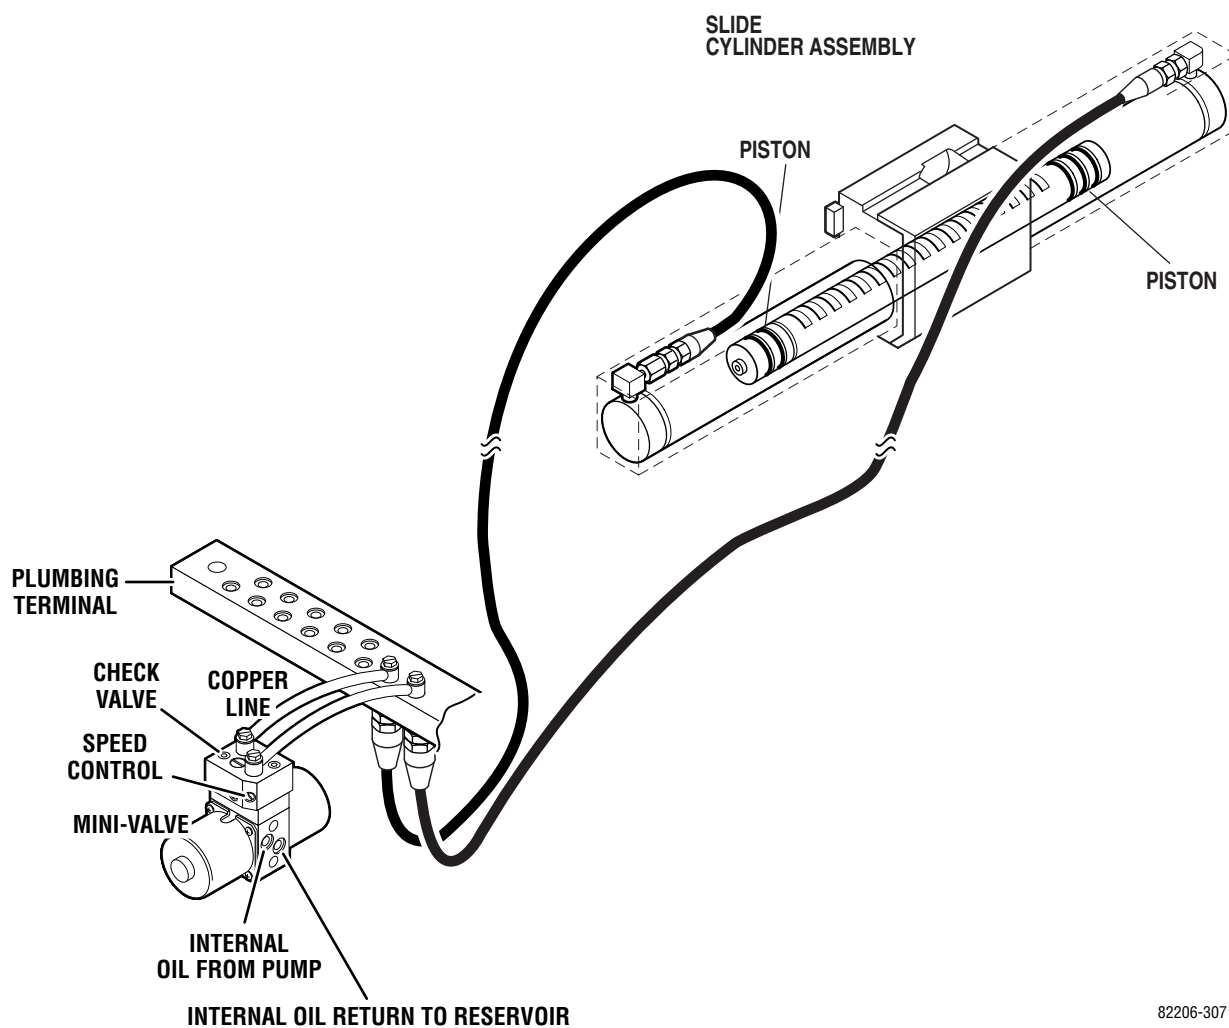

82206-307

Figure 3-7. Slide Circuit



3-10. KIDNEY LIFT DIAGNOSIS CHART

**Problem**


Kidney Lift moves improperly

**Reason**

- Incorrect Speed Adjustment
- Spool Valve Not Centered
- Defective Check Valve
- Low on Oil
- Pinched Hose
- Defective Mini-Valve
- Pressure Relief Valve Not Set Properly
- Defective Solenoid
- Defective Relay Box or Pendant Control
- Bypass Valve out of Adjustment

Kidney Lift chatters or loses position

- Defective or Dirty Check Valve
- Oil Leakage in Circuit
- Air Inside Cylinder
- Pinched Hose
- Low on Oil
- Lift Rods Binding

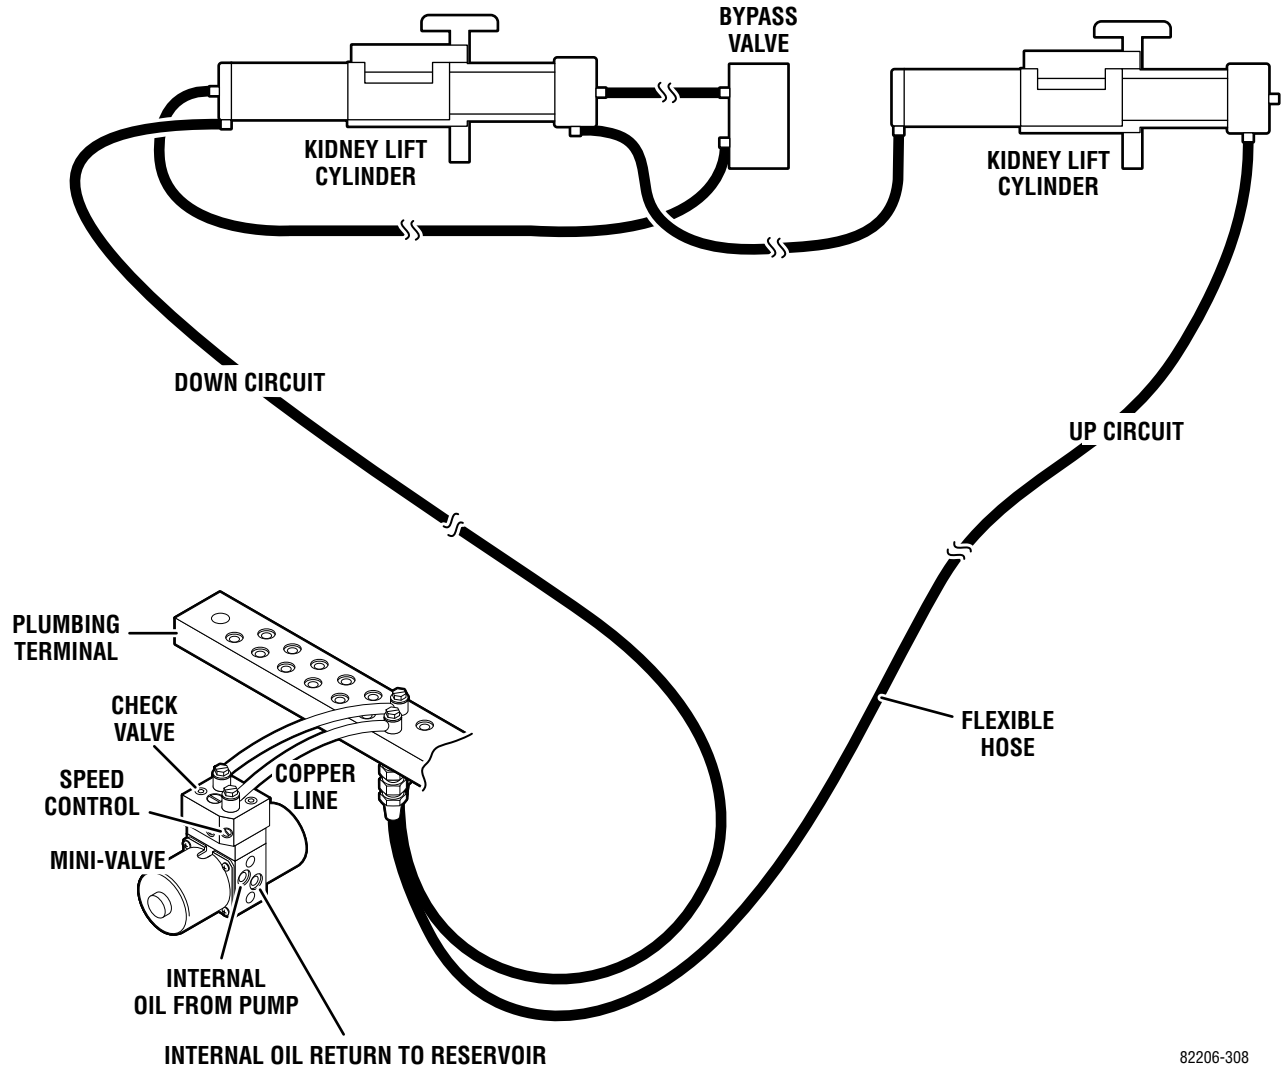

82206-308

Figure 3-8. Kidney Lift Circuit

### 3-11. BRAKE CIRCUIT DIAGNOSIS CHART

#### Problem

Brakes will not set properly

#### NOTE

If brakes have been released with the Emergency Brake Release Valve, brakes will not reset until BRAKE UN-LOCK Circuit has been activated.

#### Reason


Emergency Brake Release Valve Open or Defective  
Spool Valve Not Centered  
Defective Check Valve  
Low on Oil  
Pressure Relief Valve Not Set Properly  
Pinched Hose  
Defective Mini-Valve  
Defective Relay Box or Pendant Control  
Loose Retaining Hardware

Brakes Will Not Stay Locked

Emergency Brake Release Valve Open or Defective  
Defective or Dirty Check Valve  
Oil Leakage in Circuit  
Leaking "O" Ring Inside Cylinder

Brakes will not retract properly

Incorrect Speed Adjustment  
Defective Check Valve  
Spool Valve Not Centered  
Defective Mini-Valve  
Pinched Hose  
Defective Solenoid or Wiring  
Defective Relay Box or Pendant Control  
Defective Brake Cylinder

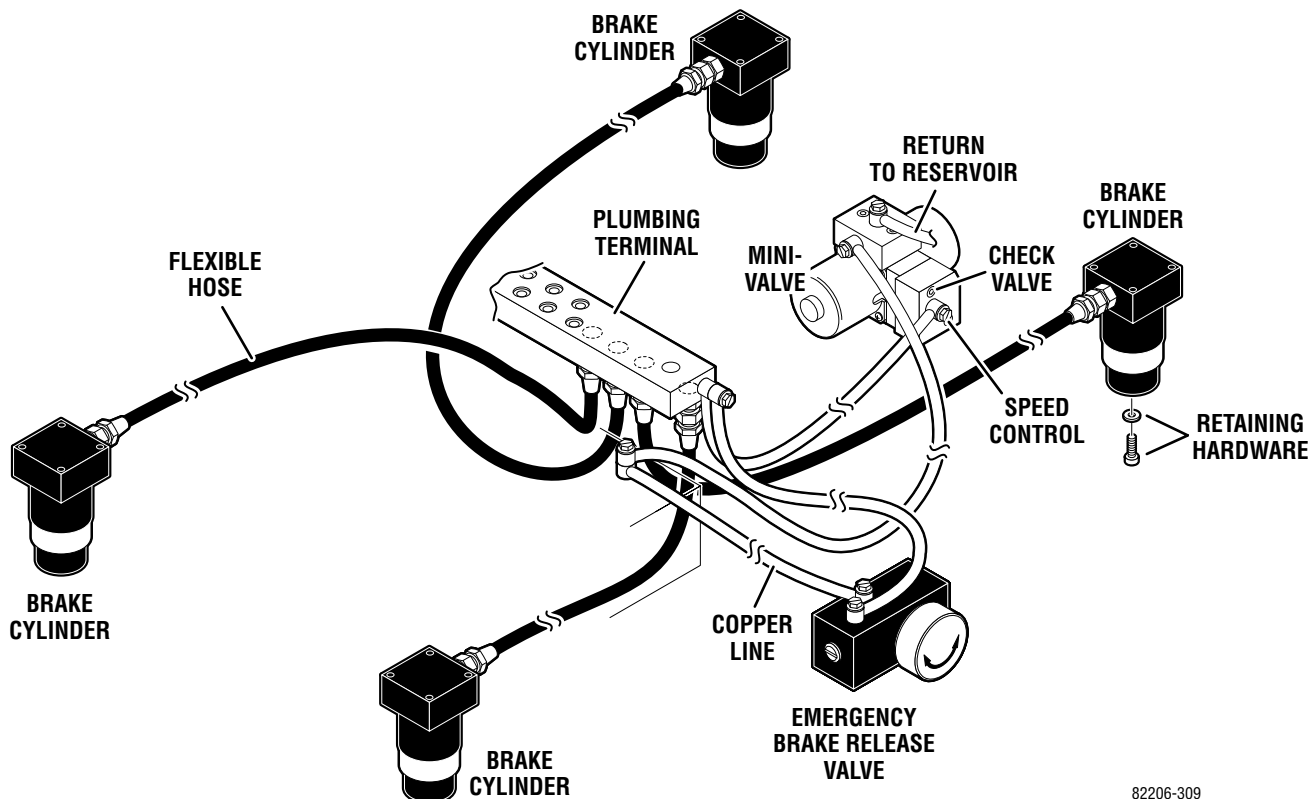

82206-309

Figure 3-9. Brake System Circuit



### 3-13. Kidney Lift System

The Kidney Lift cylinders are connected in series so that both cylinders operate simultaneously.


Hydraulic pressure on one side of the lead piston causes the piston to move. The piston movement forces the hydraulic fluid on the other side of the piston through the system to the other cylinder. This simultaneously activates the other piston. A bypass valve is connected to the right cylinder assembly for initial setup and adjustment of the kidney lift system. Refer to figure 3-9 for valve location. Use the following procedures to bleed or adjust the system if needed.

#### a. Bleeding the System

If the hydraulic lines or cylinders have been disconnected from the kidney lift system for any reason, use the following procedure to bleed the air from the system.

1. Remove the kidney lift top section and begin the procedure with both pistons in the down position (chambers A & C) as shown in figure 3-11.


2. Make sure the bypass valve is closed (valve screw tight) and activate "KIDNEY DOWN". The hydraulic fluid will fill cavity "D" as shown in figure 3-11.

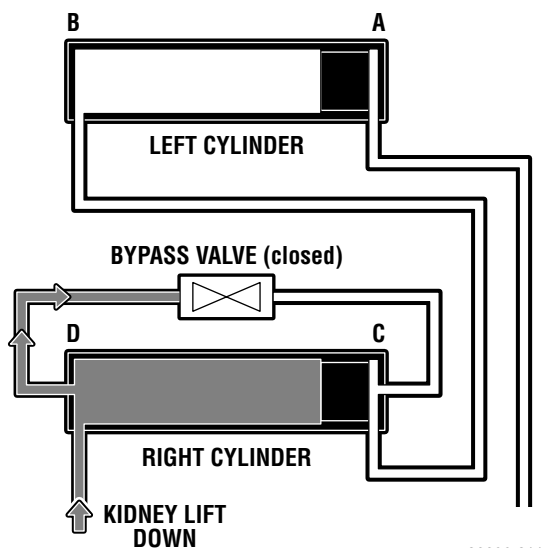

82206-311

Figure 3-11.


3. Open the bypass valve by loosening the screw in the bottom of the valve and activate "KIDNEY UP". Hydraulic fluid fills cavity "A" and pushes the piston into cavity "B". The open valve allows a path for air to escape from cavity "B" without affecting the piston in "C". See figure 3-12.

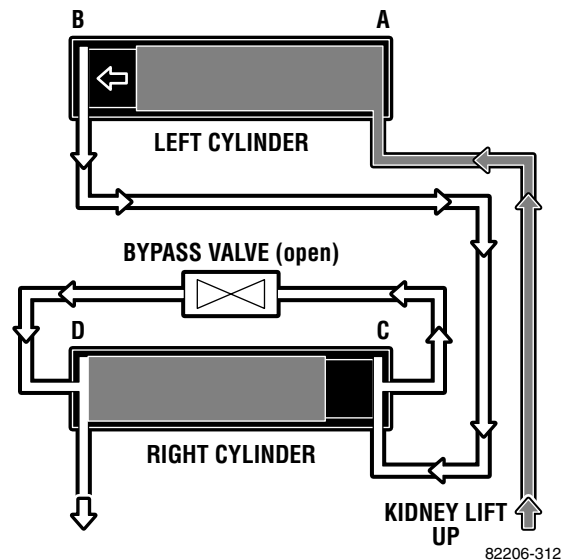

82206-312

Figure 3-12.

4. Leave the bypass valve open and activate "KIDNEY DOWN". Hydraulic pressure keeps the piston in chamber "C", the hydraulic fluid passes through the bypass valve and fills cavity "B" pushing the piston into cavity "A". See figure 3-13.

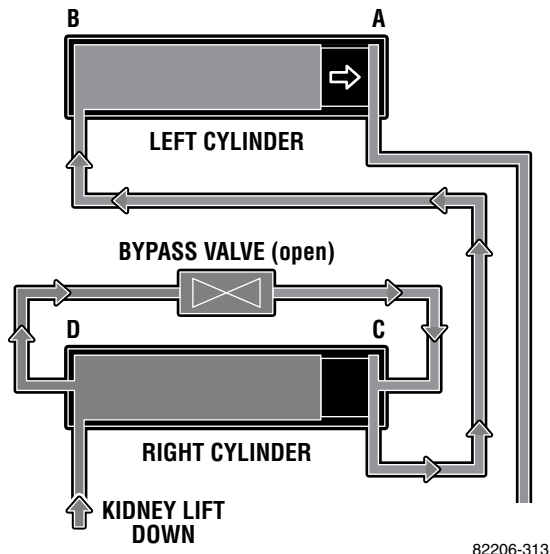

**Figure 3-13.**

5. Repeat steps 3 and 4 as needed to remove any remaining air in the system.

6. With both pistons in the full down position, activate "KIDNEY DOWN" to apply full system pressure and close the bypass valve (tighten the screw).

## **b. Cylinder Adjustment**

If either of the kidney lift cylinders reaches the end of the down stroke before the other one, an adjustment is needed. Use the following procedure to adjust the system.

1. If the right side bottoms out before the left side, open the bypass valve and activate "KIDNEY DOWN" to align the cylinders.

2. If the left side bottoms out before the right side, activate "KIDNEY UP" to raise the cylinders. When the cylinders are at the full up position, open the valve and activate "KIDNEY UP" to align the cylinders. Close the valve before lowering the cylinders.

3. When the adjustment is complete, make sure the cylinders are completely down, activate "KIDNEY DOWN" and tighten the screw to close the valve.

**SECTION IV ELECTRICAL SYSTEM****4-1. General**

The complete electrical system (with the exception of the hand-held pendant control and the return circuit micro-switches) is contained within the base of the table. The pump motor and the hydraulic valves are controlled electrically with the pendant control.

The electrically operated functions are as follows:

- ELEVATION - Up and Down
- TRENDELENBURG - Head up and down
- LATERAL TILT - Right and left
- BACK SECTION - Up and Down
- LEG SECTION - Up and Down
- TOP SLIDE
- FLEX / REFLEX
- KIDNEY LIFT - Up and down
- LEVEL - Return to level
- BRAKE UNLOCK - Brake release

The power requirements are 120 VAC, 60 Hz. The main power on-off switch is an enclosed DPST circuit breaker type and the power cord is a three-wire, fifteen foot long, removable, UL listed cord with a three-prong hospital grade plug.

**4-2. Components**

Refer to figure 4-1 for the relationship of the electrical components.


**a. Wires, Connectors, Switches, Fuse** - These provide the path for the various electrical circuits.

**b. Relay Box** - Contains the step down transformer, full wave rectifier, micro-processor and relay switches. The relay switches are activated by the pendant control signal to the micro-processor and in turn energize the solenoids.

**c. Hand-Held Pendant Control** - Contains circuit board mounted switches and a micro-processor which activate the relay box. Operates on 5 VDC.

**d. Solenoids** - These electrically open and close the hydraulic ports of the mini-valve to direct the fluid to the correct cylinders. They operate on 24 volts.

**e. Motor/Pump Assembly** - 24 VDC motor with internal thermal protection.

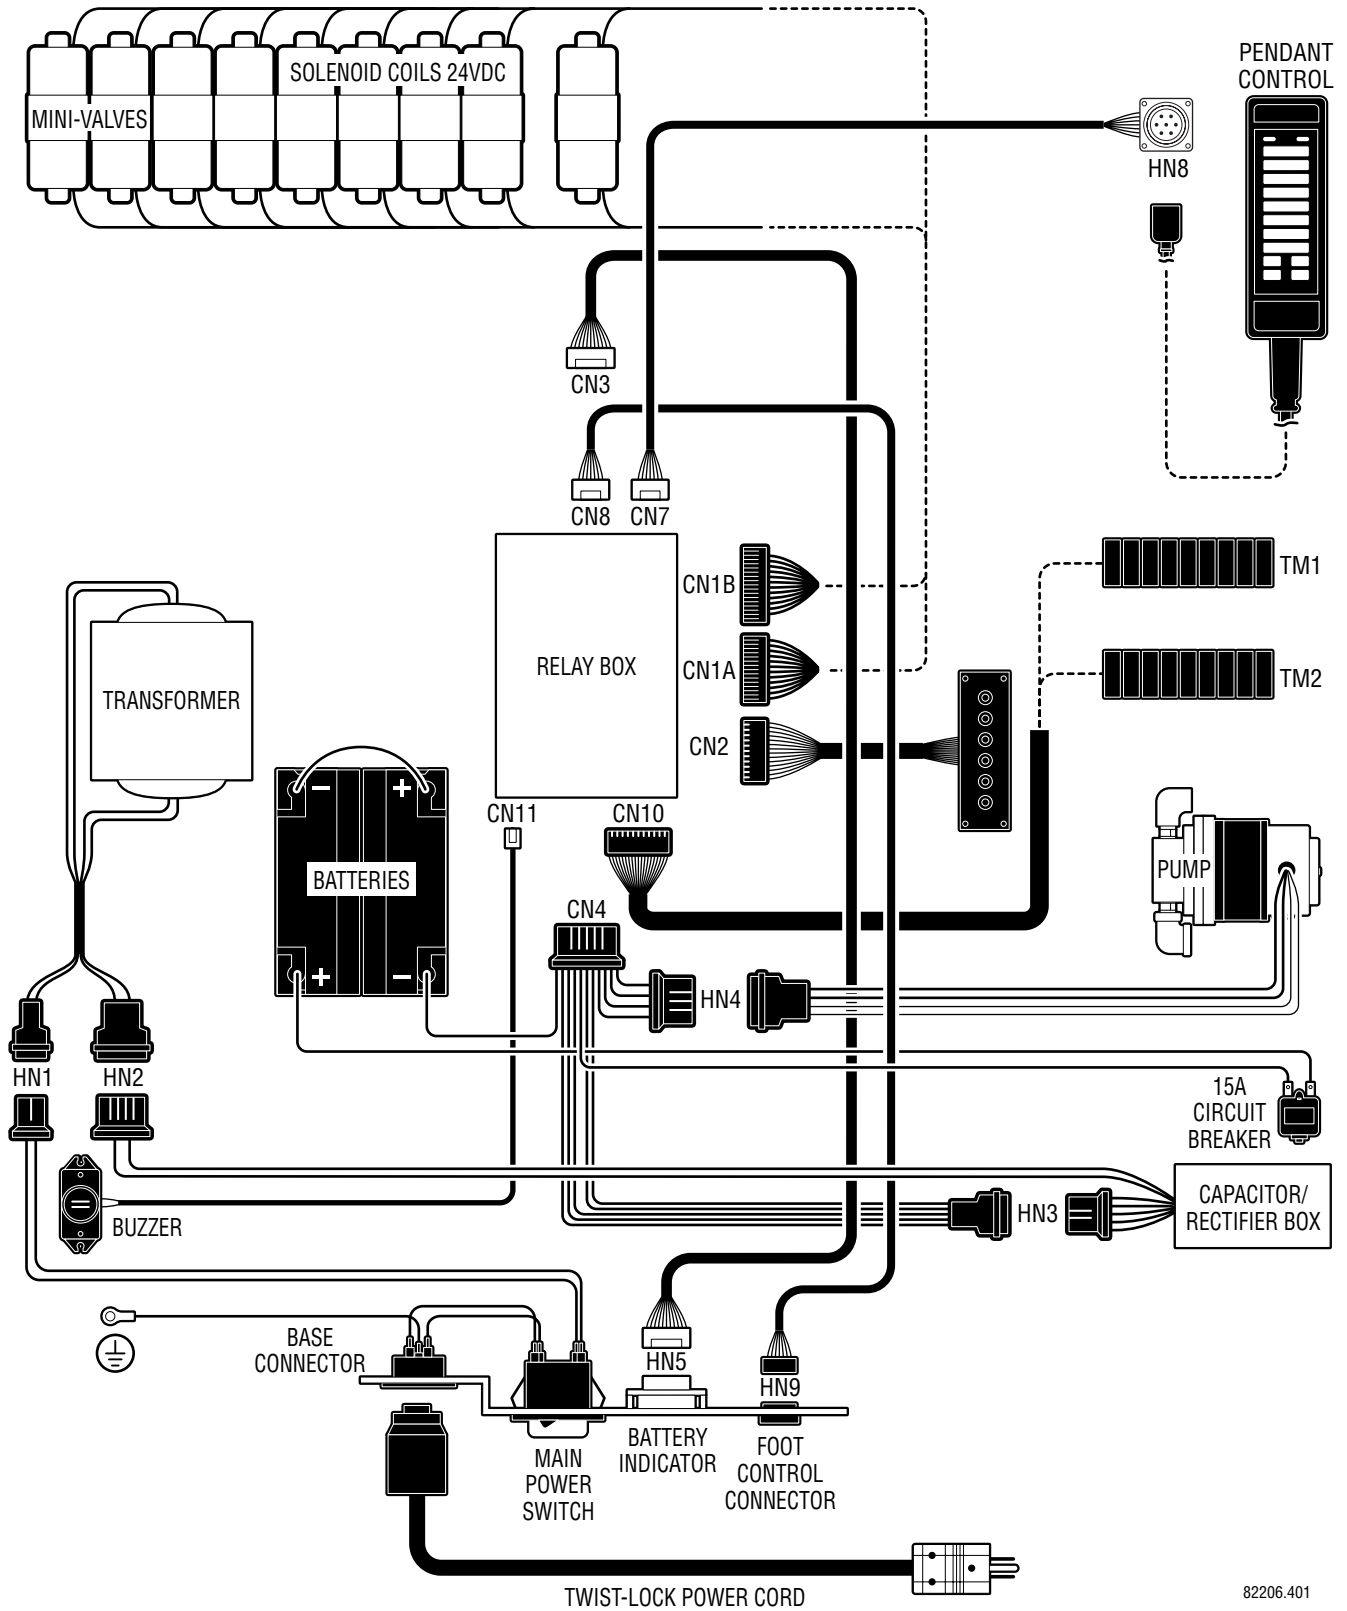

82206.401

Figure 4-1. 3501B Electrical Circuit Block Diagram

### 5-1. General

The battery table components operate on 24VDC. The internal charging system also incorporates the components to transform the 120VAC input to 24VDC output to the components.

### 5-2. Troubleshooting Notes

The basic operation of each component will be defined along with a figure and an explanation on how to check it out.

Certain defective components could cause the entire table to stop functioning or only one control function to stop. It would depend on what part of the component failed. Other defective components would only cause one control function to stop.

The following defective components could cause all control functions to be affected:

- a. Motor/Pump Assembly
- b. Main Switch Circuit and Wiring
- c. Pendant control

The following defective components could cause all control functions to be affected or only one control function:

- a. Relay Box
- b. Pendant Control
- c. Auxiliary Switches

The component listed below would only affect one control function:

Solenoid

When troubleshooting an electrical circuit, start at the problem and work back to the power source.

#### NOTE

- Battery table troubleshooting should begin by switching the operating mode. For example; if a function fails in the AC120V mode, switch to the BATTERY mode. If the function now operates, the problem is probably located between the power cord and the relay box. If the function also fails in battery operation, use the auxiliary switches. If the function now operates, the problem is probably in the pendant control, connectors or wiring from the pendant control to the relay box.
- All connector pins are numbered usually with very small numbers.

### 5-3. Main Switch

The main power supply, 120 VAC, 60 HZ, comes in through the power cord and through the Power Switch. The Power Switch opens both lines when in the "OFF" position. The Power Switch is also a 10 Amp circuit breaker that is used to protect the complete electrical system.

#### a. Main Switch Test

The following test will determine if line voltage is applied to connector HN1, which in turn would supply 120VAC power to the table.

1. Plug the power cord into the 120VAC supply (wall receptacle) and turn the main switch ON.
2. Disconnect connector HN1. See figure 5-1. Leave all other connectors connected.




**CAUTION**



Line voltage (120 VAC) will be measured in this test. Do not touch uninsulated connector pins or meter test leads.

3. Use an AC voltmeter capable of measuring 120 VAC and measure the voltage between pins 1 and 2 (black and white wires) located in connector HN1. See figure 5-1. You should receive line voltage 120 VAC.

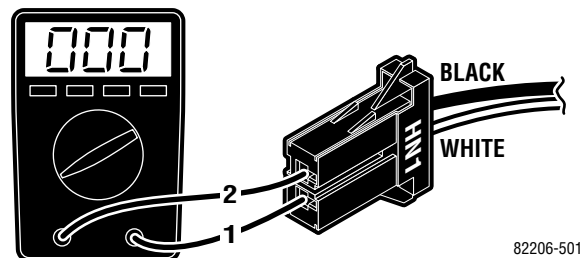

82206-501


**Figure 5-1. Connector HN1 Test**



## b. Test Results

If the correct voltage is obtained, everything is good up to this point and the problem would have to be in another area. If you do not receive the correct measurements, the problem would have to be in the wires, Power Switch, Power Cord, or main electrical Power Cord connector (3 pin twist lock connector).

Check the continuity from the power cord base connector, through the switch and wiring to connector HN1. Remove the power cord, disconnect HN1 (black and white wires), and test as shown in figure 5-2.

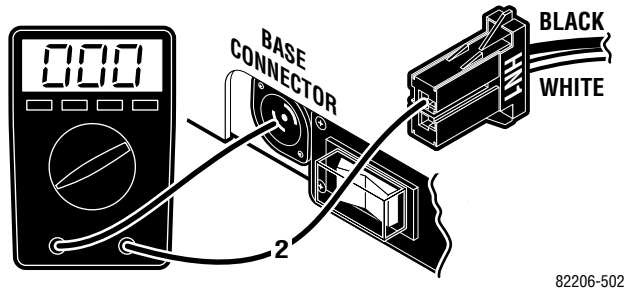

82206-502

**Figure 5-2. Base Connector to HN1 Continuity Test**

## 5-4. Batteries

The BATTERY operating mode is powered by two 12 volt batteries connected in series to provide the 24 volt operating power.

The battery system voltage should be 24VDC at a range of 22VDC to 26VDC. If the battery charge level falls below 23.5 volts the BATTERY operation indicator on the pendant control will blink indicating that the batteries require recharging. The built-in charging system automatically keeps the batteries at the proper charge level when the AC120V operating mode is ON. The charging system will operate while the table is being operated in the AC120V mode.

## a. Battery System Test


1. Disconnect the main power cord and using a DC voltmeter, test each individual battery at its terminals. Meter should read 12VDC  $\pm$  1V.

2. To accurately test the batteries, they must be tested under a full load. Disconnect the main power cord and make sure all other connectors are connected.

3. Turn BATTERY power ON and elevate the table to its full up position.

4. Continue to press the TABLE UP button on the pendant control so that the pump motor continues to run and using a DC voltmeter, check the voltage drop of each battery individually. See figure 5-3.

5. Meter should read 12VDC  $\pm$  1VDC.

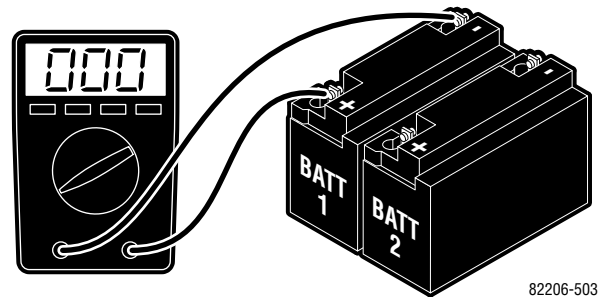

82206-503

**Figure 5-3.**

## b. Test Results

A reading of 11 volts or below indicates the battery needs charging.

After batteries have been fully charged, repeat the full load test. If either battery's voltage drops below 11VDC it should be replaced.

## 5-5. Capacitor / Rectifier / AC120V Transformer

The Capacitor / Rectifier Unit contains the battery charging system as well as the components for AC120V operation (except the transformer).

### a. Transformer Test

1. Confirm 120VAC input at HN1 using Main Switch test in 5-3a.

2. Connect HN1, disconnect HN2 (brown and red wires) and using an AC voltmeter, test the transformer output at HN2. See figure 5-4.

3. Meter should read 22VAC.

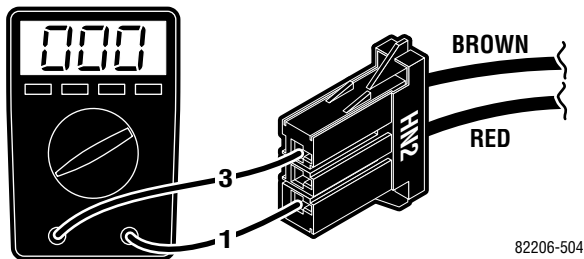


Figure 5-4. Connector HN2 Test

### b. Test Results

If the correct voltage is obtained, everything is good up to this point and the problem would have to be in another area.

If you do not receive the correct measurements, the problem may be in the wires, connectors, or transformer. The transformer is located in the rear of the base under the stainless steel base cover. The stainless steel cover will have to be disconnected and lifted from the base for access to the transformer for further testing.

### c. Capacitor / Rectifier Unit Test

1. Make sure all connectors are connected, connect the power cord and turn AC120V operation ON. Test connectors HN2 and HN3 using a voltmeter. See figure 5-5.

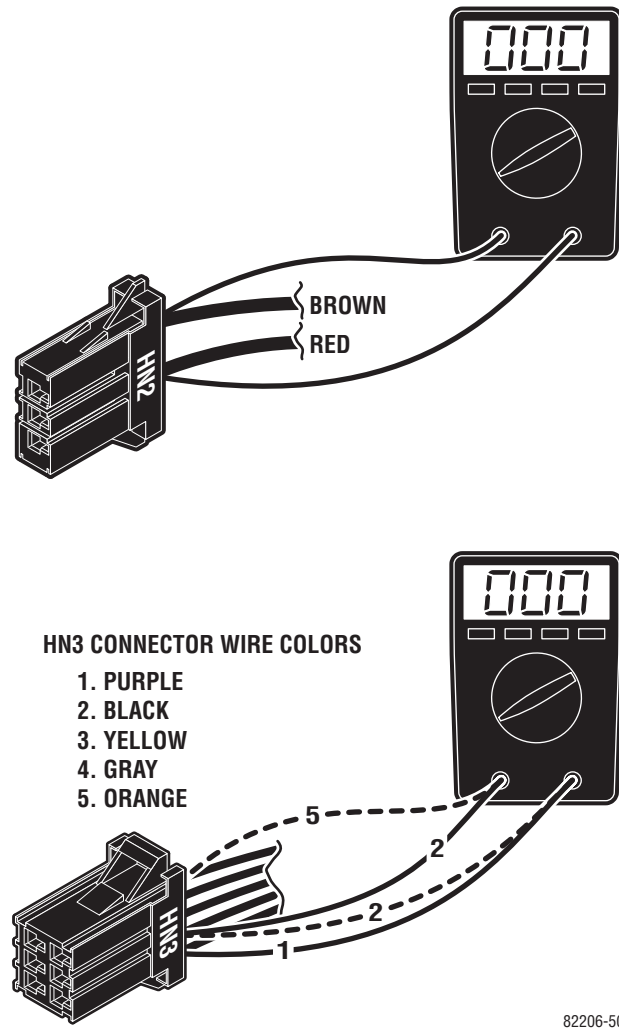


Figure 5-5. Connector HN3

2. Test connector HN2 at pins 1 (red) and 3 (brown). Meter should read AC23V.

3. Test connector HN3 at pins 1 (purple) and 2 (black, ground). Meter should read DC30V.

4. Test connector HN3 at pins 5 (orange) and 2 (black, ground). Meter should read DC27V.

#### d. Test Results

If you do not receive the correct readings, the connectors, wires, or the Capacitor/Rectifier Unit may be defective.

#### NOTE

Normal charging time for a fully discharged battery is approximately 8 hours.

#### e. Charging Indicator Test

Charging Indicator contains 10 LEDs, 3 red, 4 yellow and 3 green.

All Indicators illuminated indicates full charge. Indicators flash when charging is in process. The following list shows the battery charge level as indicated by the lighted LED's:

3 green	100% -Fully charged
2 green	89%
1 green	78%
4 yellow	67%
3 yellow	56%
2 yellow	45% -Needs Charging (BATT indicator on pendant will flash)
1 yellow	34% -Needs Charging
3 red	23% -Needs Charging (poor performance)
2 red	12% -Needs Charging (intermittent performance)
1 red	1% -Needs Charging (inoperable)

Main Power Switch must be ON and power cord attached and plugged into outlet for charging system to operate.

Test output from relay box at CN3 pin 11 common and pin 1 (lowest charge) meter should read approx. 1.8 VDC. See figure 5-6.

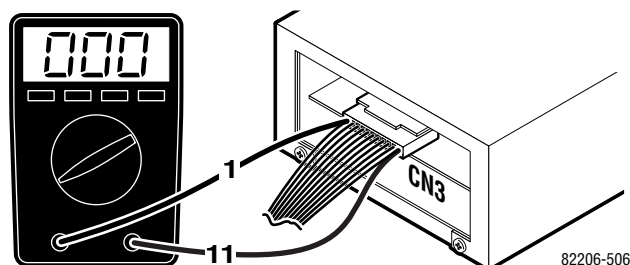


Figure 5-6

#### 5-6. Pendant Control

The Pendant Control is part of the solid state, multiplex, logic control system. The pendant control contains illuminated, circuit board mounted switches and a micro processor. The encoded output from the pendant control is serial bit stream logic.

The output signal is transmitted to the micro processors in the relay box where the logic is decoded and the appropriate relays for the selected function are activated.

Pendant Control troubleshooting should begin by switching the operating mode of the table. For example; if a function fails when operating the table in the AC120V mode, switch to the BATTERY mode. If the function now operates, the problem is not the pendant control and probably is a problem located between the power cord and the relay box. If the function also fails when in battery operation, use the auxiliary switches to operate the function. If the function now operates, the problem is probably in the pendant control, connectors or wiring from the pendant control to the relay box.

a. Pendant Control Test

There are some serviceable components within the Pendant Control. The cord is detachable and can be tested for continuity between the pins on the connectors. Use the following procedure to test the pendant control cord. See figure 5-7.

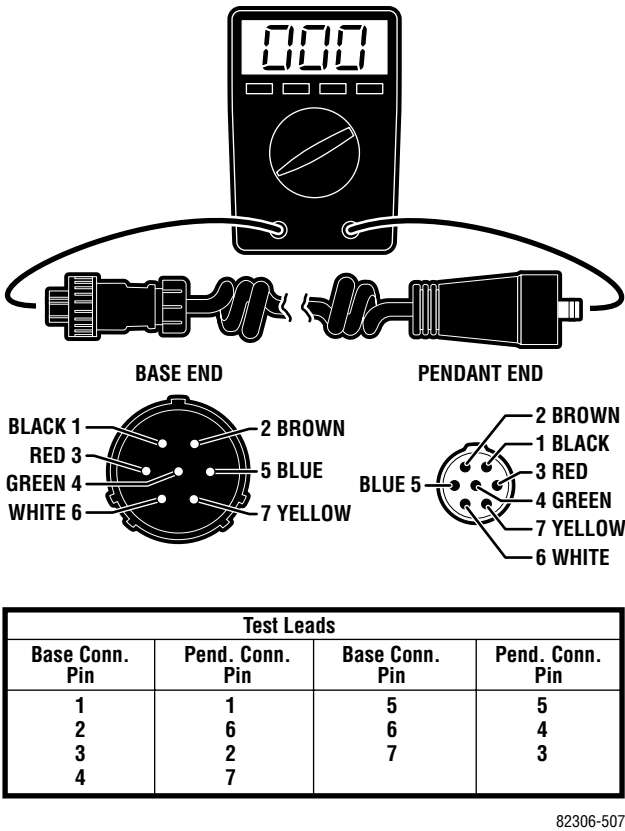


Figure 5-7. Pendant Control Test

Disconnect the cord from the table connector and from the pendant control connector and using an ohmmeter, test the continuity between the corresponding pins in the connectors.

b. Test Results

If you do not receive the correct readings, the wiring or connector pins may be faulty.

c. Table Connector HN8 Test

If correct readings are received, test the wiring from the table connector to connector CN7 at the Relay Box. Disconnect connector CN7 from the Relay Box and using an ohmmeter, test the continuity between the corresponding pins in connectors CN7 and the table connector HN8. See figure 5-8.

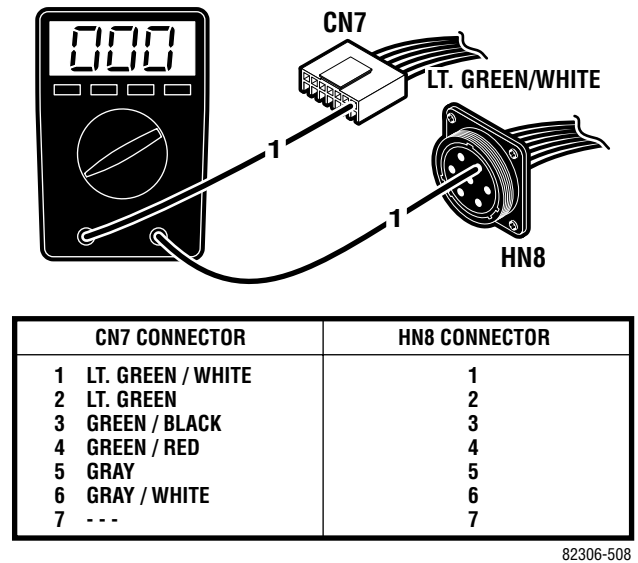


Figure 5-8. Table Connector Continuity Test

d. Test Results

If the correct readings are not obtained, test the wiring from the table connector HN8 to connector HN7 (located behind the Pendant Connector Housing) and from connector CN7 to HN7. Disconnect connector HN7 and using an ohmmeter, test the continuity between the corresponding pins in connectors HN7 to CN7 and HN7 to HN8. Refer to figure 5-8.

If the correct readings are obtained, this part of the circuit is okay and the problem may be the Pendant Control or the Relay Box. Contact SKYTRON if all tests performed indicate that the problem is located in the Pendant Control.

5-7. Auxiliary Switches

The following tests will determine if the auxiliary switches are functioning properly.

a. Switch Test

Disconnect connector CN2 at the Relay Box and using an ohmmeter check for continuity at the connector pins (pin 1A common) while activating the appropriate switch. See figure 5-9. Meter should read 0 ohms.

b. Test Results

If proper meter readings are not received, test the individual switches as necessary. Using an ohmmeter, test the operation of an individual switch with the (+) test lead at the center terminal of the switch and the (-) test lead at the terminal opposite the direction of the switch actuation. Refer to figure 5-10. Meter should read 0 ohms. If the switches check out, the problem would have to be in the wires, the switch circuit board or connector CN2.



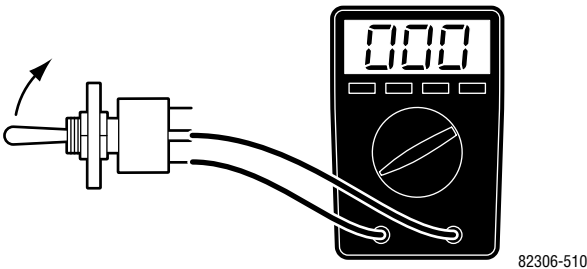


Figure 5-10. Auxiliary Switch Test

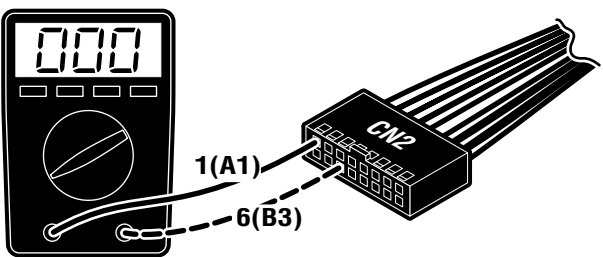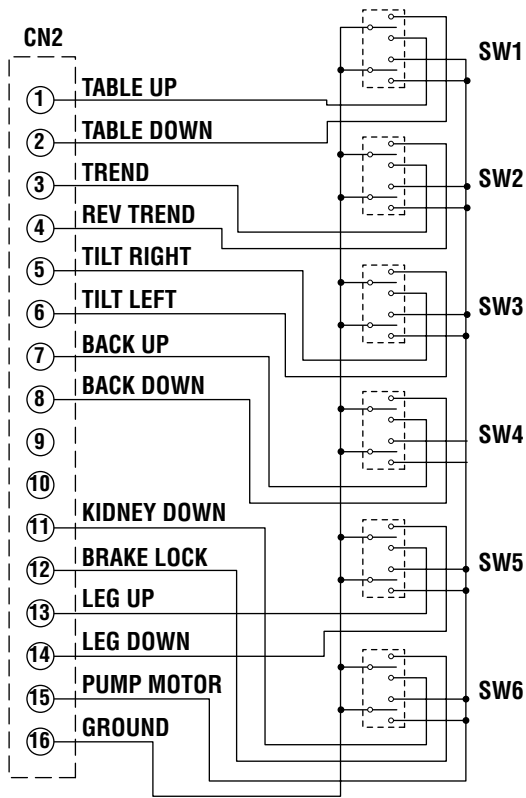

PIN NO	COLOR	PIN NO	COLOR
1 (A1)	Red	9 (A5)	--
2 (B1)	Green / White	10 (B5)	--
3 (A2)	Brown	11 (A6)	Black
4 (B2)	Yellow	12 (B6)	Blue / White
5 (A3)	Orange	13 (A7)	Gray
6 (B3)	Green	14 (B7)	Yellow / White
7 (A4)	Brown / White	15 (A8)	Red / White
8 (B4)	Blue	16 (B8)	Orange / White

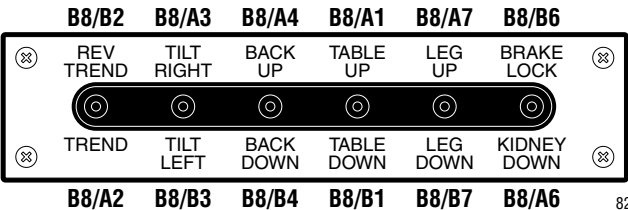


Figure 5-9. Auxiliary Switch Connector CN2

## 5-8. Relay Box

The power supply is directly connected to the relay contacts. When these contacts are closed, 24 volts is supplied to the solenoids which are mounted on the hydraulic mini-valves. One relay is used to supply power to the pump/motor and is always activated no matter what control function is selected. The brake locking circuit relay is also activated when any control function other than BRAKE UNLOCK is *initially* selected.

Also, inside the relay box is a step-down transformer and full-wave rectifier which decreases the voltage to 5-6 volts. This low voltage potential controls the relays by the use of the hand-held pendant control buttons. Basically the relays enable a 5-6 volt potential to control the 24 volt circuit.

The following tests will determine if the relay box is functioning correctly.

### a. Checking Relay Box Input Power


1. Connect power cord to table. Plug the power cord into the 120VAC supply (wall receptacle). Disconnect connector CN4, leave all other connectors connected.

2. Using a DC voltmeter, test input power for both the BATTERY and AC120V operating modes. See figure 5-11. Meter should read approximately 24 -28 volts.


### b. Test Results:

If you do not receive the correct meter readings, the problem is in the input wiring, connectors or components. If the correct readings are obtained, proceed to the next step.

#### BATTERY MODE TEST (main power OFF)

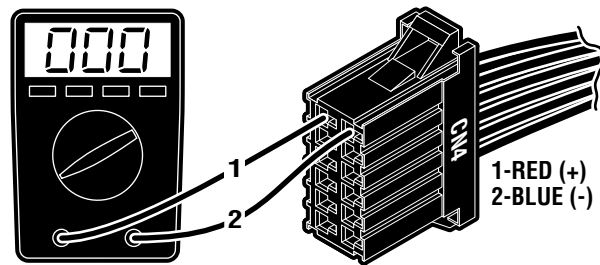

#### AC120V MODE TEST (main power ON)

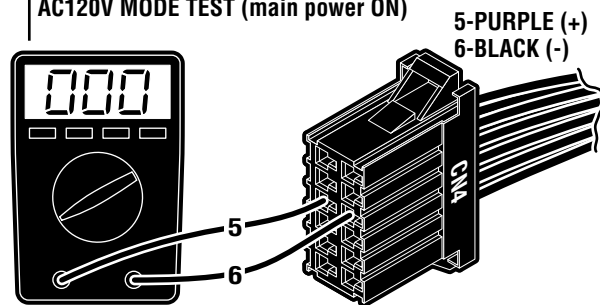


CONNECTOR CN4 COLOR CODE			
1	RED	7	WHITE
2	BLUE	8	WHITE
3	RED	9	YELLOW
4	BLACK	10	GRAY
5	PURPLE	11	ORANGE
6	BLACK	12	---

82306-511

Figure 5-11. Relay Box Input

### c. Checking Output to Pump

1. Make sure all connectors are connected and activate the AC120V operating mode. See figure 5-12.

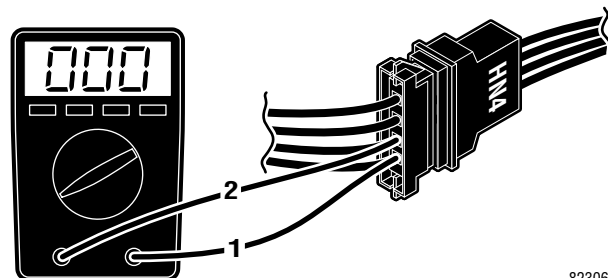

82306-517

Figure 5-12. Output to Pump

2. Test HN4 at pin 1(+) and pin 2(-) with a DC voltmeter. Meter should read approximately 24-28 volts when any function button is activated. If no voltage is present, use an ohmmeter to test the continuity from HN4 to CN4 (red and black wires).



### d. Checking Output to Solenoids


This test checks the voltage that is used to energize the solenoids.

1. Activate either BATTERY or AC120V operating mode.

#### NOTE

- The Brake Lock function is activated by pressing any function button (except BRAKE UNLOCK). A timer in the Relay Box allows continuous output for about 7 seconds. If the brakes are already locked, no output is provided.

- The BRAKE UNLOCK button activates another timer in the relay box which allows continuous output for the brake release function for approximately 7 seconds. If the brakes are already released (using the BRAKE UNLOCK button) no output is provided.

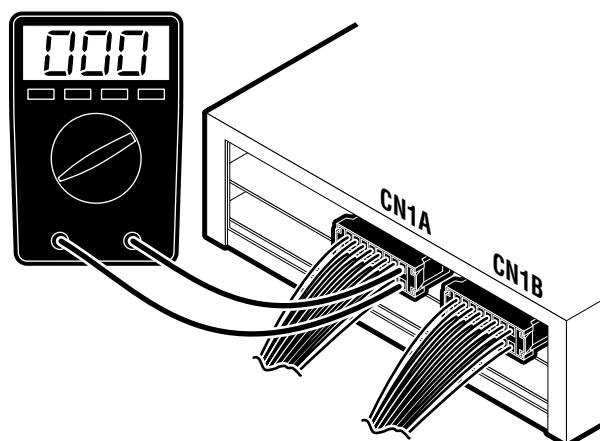

CN1A CONNECTOR		CN1B CONNECTOR	
FUNCTION	PINS	FUNCTION	PINS
Table Up	1 - 2	Back Up	1 - 2
Table Down	3 - 4	Back Down	3 - 4
Trendelenburg	5 - 6	Slide To Foot	5 - 6
Re. Trendelenburg	7 - 8	Slide To Head	7 - 8
Tilt Right	9 - 10	Kidney Down	9 - 10
Tilt Left	11 - 12	Kidney Up	11 - 12
Reflex	13 - 14	Leg Up	13 - 14
Flex	15 - 16	Leg Down	15 - 16
		Brake Set	17 - 18
		Brake Unlock	19 - 20

82306-512

2. Test connectors CN1A and CN1B from the back while attached to the relay box. All connectors should be connected.

3. Activate each of the pendant control buttons and measure the output voltage for the corresponding connector pins with a DC voltmeter. See figure 5-13. Meter should read 24 volts.

### e. Test Results:

If you do not receive the correct meter readings, the relay box is defective and should be replaced.

**Figure 5-13. Solenoid Output Connectors**

#### NOTE

- Before deciding the relay box is defective, check the wires and pins in the connector blocks to make sure they are not loose or making a bad connection with their mate.
- If the battery power is ON and no table functions have been activated for 3 hours, the power off circuit will interrupt the battery power.

### f. Checking Output to Pendant Control

The output to the Pendant Control can not be tested without specialized equipment. If all tests have been conducted and it appears that the Relay Box is faulty, contact SKYTRON.

5-9. Main Wire Harness Continuity Tests

If correct meter readings are not received in tests between components, before replacing the components, test the Main Wire Harness to be sure all connectors and wires are making a good connection.

a. CN4 to Batteries Test

- 1. Disconnect connectors CN4 and the (+) and (-) connectors from the batteries. Leave all other connectors connected.
- 2. Using an ohmmeter, test for continuity between pin 1 of CN4 and battery (+) connector. Also test between pin 2 of CN4 and battery (-) connector. See figure 5-14.

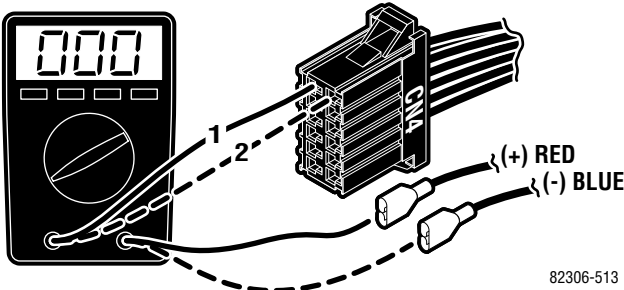


Figure 5-14.

NOTE

The 15 amp battery protection circuit breaker is in the line between CN4 pin 1 and the battery connector. Test the continuity of the circuit breaker if correct meter reading is not received.

b. CN4 to Pump Test

- 1. Disconnect connectors CN4 and HN4. Leave all other connectors connected.
- 2. Using an ohmmeter, test for continuity between the pins of CN4 and pins on HN4. See figure 5-15.

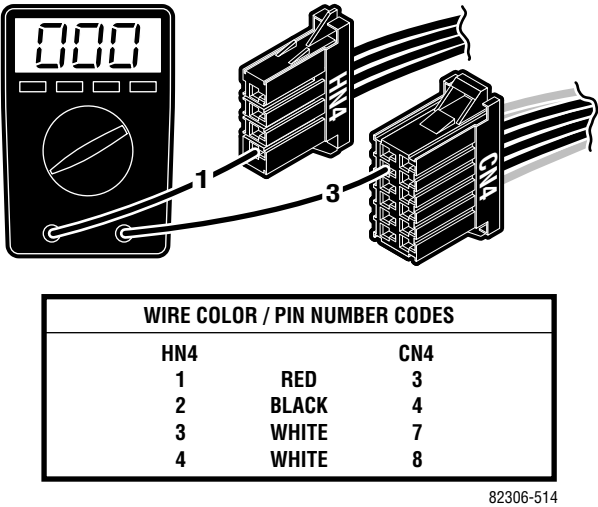


Figure 5-15.

c. CN4 to Capacitor / Rectifier Unit Test

- 1. Disconnect connectors CN4, and HN3. Leave all other connectors connected.
- 2. Using an ohmmeter, test for continuity between pins of CN4, and HN3. See figure 5-16.

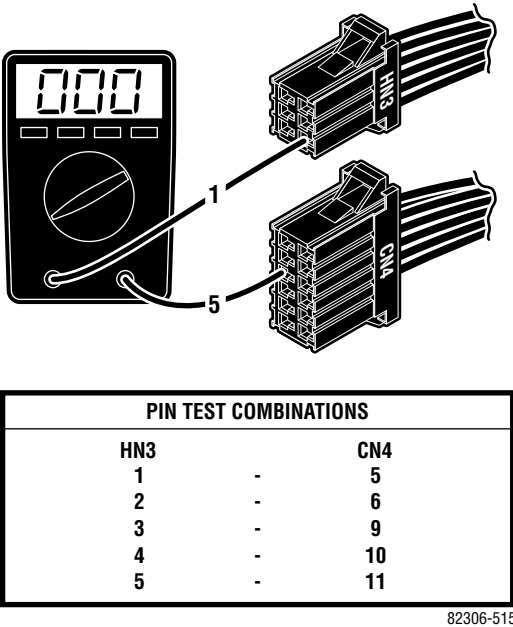


Figure 5-16. CN4 and HN3



## 5-10. Solenoids

The solenoids are energized by 24 volt potential that is controlled by the relay box. The solenoid windings are protected from excessive heat by an internal thermal fuse that will open after approx. 7 minutes of continuous operation. The solenoid must be replaced if the internal thermal fuse has been blown. The solenoids are mounted directly on either side of the hydraulic mini-valves and push the spool valve in one direction or the other depending upon which solenoid is activated.

### a. Solenoid Test

The resistance of the solenoid coil can be checked out using an ohmmeter R x 1 scale.

1. Disconnect connectors CN1A and CN1B. Measure the resistance between the two pins at the connector for the solenoid in question as shown in figure 5-17. Polarity of meter leads is not important.

2. The meter should read approximately 16 ohms at room temperature.

3. Measure the resistance between either pin and ground.

4. Meter should read infinity.

### b. Test Results:

If the solenoid does not check out with the meter, it is more than likely defective and must be replaced.

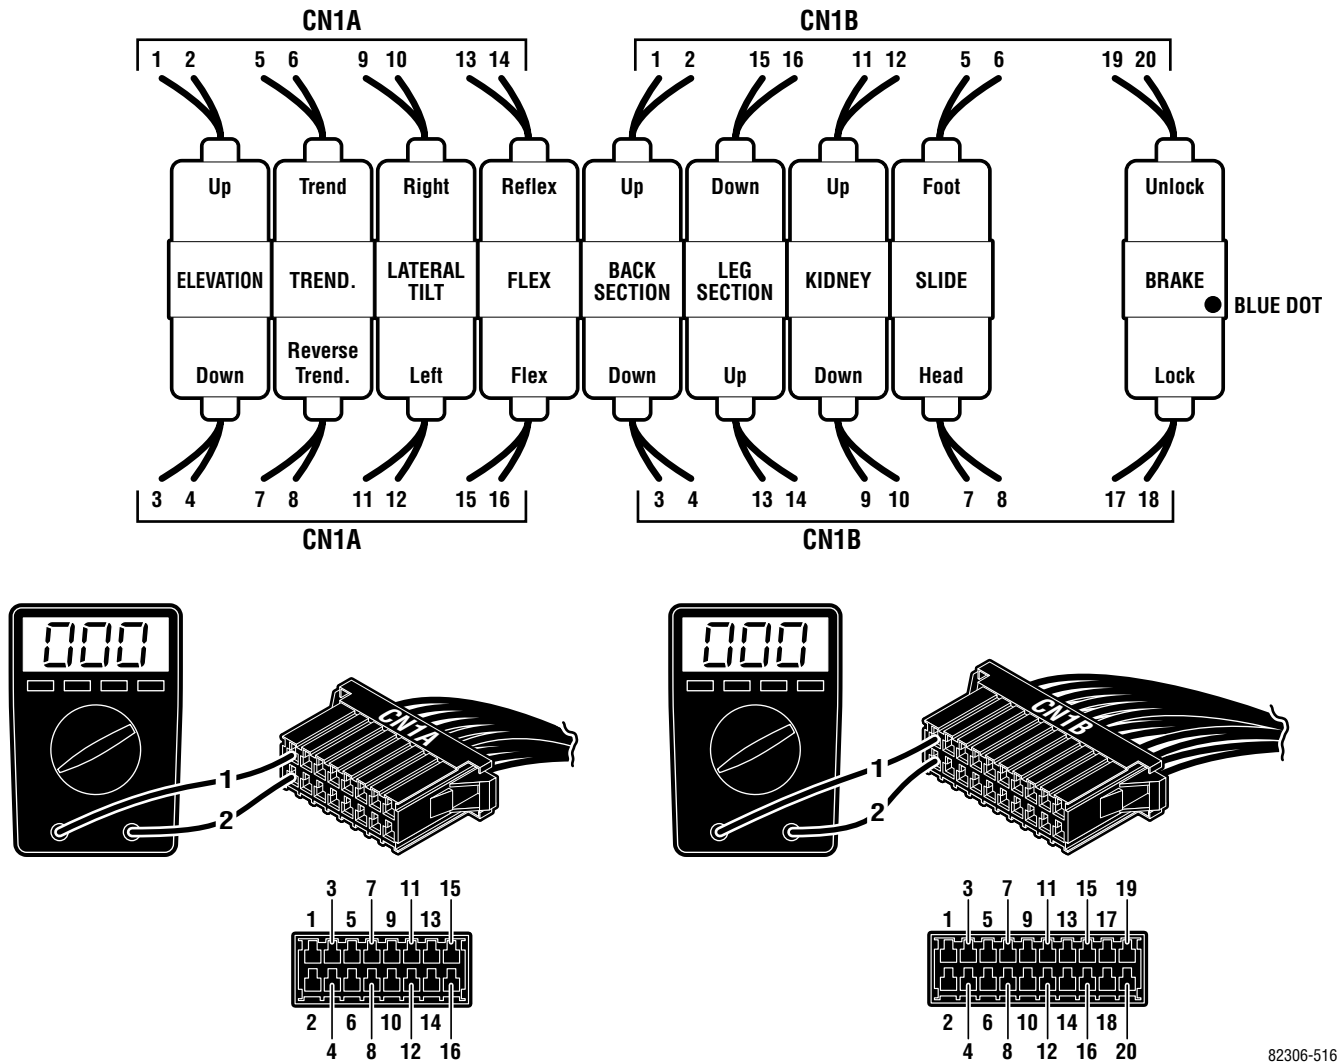


Figure 5-17. Solenoid Test

**NOTE**

Whenever there are several components of the same type, a defective unit can also be detected by substituting a known good unit or wire connector. In some cases this may be faster than using a multi-meter.


**5-11. Motor/Pump Assembly**

The hydraulic pump motor is a thermally protected 24 volt DC electric motor. The oil pump unit is attached to the bottom of the motor and is a gear type displacement pump with a pumping capacity of .4 liter per min. The Motor/Pump Assembly is mounted on insulators in the base of the table.

**a. Motor/Pump Test**

1. Make sure all connectors are connected and activate the AC120V operating mode. See figure 5-18.

2. Test HN4 at pin 1(+) and pin 2(-) with a DC voltmeter. Meter should read approximately 24-28 volts when any function button is activated. If no voltage is present, use an ohmmeter to test the continuity from HN4 to CN4 (red and black wires).

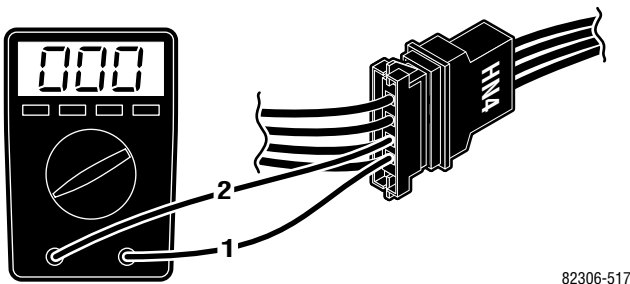

82306-517

**Figure 5-18. Motor Input Voltage****NOTE**


If the pump has been activated continuously for 1-1/2 to 2 minutes, the thermal relay will interrupt the power to the pump.

**b. Thermal Protector Test**

The Thermal Protector is built in to the pump motor and is used to interrupt the current flow to the pump motor to protect it from possible damage due to overheating.

1. Turn OFF both BATTERY and AC120V operating modes.

2. Use an ohmmeter to test for continuity between terminals 3 and 4 on the connector HN4. See figure 5-19.

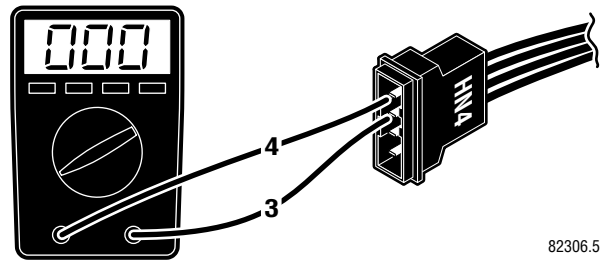

82306.518

**Figure 5-19. Thermal Protector**

3. The Thermal Relay should reset itself after approximately one minute.

4. The Thermal Relay should activate after 1-1/2 to 2 minutes of continuous pump operation.

**c. Motor Resistance Test**


The motor can be statically checked for resistance using an ohmmeter. This test is not 100% accurate because you are checking the motor with very low voltage from the meter and without any load.

1. Using an ohmmeter R x 1 scale, measure the resistance between the pins 1 and 2 of HN4. See figure 5-20.

2. The meter should read 1 to 2 ohms at room temperature.

3. Measure the resistance between either pin and ground.

4. Meter should read infinity.

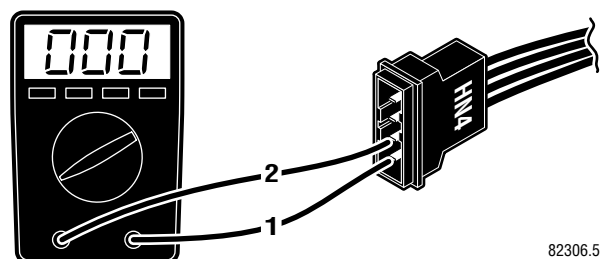

82306.519

**Figure 5-20. Motor Connector HN4****d. Test Results:**

If you do not receive the correct meter readings, the motor or wiring is defective.

### 5-12. Return-to-Level / Positioning Inhibit Micro-Switches.

The return-to-level feature is activated by a single button on the pendant control and automatically levels the major table functions, lateral tilt, Trendelenburg, back section, and leg section.

The kidney lift has a back section-up inhibit switch to prevent the table back section from damaging the kidney lift when the lift is raised. The back section still has the capability to be lowered and raised, but will not raise more than 45° above horizontal until the kidney lift is completely down. If the back section is raised more than 45° above horizontal, the system will not allow the kidney lift to be raised. An audible alarm will sound if the kidney lift inhibit switch is activated and either function is activated - raising back section when Kidney lift is up or raising kidney bridge when back section is above horizontal.

The slide function has inhibit switches to prevent damage to the back and leg sections. If the back section is below horizontal the top will not slide toward the foot end. If the leg section is lowered more than 45° below horizontal the top will not slide

toward the head end. Likewise, if the top is slid toward the foot end, the back section will not go below horizontal. If the top is slid toward the head end, the leg section will not go more than 45° below horizontal.

The return-to-level / positioning inhibit system consists of 15 micro-switches, 3 electrical connectors, 2 terminal strips and the related wiring. The micro-switches are mounted on or adjacent to the function they control and are wired for normally open or normally closed operation. The micro-switches are either cam or lever actuated and can be adjusted at the individual switch mounting brackets. Proper micro-switch operation depends on all top sections being properly secured. Check top section fasteners.

The micro-switches operate on low voltage, and control the function circuits (pump/motor and appropriate solenoid valves) when activated by the pendant control LEVEL button.

The micro-switches are wired to the relay box through a riser cord and to the 26 pin connector CN10. See figure 5-21 for switch location and identification.

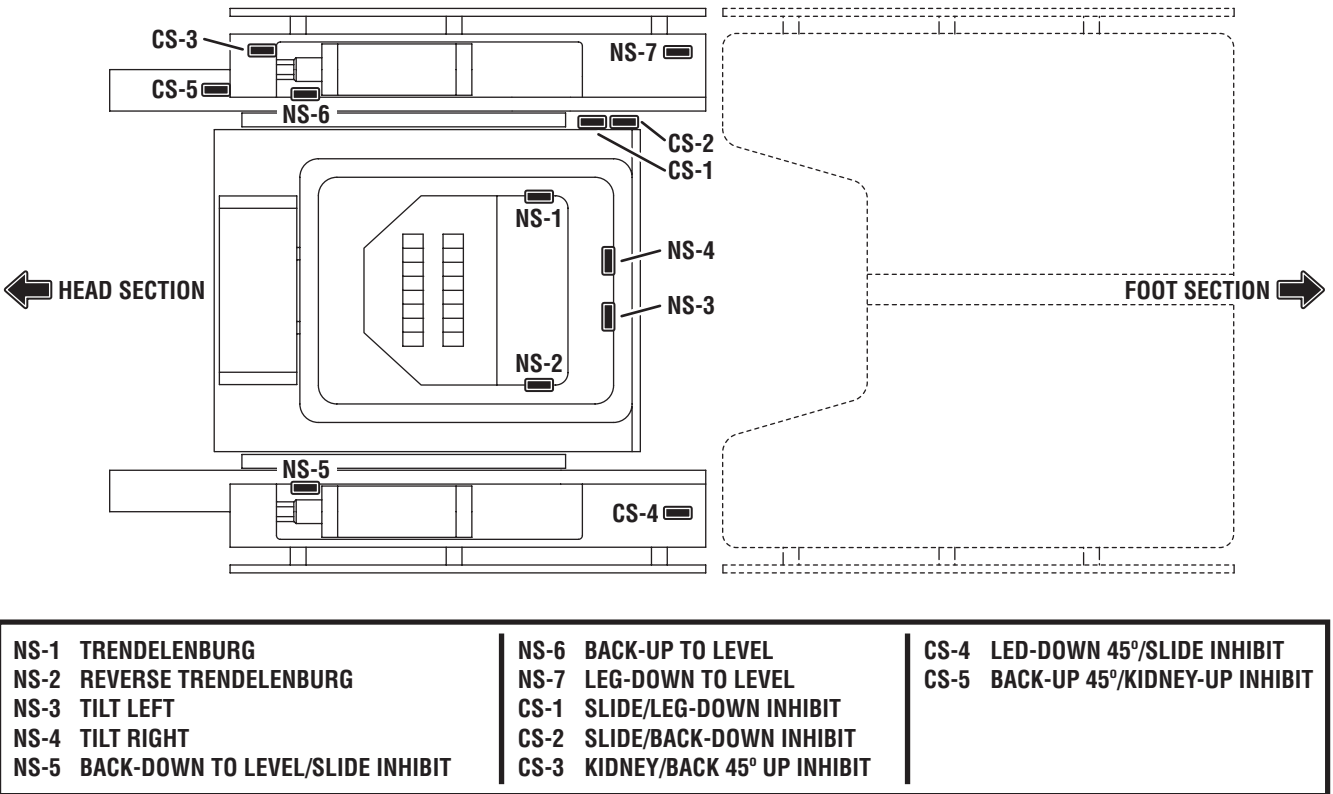


Figure 5-21.

82306-520


### 5-13. Micro-Switch Troubleshooting

If a problem is suspected in the return / positioning circuits, disconnect the connector CN10 from the Relay Box to eliminate the circuits. Ensure that all table functions operate properly using the Pendant Control. If the functions do not work properly using the Pendant Control, refer to the appropriate test section and make all needed repairs before working on the return circuits.

#### NOTE

It is normal for the back section to move up if the LEVEL button is pushed when connector CN10 is disconnected from the relay box.

All of the micro-switches are connected to the relay box via a wiring harness and the micro-switch riser cord using connectors CN10, HN10, HN11 and terminal strips TM1 and TM2. The terminal strips are located under the hose cover on the top of the elevation column. Connectors HN10 and HN11 are located under the slider shroud in the same area as the hydraulic hoses. Connector CN10 plugs into the relay box and is the most convenient location to make circuit continuity checks. See figure 5-22 for connector pin locations.

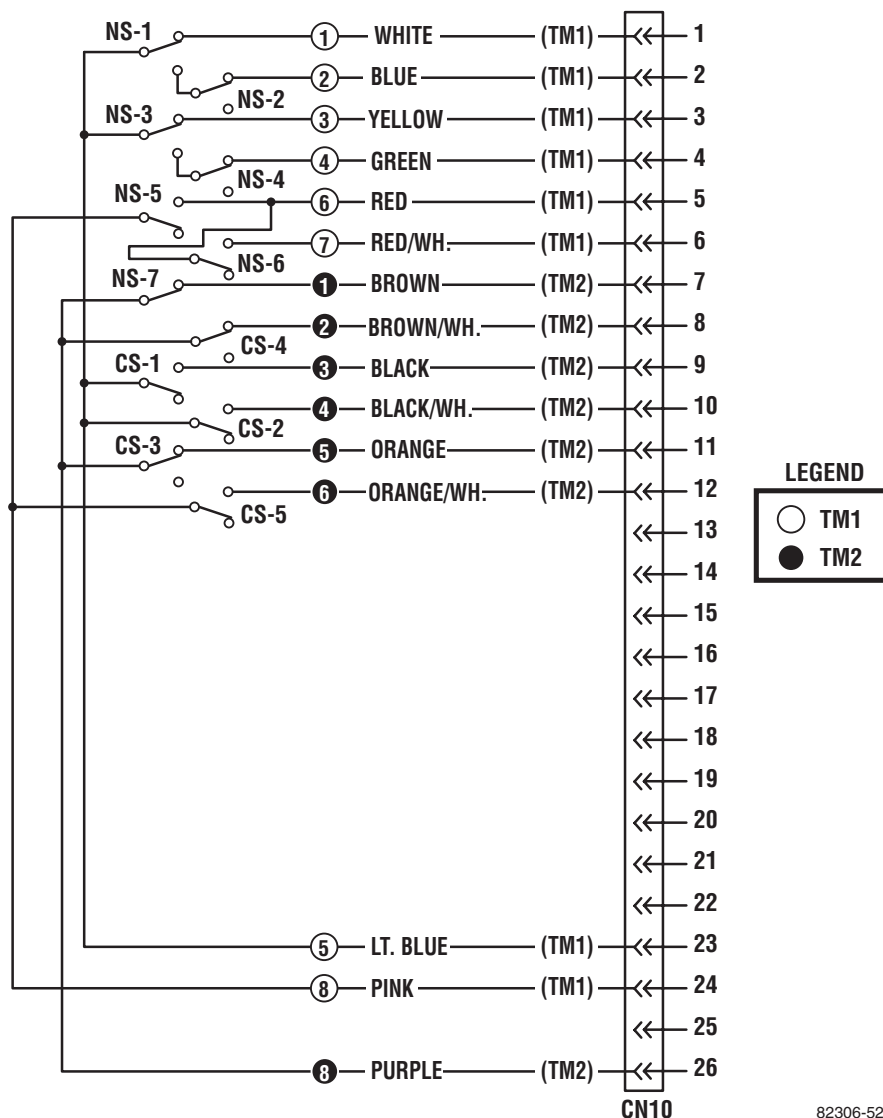

82306-521

Figure 5-22. Return / Inhibit Micro-Switch Test

a. Switch Test

Turn Main Power ON, lock the table brakes, and place the table top sections in a level position with the Kidney Lift down. Disconnect connector CN10 from the relay box and using an ohmmeter, test the wiring and switch operation at the appropriate pin numbers for the micro-switch in question as shown in figures 5-23 through 5-30.

**NOTE**

Be sure to isolate the circuit when making continuity checks.

**NOTE**

If you do not receive the proper continuity results at connector CN10 it does not necessarily mean the micro-switch is defective. There could be a problem with the riser cord between connector CN10 and terminal strips TM1 and TM2, or in the wiring from the switch to connector. Further tests will have to be made to determine the exact problem.

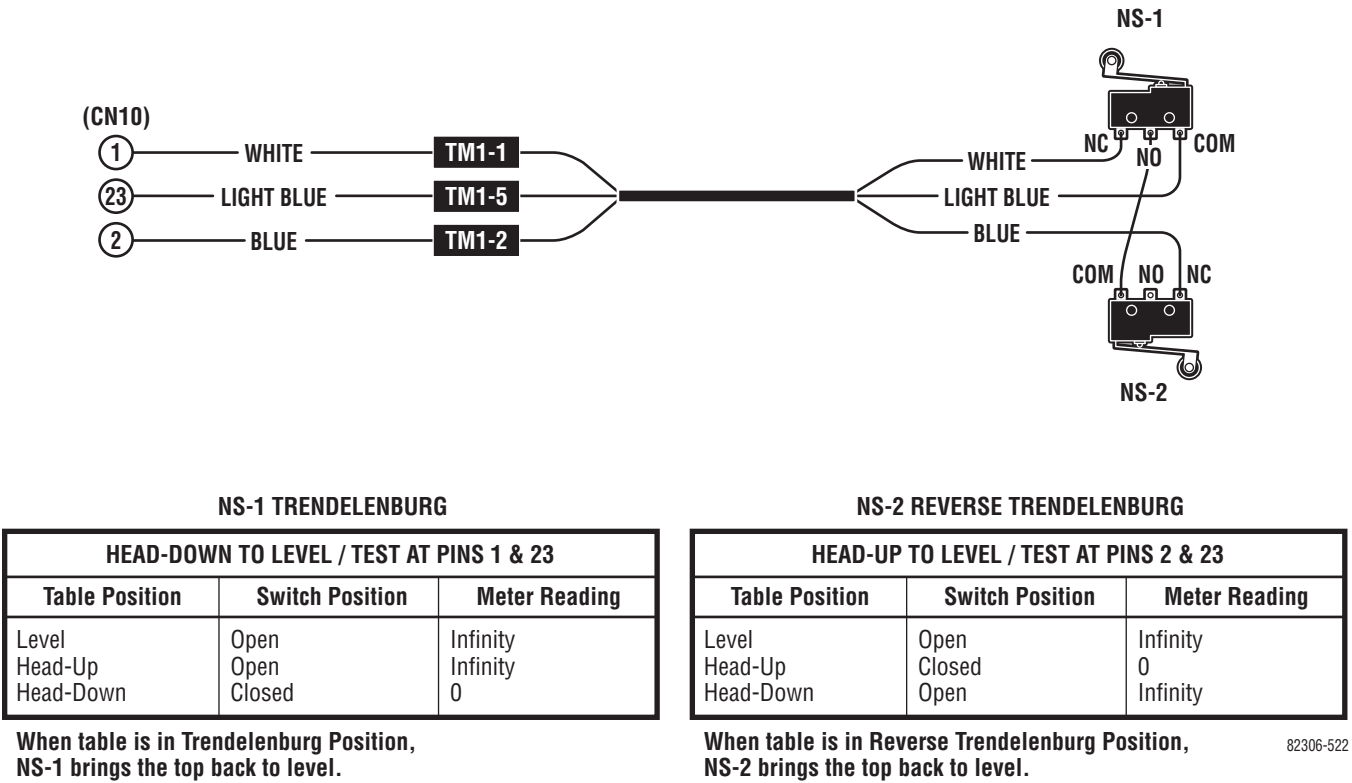


Figure 5-23. Trendelenburg Return Switches

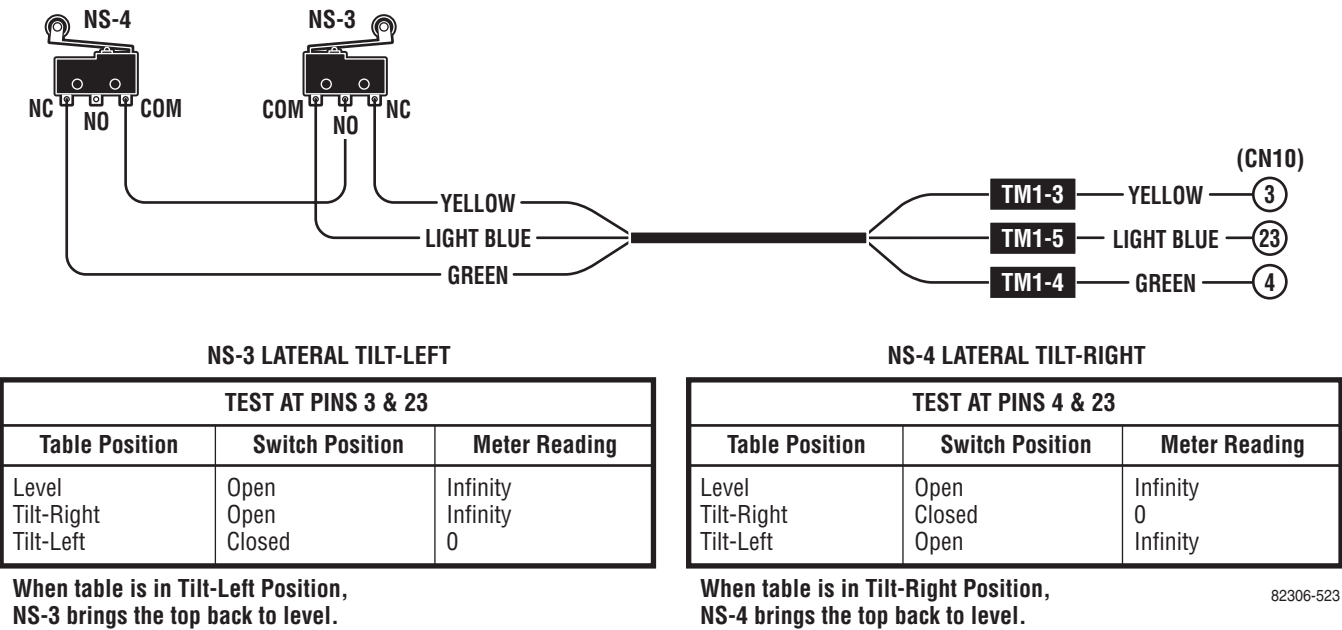


Figure 5-24. Lateral Tilt Return Switches


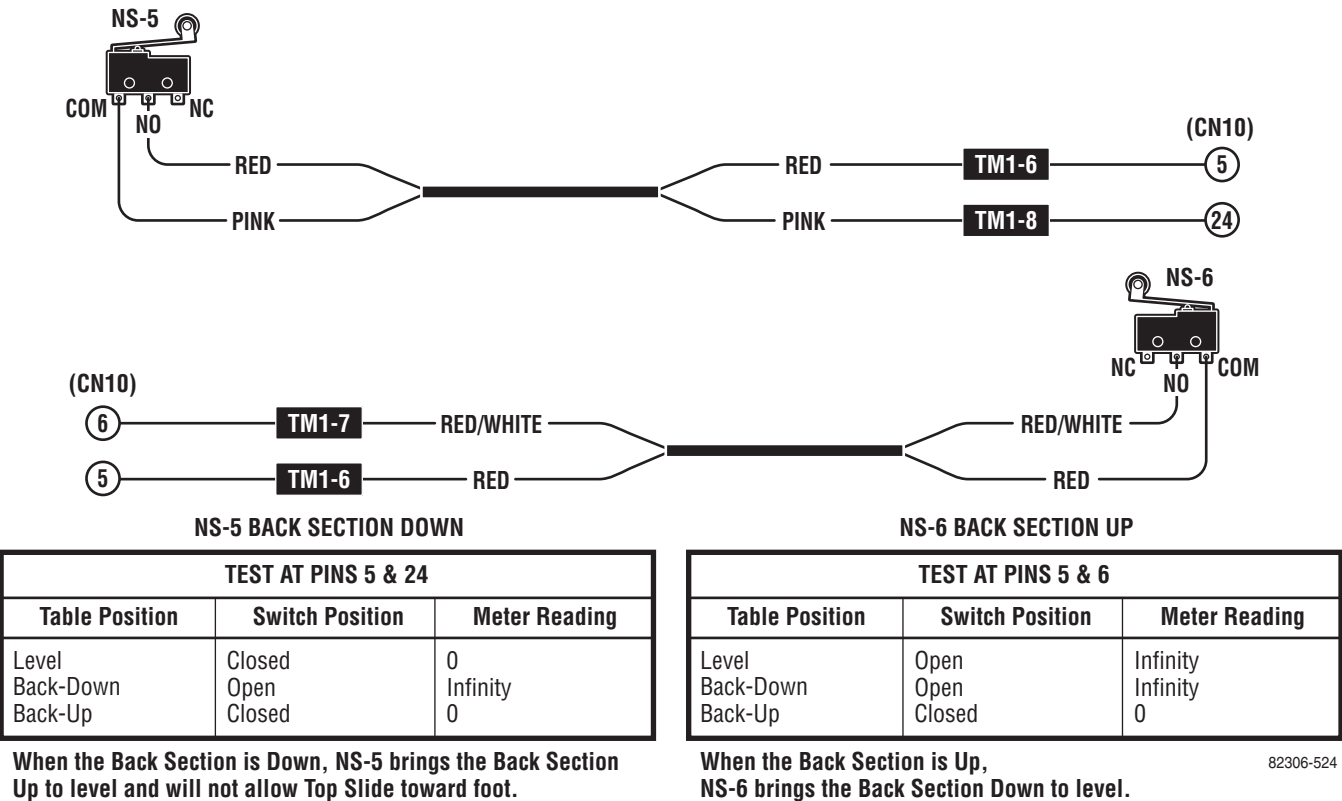


Figure 5-25. Back Section Return Switches

NOTE

When CN-10 is disconnected, Back-Down function will not operate.

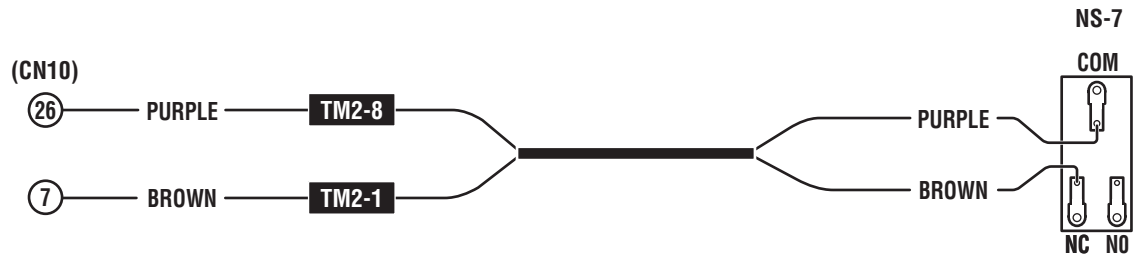


NS-7 LEG SECTION DOWN

TEST AT PINS 7 & 26		
Table Position	Switch Position	Meter Reading
Level	Open	Infinity
Leg-Down	Closed	0

When the Leg Section is Down,  
NS-7 brings the Leg Section Up to level.

82306-525

Figure 5-26. Leg Section Return Switch

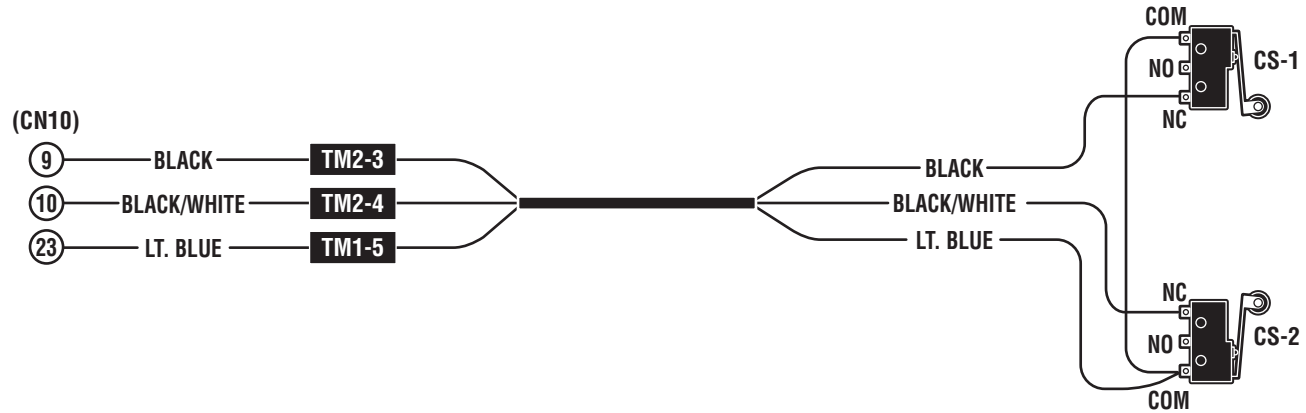

CS-1 BACK-DOWN INHIBIT

TEST AT PINS 9 & 23		
Table Position	Switch Position	Meter Reading
Center	Closed	0
Slide HD	Closed	0
Slide FT	Open	Infinity

When Top is slid toward Foot,  
CS-1 will not allow Back Section  
to go below horizontal.

CS-2 LEG-DOWN 45° INHIBIT

TEST AT PINS 10 & 23		
Table Position	Switch Position	Meter Reading
Center	Open	Infinity
Slide HD	Closed	0
Slide FT	Open	Infinity

When Top is slid toward Head,  
CS-2 will not allow Leg Section to  
go more than 45° below horizontal.

82306-526

Figure 5-27. Leg Down / Back Down Inhibit Switches

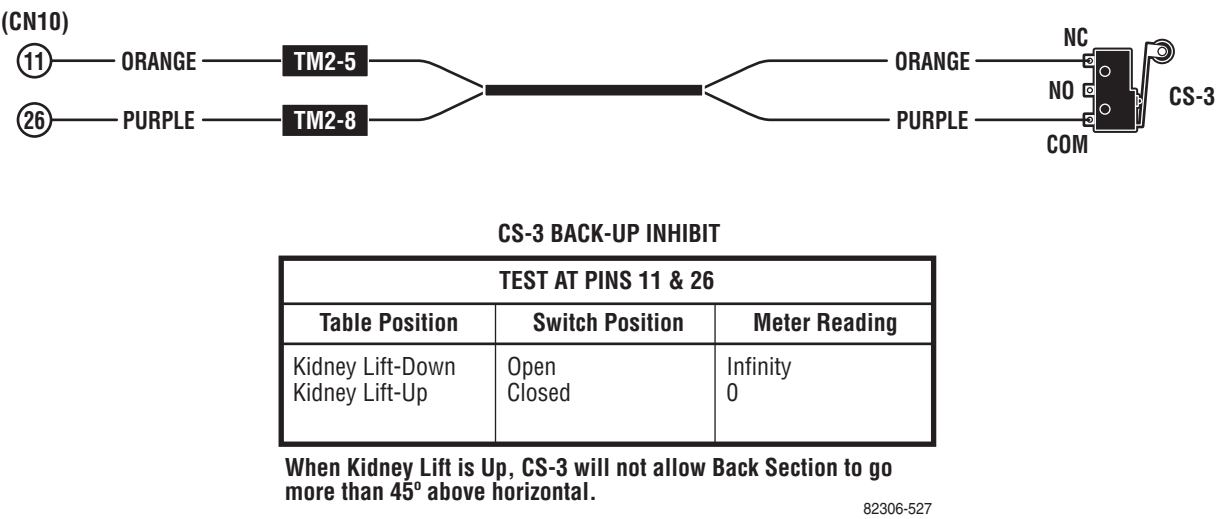


Figure 5-28. Back Up Inhibit Switches

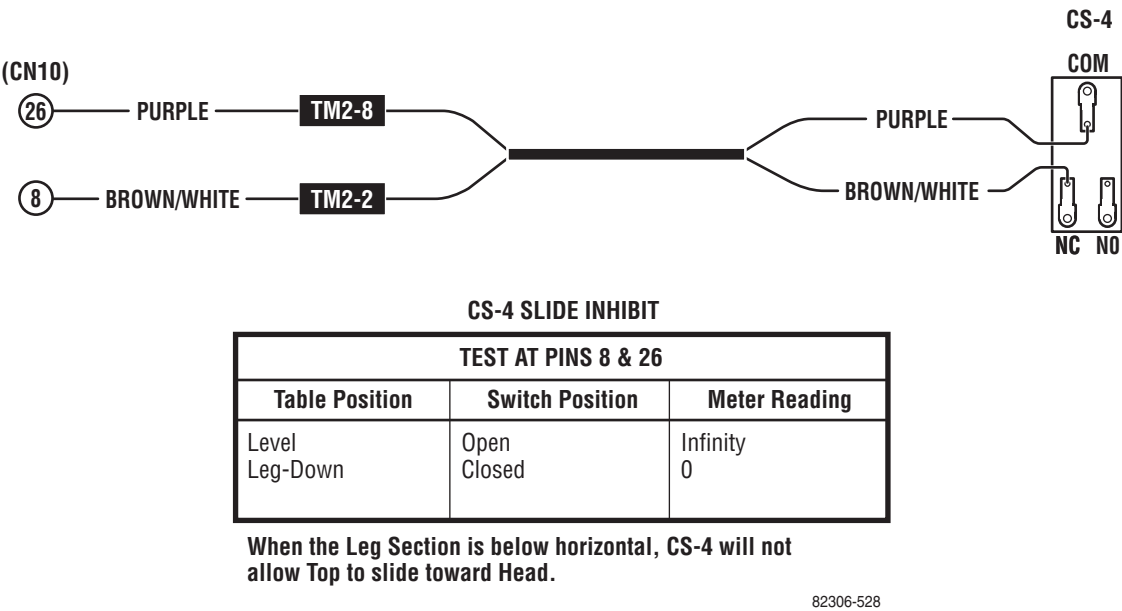


Figure 5-29. Slide to Head Inhibit Switch





**CS-5 KIDNEY LIFT INHIBIT**

TEST AT PINS 12 & 24		
Table Position	Switch Position	Meter Reading
Back-Up < 45°	Open	Infinity
Back-Up > 45°	Closed	0

When the Back Section is more than 45° above horizontal, CS-5 will not allow Kidney Lift to operate.


82306-529

**Figure 5-30. Kidney Lift Inhibit Switch**

**b. Switch Adjustment.**

If proper readings are not obtained during test or if table does not properly return to level, check the tightness of the table top section fasteners to make sure the sections are secure and use the following procedure to adjust the switches.

1. Apply table brakes and (using a level) level the table top using the TRENDELENBURG and LATERAL-TILT function buttons on the pendant control.
2. Carefully loosen the allen bolts securing the switch bracket and adjust the switches as needed. See figure 5-31.

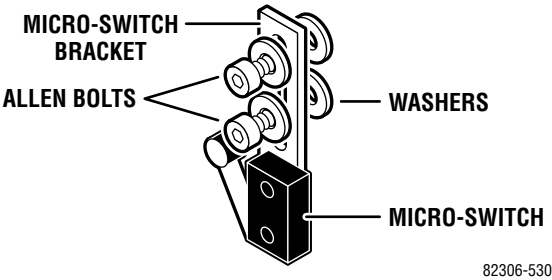

82306-530

**Figure 5-31. Micro-Switch Adjustment.**





